


SEATS LOCATION INDEX


id091300800100

FRONT SEAT


MANUAL SEAT (DRIVER-SIDE)

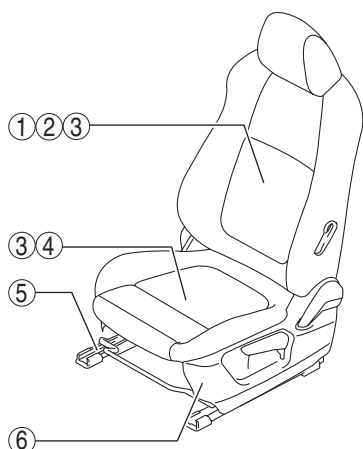


POWER SEAT (DRIVER-SIDE)

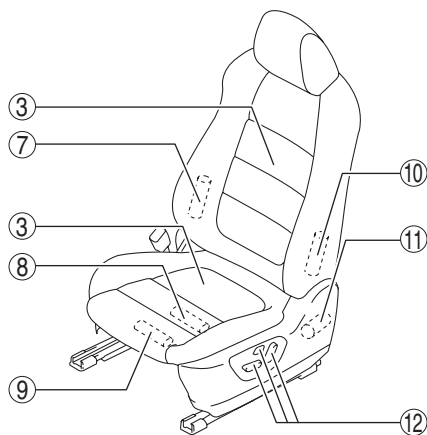


MANUAL SEAT (PASSENGER-SIDE)

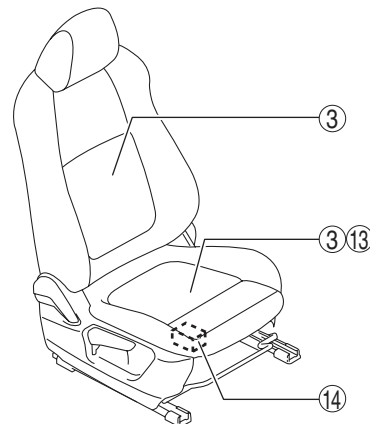

FULL-AUTO AIR CONDITIONER

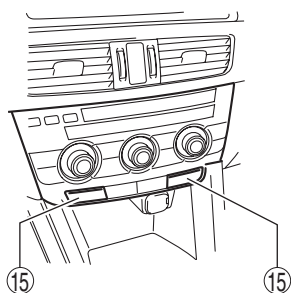

MANUAL AIR CONDITIONER

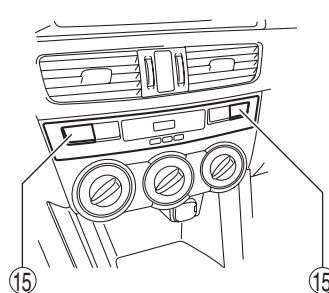


ac5wzw00005145

1	Front seat (See FRONT SEAT REMOVAL/INSTALLATION.)
2	Front seat back (See FRONT SEAT BACK COMPONENT REMOVAL/INSTALLATION.) (See FRONT SEAT BACK TRIM REMOVAL/INSTALLATION.)
3	Seat warmer unit (See SEAT WARMER UNIT INSPECTION.)
4	Front seat cushion (See FRONT SEAT CUSHION TRIM REMOVAL/INSTALLATION.) (See FRONT SEAT CUSHION FRAME REMOVAL/INSTALLATION.)
5	Front seat adjuster unit (See FRONT SEAT ADJUSTER UNIT REMOVAL/INSTALLATION.) (See FRONT SEAT RAIL GUIDE COVER REMOVAL/INSTALLATION.) (See FRONT SEAT RAIL COVER REMOVAL/INSTALLATION.)
6	Front seat side cover (See FRONT SEAT SIDE COVER REMOVAL/INSTALLATION.)
7	Recliner motor (See RECLINER MOTOR INSPECTION.)
8	Slide motor (See SLIDE MOTOR REMOVAL/INSTALLATION.) (See SLIDE MOTOR INSPECTION.)



9	Front tilt motor (See FRONT TILT MOTOR INSPECTION.)
10	Lumber support motor (See LUMBER SUPPORT MOTOR REMOVAL/INSTALLATION.) (See LUMBER SUPPORT MOTOR INSPECTION.)
11	Lift motor (See LIFT MOTOR REMOVAL/INSTALLATION.) (See LIFT MOTOR INSPECTION.)
12	Power seat switch (See POWER SEAT SWITCH REMOVAL/INSTALLATION.) (See POWER SEAT SWITCH INSPECTION.)
13	Occupancy sensor (See OCCUPANCY SENSOR INSPECTION.)
14	Seat warmer control unit (See SEAT WARMER CONTROL UNIT REMOVAL/INSTALLATION.) (See SEAT WARMER CONTROL UNIT INSPECTION.)
15	Seat warmer switch (See SEAT WARMER SWITCH REMOVAL/INSTALLATION.)

REAR SEAT

6:4 SPLIT TYPE

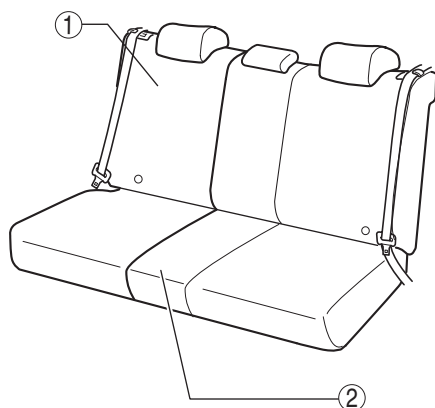

4:2:4 SPLIT TYPE

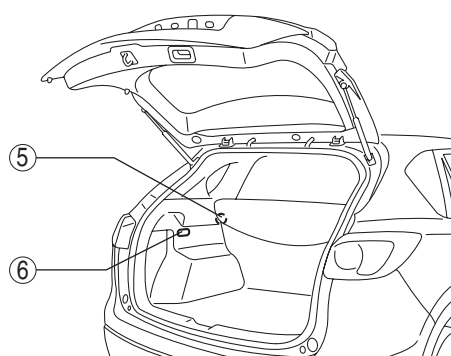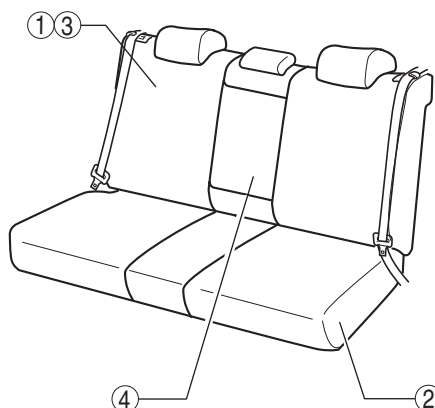

ac5wzw00005146

1	Rear seat back (See REAR SEAT BACK REMOVAL/ INSTALLATION.) (See REAR SEAT BACK FRAME REMOVAL/ INSTALLATION.) (See REAR SEAT BACK TRIM REMOVAL/ INSTALLATION.)
2	Rear seat cushion (See REAR SEAT CUSHION REMOVAL/ INSTALLATION.) (See REAR SEAT CUSHION TRIM REMOVAL/ INSTALLATION.)
3	Rear seat (See REAR SEAT REMOVAL/INSTALLATION.)
4	Rear seat center armrest (See REAR SEAT CENTER ARMREST REMOVAL/ INSTALLATION.)
5	Rear seat back striker (See REAR SEAT BACK STRIKER REMOVAL/ INSTALLATION.)
6	Remote handle lever (See REMOTE HANDLE LEVER REMOVAL/ INSTALLATION.)