


MANUAL TRANSAXLE LOCATION INDEX [C66M-R, C66MX-R]

id0515ma159400

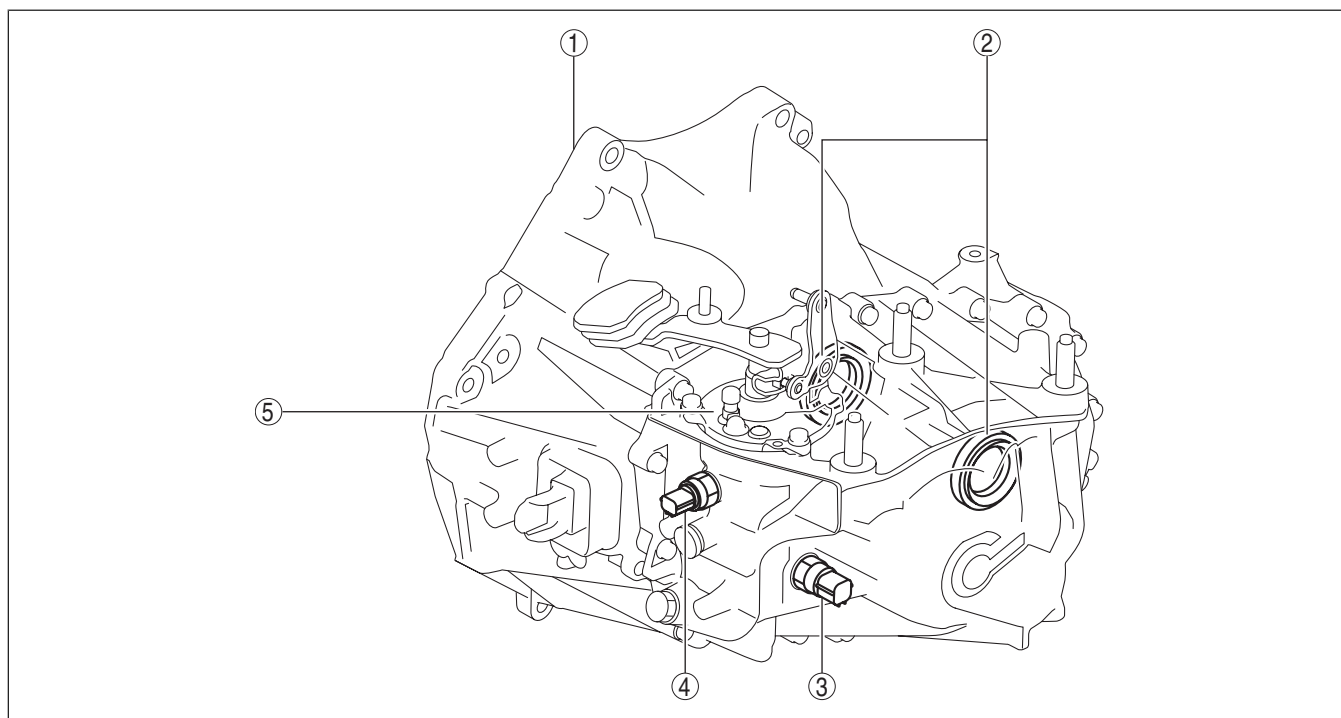

ac5wzw00005940

1	Manual transaxle (See MANUAL TRANSAXLE OIL INSPECTION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE OIL REPLACEMENT [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE REMOVAL/INSTALLATION [C66M-R].) (See MANUAL TRANSAXLE REMOVAL/INSTALLATION [C66MX-R].)
2	Oil seal (differential) (See OIL SEAL (DIFFERENTIAL) REPLACEMENT [C66M-R, C66MX-R].)

3	Back-up light switch (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
4	Neutral switch (See NEUTRAL SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
5	Shift control module (See SHIFT CONTROL MODULE REMOVAL/INSTALLATION [C66M-R, C66MX-R].)