


FRONT FOG LIGHT BULB REMOVAL/INSTALLATION


id091800802300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the mudguard screws.

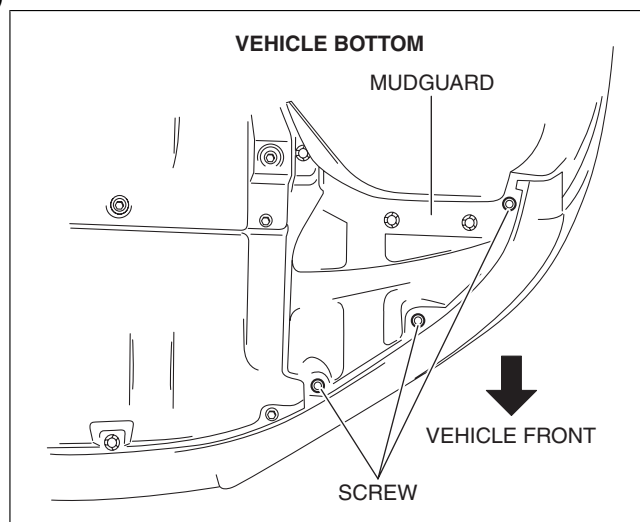

ac5wzw00000438

3. Disconnect the connector.

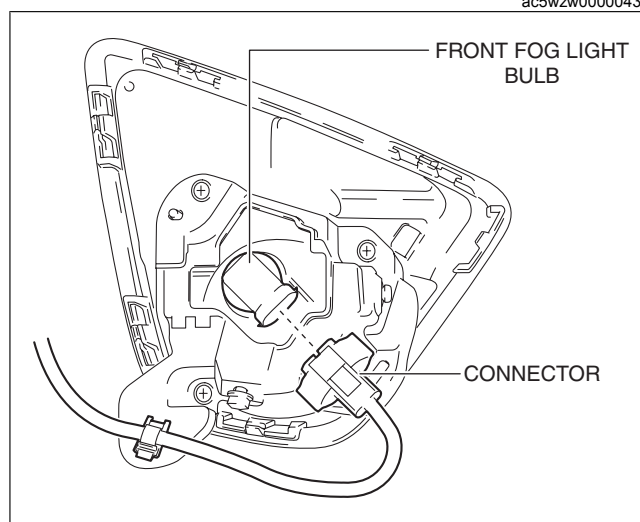


ac5wzw00000439

4. Rotate the front fog light bulb in the direction of the arrow (1) shown in the figure and remove it from the front fog light in the direction of the arrow (2) shown in the figure.

Caution

- A halogen bulb generates extremely high heat when it is illuminated. If the surface of the bulb is soiled, excessive heat will build up and the life of the bulb will be shortened. When replacing the bulb, hold the metal flange, not the glass.

5. Install in the reverse order of removal.

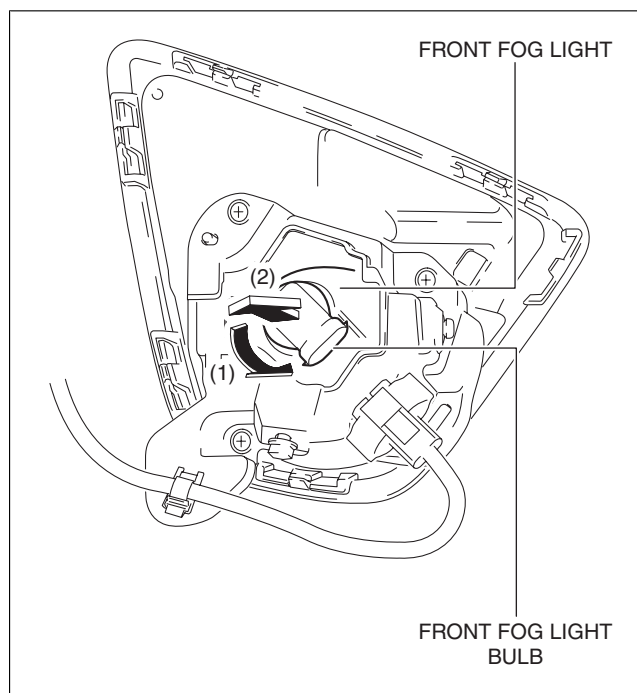

ac5wzw00000165