


SOLAR RADIATION SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER]

id0740a1802900

1. Shine a fluorescent light or expose the solar radiation sensor to natural sunlight.
2. Connect the positive (+) lead to terminal B, C and negative (-) lead to terminal A of the solar radiation sensor, and verify that the voltage value is output.
 - If the voltage is **0 V**, replace the solar radiation sensor.

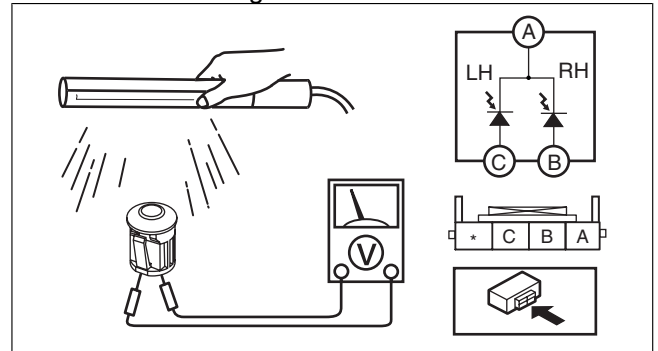

am3zzw00011021