


CLUTCH LOCATION INDEX [C66M-R, C66MX-R]

id0510mc156300

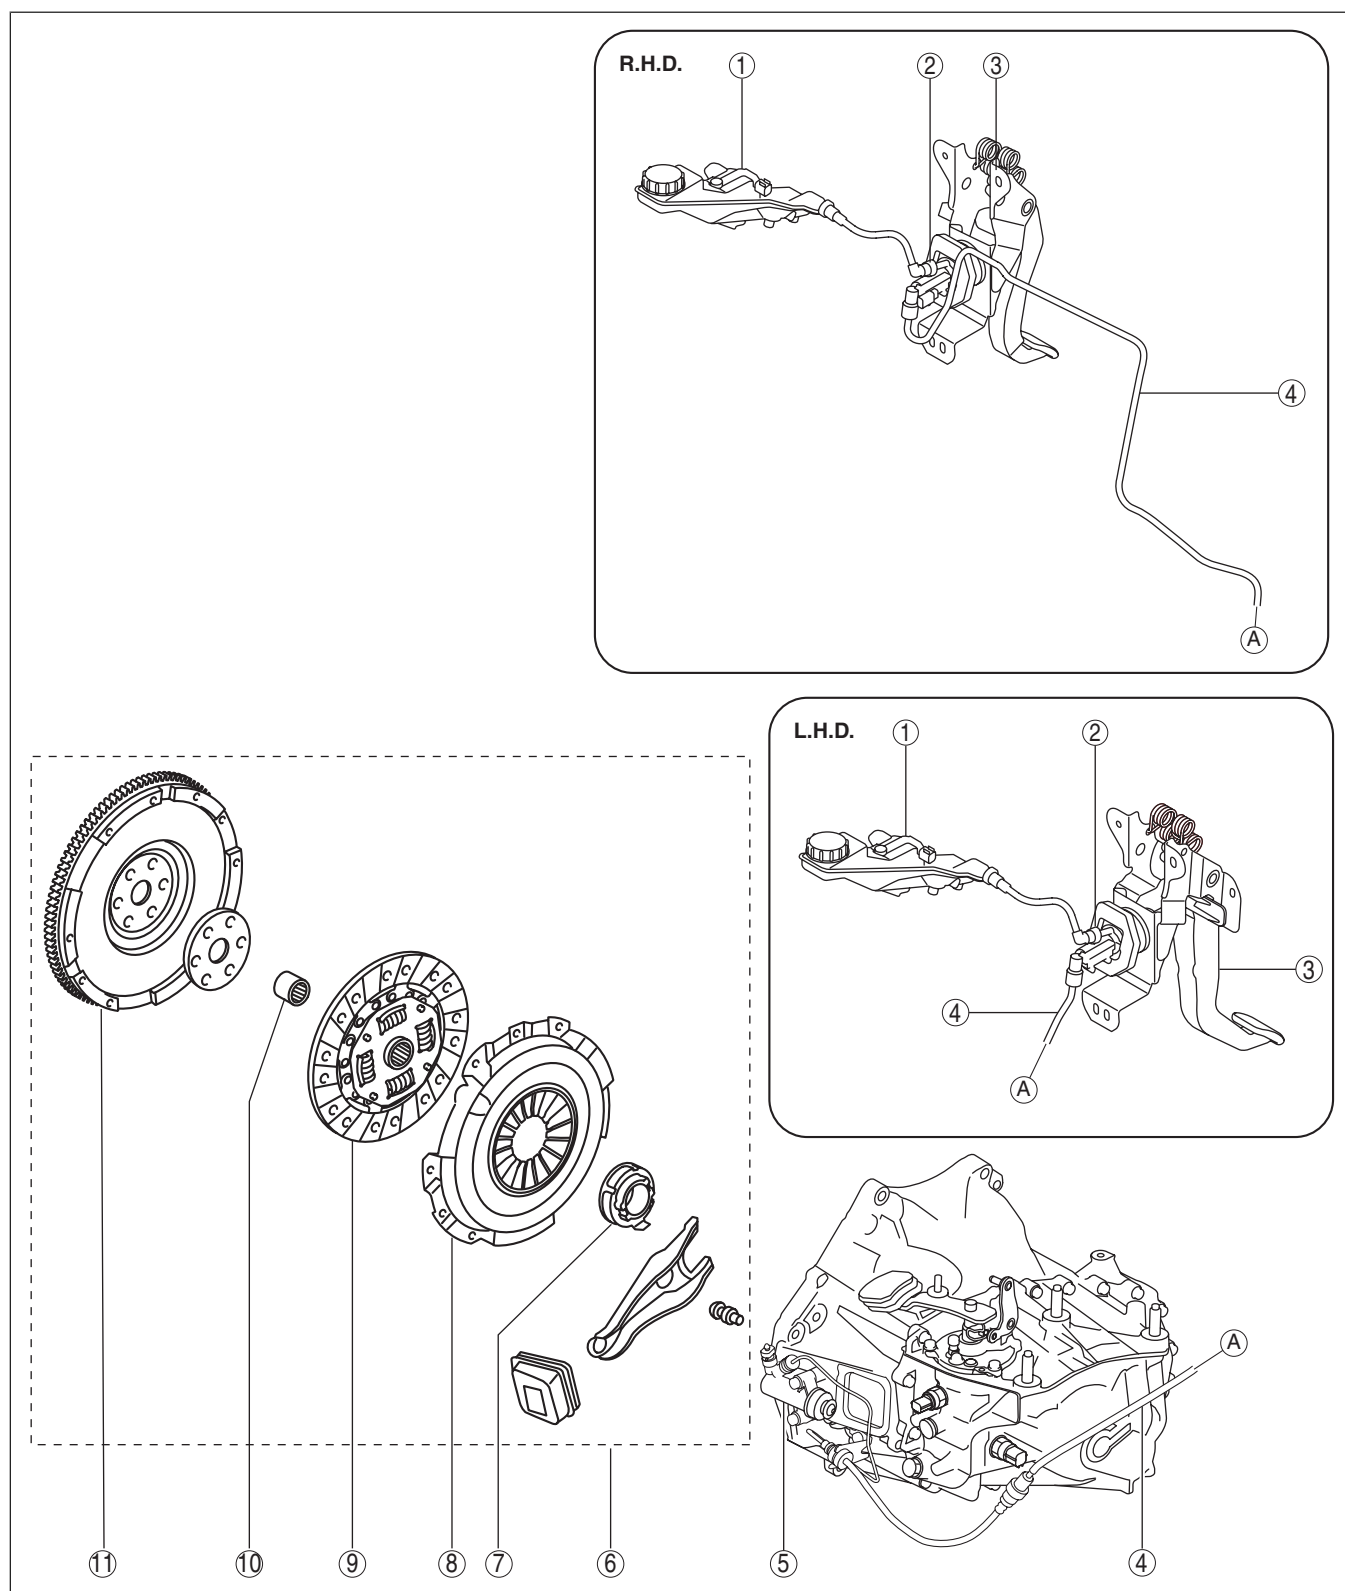

ac5wzw00002454

1	Reserve tank (See CLUTCH FLUID INSPECTION [C66M-R, C66MX-R].) (See CLUTCH FLUID REPLACEMENT/AIR BLEEDING [C66M-R, C66MX-R].)
2	Clutch master cylinder (See CLUTCH MASTER CYLINDER REMOVAL/INSTALLATION [C66M-R, C66MX-R].)

3	Clutch pedal (See CLUTCH PEDAL INSPECTION [C66M-R, C66MX-R].) (See CLUTCH PEDAL REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See STARTER INTERLOCK SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
4	Clutch pipe and hose (See CLUTCH FLUID LEAKAGE INSPECTION [C66M-R, C66MX-R].) (See CLUTCH PIPE AND HOSE REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
5	Clutch release cylinder (See CLUTCH RELEASE CYLINDER REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
6	Clutch unit (See CLUTCH UNIT REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
7	Clutch release collar (See CLUTCH UNIT REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See CLUTCH RELEASE COLLAR INSPECTION [C66M-R, C66MX-R].)

8	Clutch cover (See CLUTCH UNIT REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See CLUTCH COVER INSPECTION [C66M-R, C66MX-R].)
9	Clutch disc (See CLUTCH UNIT REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See CLUTCH DISC INSPECTION [C66M-R, C66MX-R].)
10	Pilot bearing (See CLUTCH UNIT REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See PILOT BEARING INSPECTION [C66M-R, C66MX-R].)
11	Flywheel (See CLUTCH UNIT REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See FLYWHEEL INSPECTION [C66M-R, C66MX-R].)