

## AIR FUEL RATIO (A/F) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 2.0]


id0140f4899700

### Warning

- A hot engine and exhaust system can cause severe burns. Turn off the engine and wait until they are cool before removing the exhaust system.


### Caution

- Do not allow flammable objects such as the taping for bundling wiring harness to come into contact with the exhaust manifold and silencer.

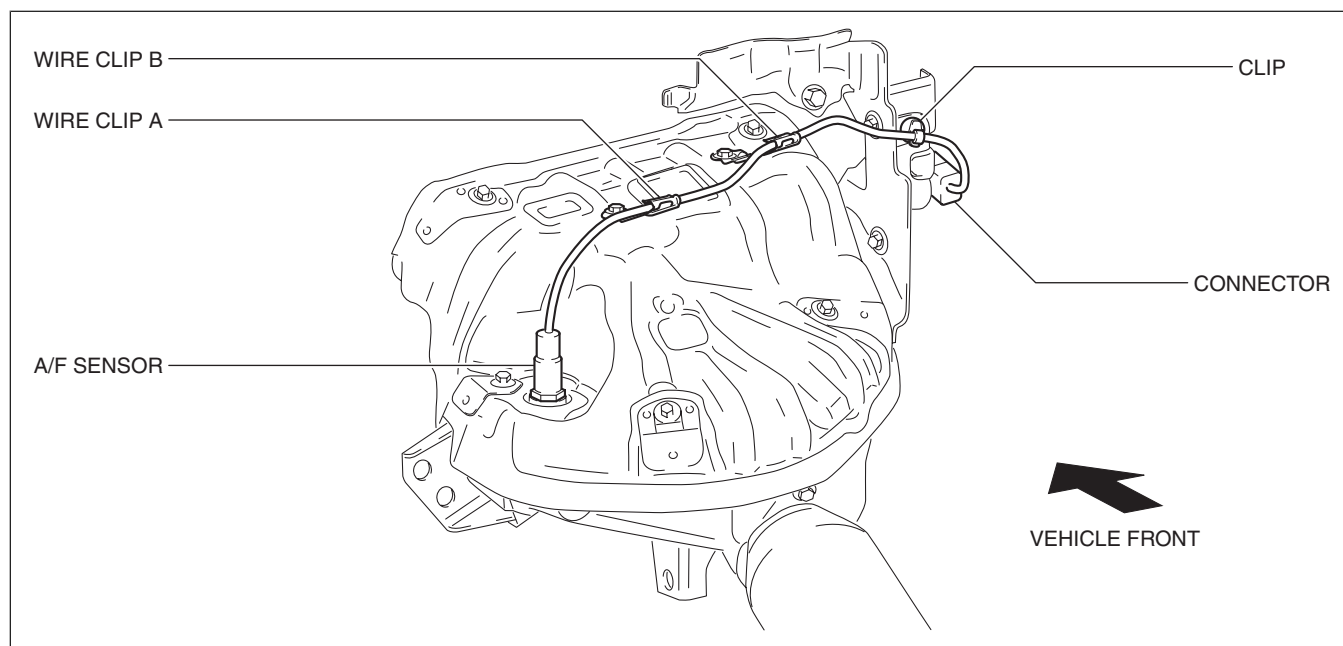


ac5wzw00000298

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0 (WITHOUT i-stop)].)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 2.0].)
3. Disconnect the A/F sensor connector.
4. Remove the clip from the heat insulator.

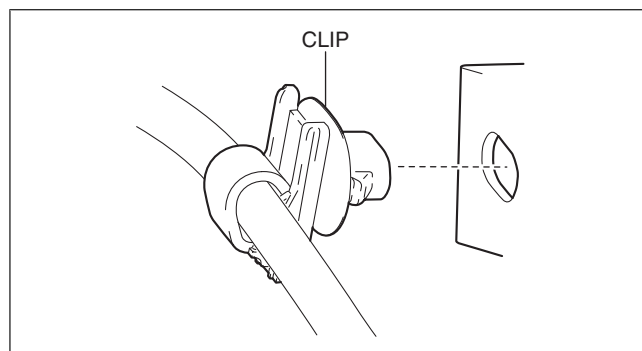


ac5wzw00000299

5. Remove the wiring harness from the wire clip A and B. (See Assembly of Wiring Harness to Wire Clip Note.)

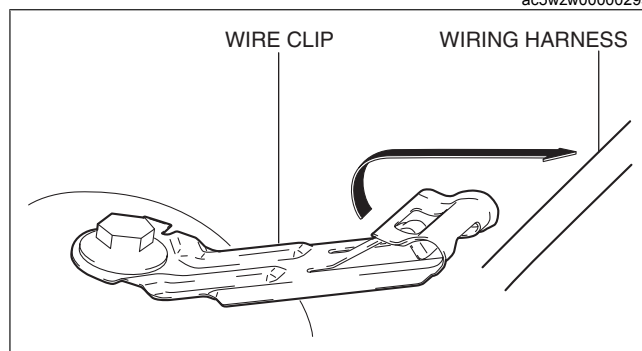

ac5wzw00000300


6. Remove the A/F sensor using the **SST**.
7. Install in the reverse order of removal.

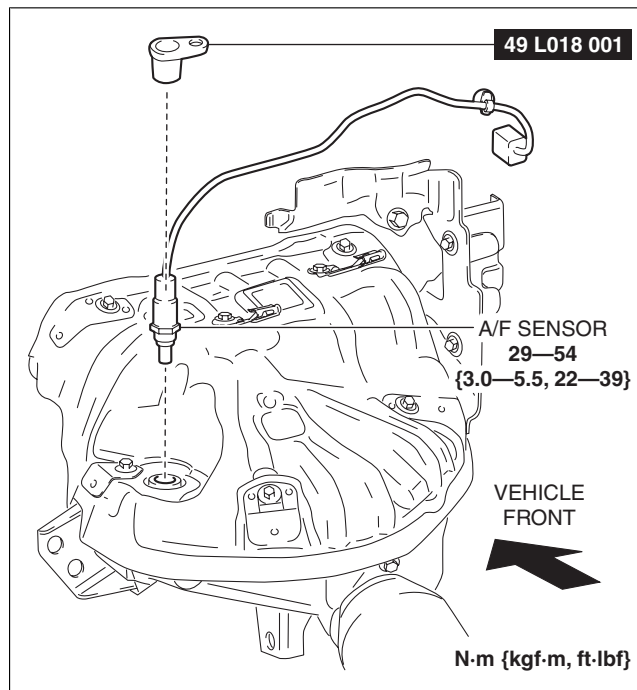

ac5wzw00003986


#### Assembly of Wiring Harness to Wire Clip Note

- Secure the heat shrinkable tube on the wiring harness to wire clip A.

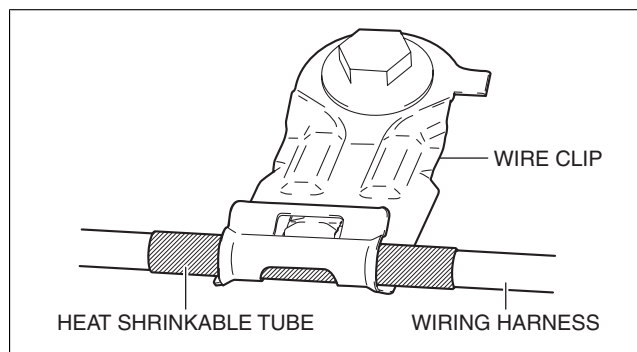

ac5wzw00000366

- Secure the band on the wiring harness so that the band is positioned on both sides of wire clip B.

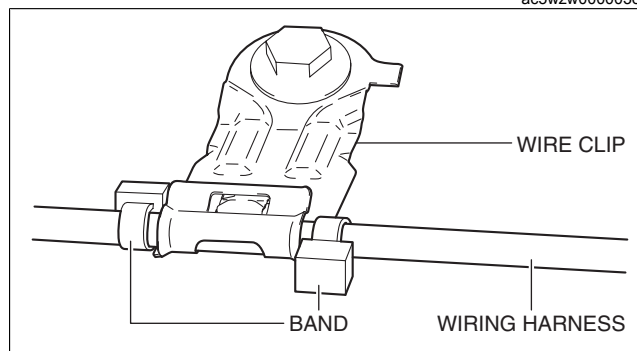

ac5wzw00000367