


BRAKE/TAILLIGHT BULB REMOVAL/INSTALLATION


id091800813900

1. Disconnect the negative battery cable. (See **NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION** [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See **NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION** [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See **NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION** [SKYACTIV-D 2.2].)
2. Insert a tape-wrapped flathead screwdriver into the service hole in the position shown in the figure.

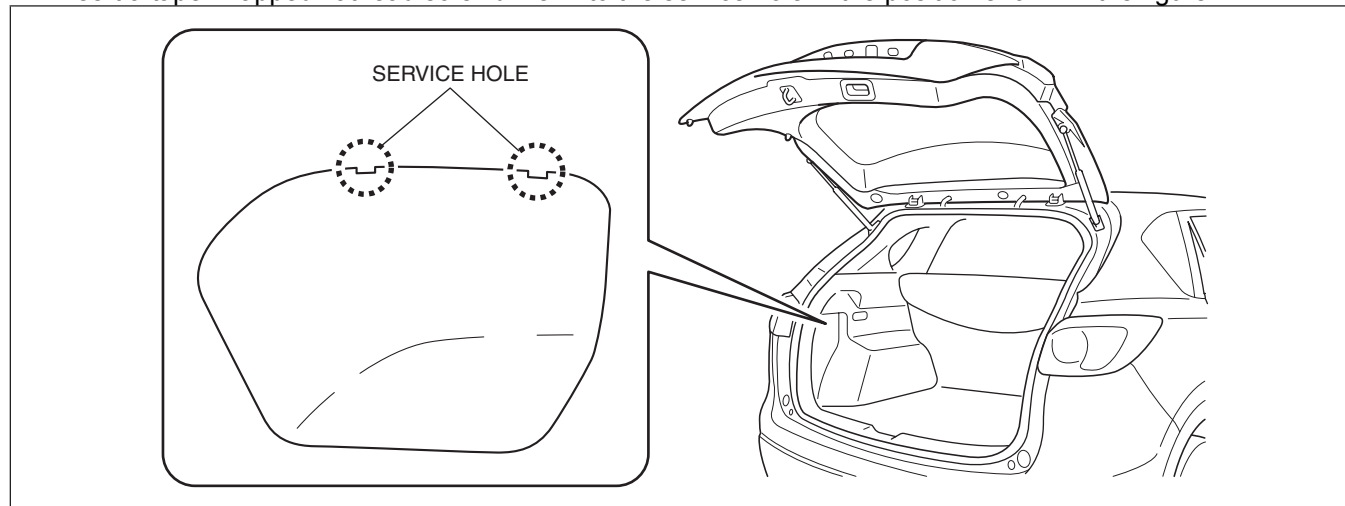


ac5wzw00000498

3. Move the flathead screwdriver in the direction of the arrow (1) shown in the figure, pull out the service hole cover, and detach the service hole cover tab and trunk side trim.

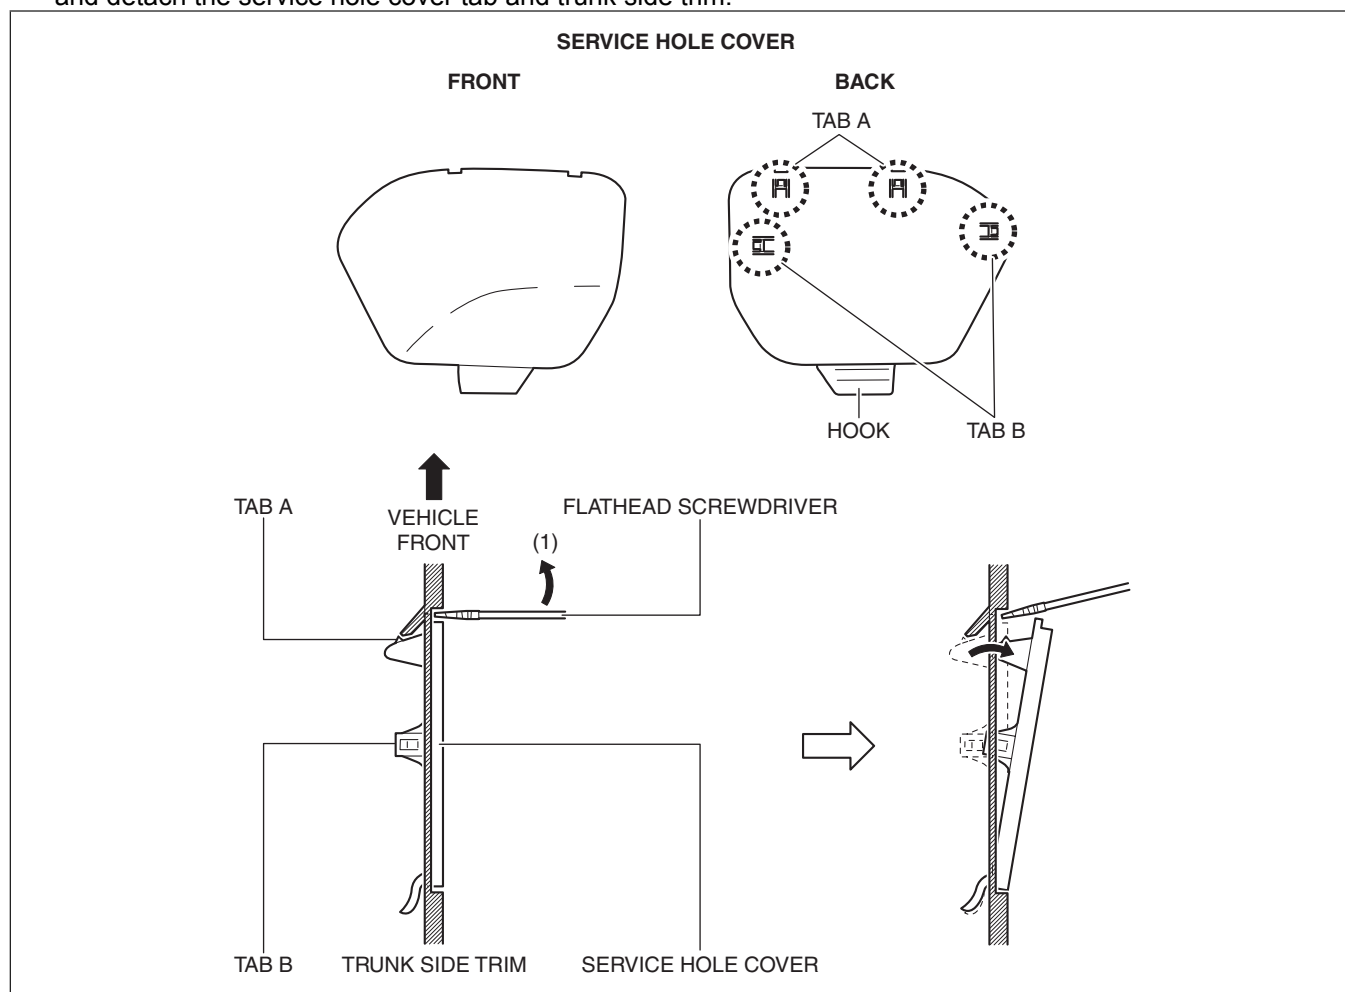


ac5wzw00003013

4. Pull out the service hole cover in the direction of the arrow (2) shown in the figure and pull out the service hole cover hook from the trunk side trim.
5. Remove the service hole cover.

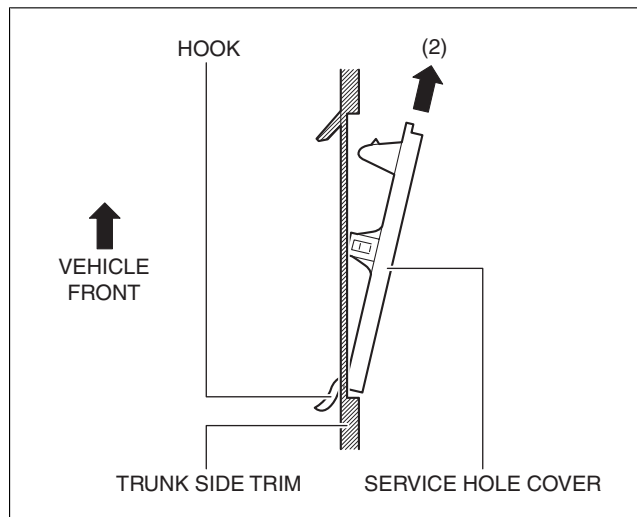


ac5wzw00003014

6. Rotate the socket in the direction of the arrow (3) shown in the figure and remove it from the rear combination light in the direction of the arrow (4) shown in the figure.

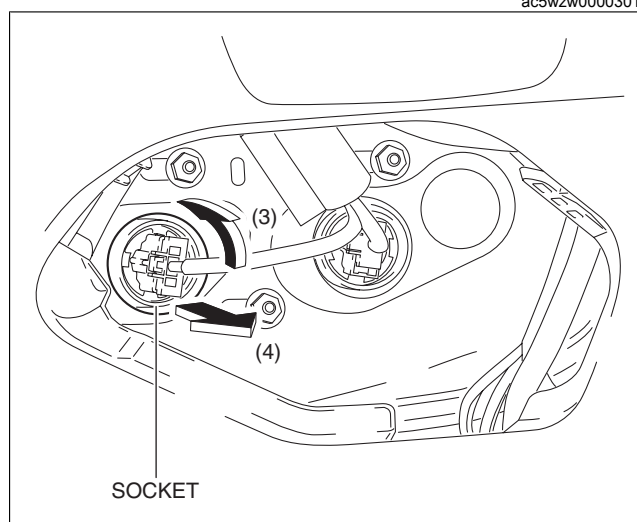

ac5wzw00000067

7. Remove the brake/taillight bulb.
8. Install in the reverse order of removal.

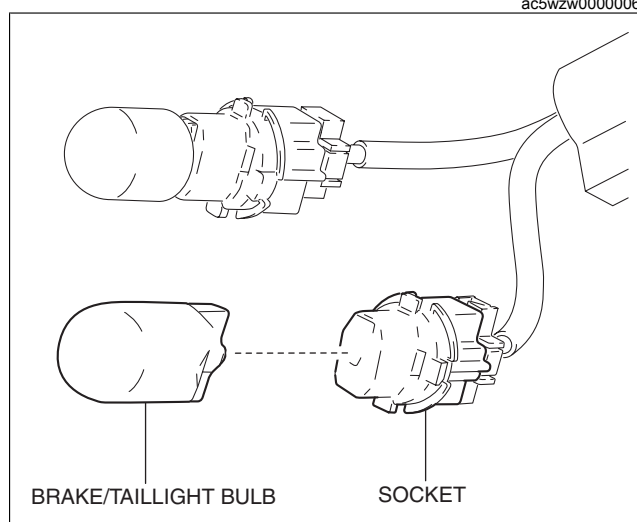

ac5wzw00000068