


# FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION

id041500800300

1. Remove the mudguard. (See MUDGUARD REMOVAL/INSTALLATION.)
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.
4. After installation, verify that there is no twisting in the front ABS wheel-speed sensor.

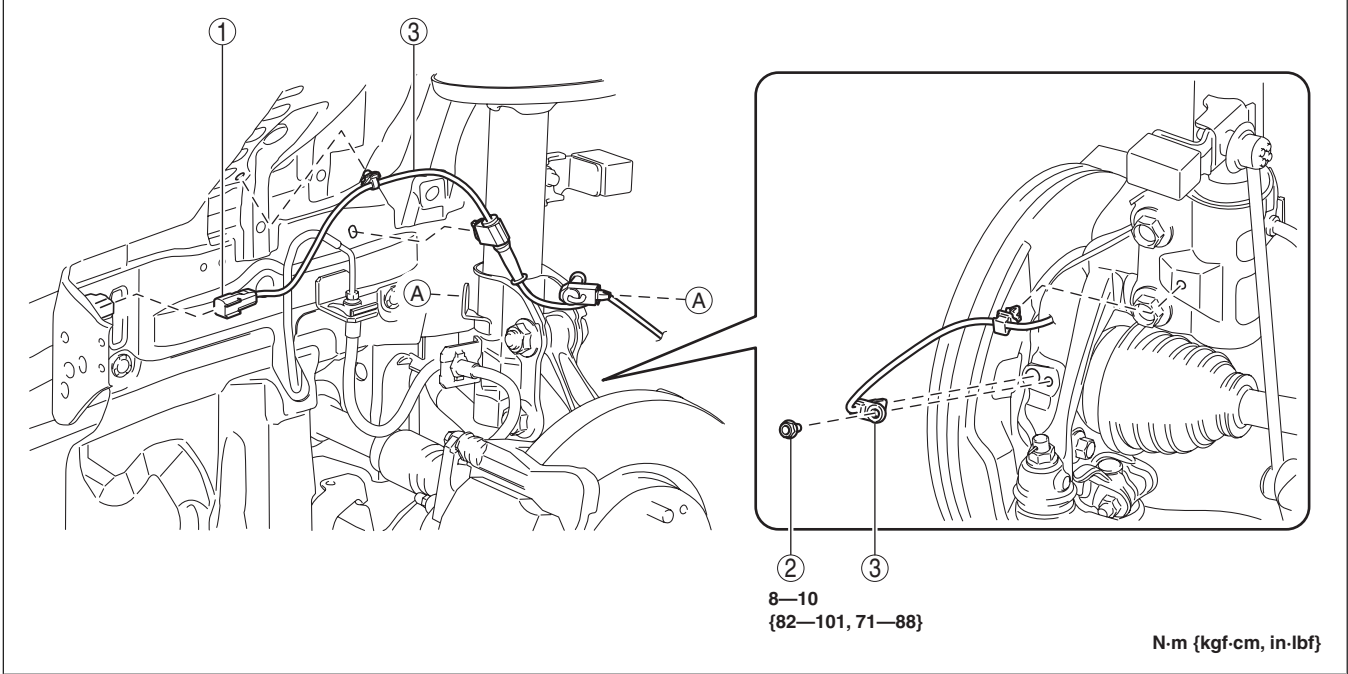

ac5wzw00000227

1	Connector
2	Bolt

3	Front ABS wheel-speed sensor
---	------------------------------