

AFS OFF INDICATOR LIGHT

id091800014000

Purpose


- The AFS OFF indicator light notifies the user that the AFS is stopped or a malfunction occurs in the AFS.

Function

- The AFS OFF indicator light illuminates when the AFS is stopped and flashes when a malfunction occurs in the AFS.
- When the microcomputer in the instrument cluster receives a AFS OFF indicator light illumination request, it controls the illumination and flashing of the AFS OFF indicator light based on the received illumination request.

Construction

- Displayed in the instrument cluster.

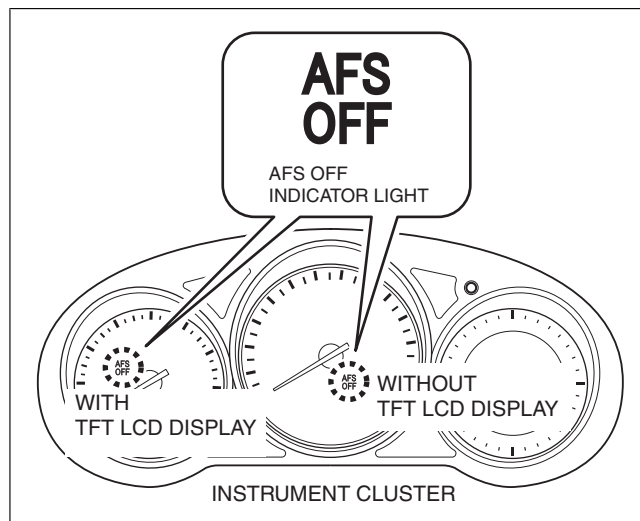

ac5wzn00002055

Operation

Note

- When the ignition is switched ON, the AFS control module illuminates the AFS OFF indicator light for 3 s to check the light bulb and notifies that the AFS OFF indicator light bulb is normal.
1. The AFS control module sends a AFS OFF indicator light illumination/flash request signal to the instrument cluster when a malfunction occurs in the AFS or the AFS is stopped.
 2. The instrument cluster illuminates/flashes the AFS OFF indicator light based on the AFS OFF indicator light illumination/flash request signal.

Fail-safe

- Function not equipped.