


LIFTGATE OPENER SWITCH INSPECTION

id091400516200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
 - (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
 - (4) Liftgate garnish (See LIFTGATE GARNISH REMOVAL/INSTALLATION.)
 - (5) Liftgate opener switch (See LIFTGATE OPENER SWITCH REMOVAL/INSTALLATION.)
3. Verify the continuity of liftgate opener switch terminals B and C.

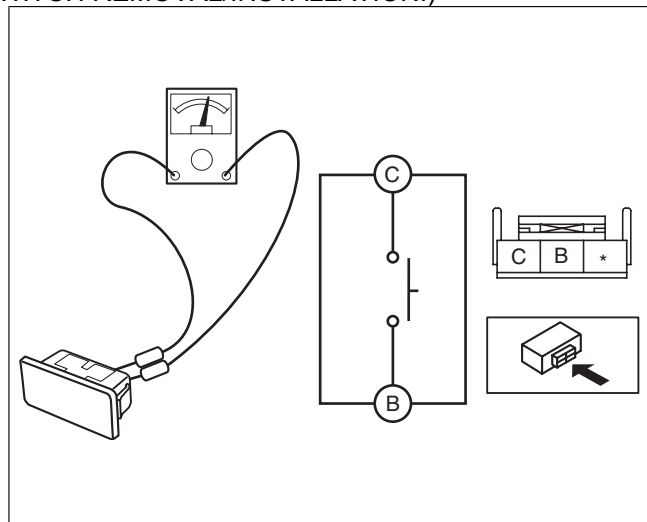

ac5wzw00002763

- If not as indicated in the table, replace the liftgate opener switch.

○—○: CONTINUITY		
SWITCH POSITION	TERMINAL	
	B	C
ON (PUSH)	○—○	○—○
OFF (RELEASE)		

ac5jjw00000229