


CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [D66M-R, D66MX-R]


id0510mf160000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Disconnect the clutch pedal position switch connector.
3. Rotate the clutch pedal position switch 45° counterclockwise.

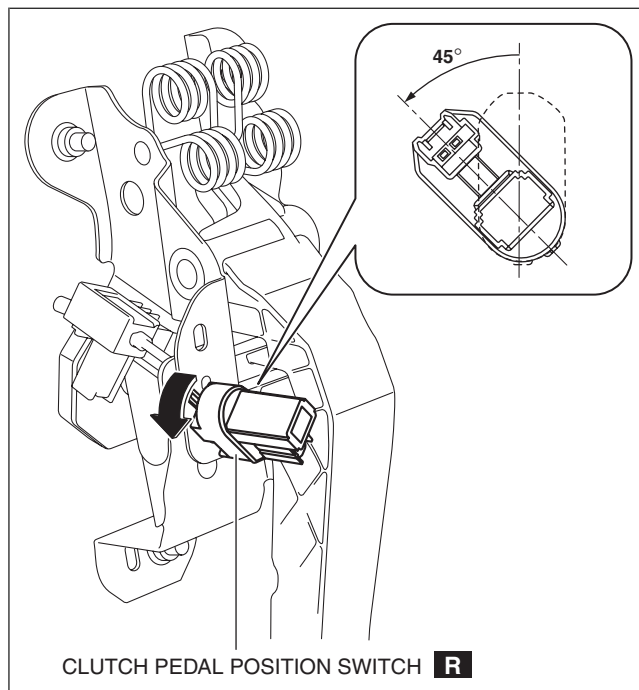


ac5wzw00005153

4. Remove the clutch pedal position switch from the clutch pedal.
5. Insert a new clutch pedal position switch into the clutch pedal hole until the switch stops.

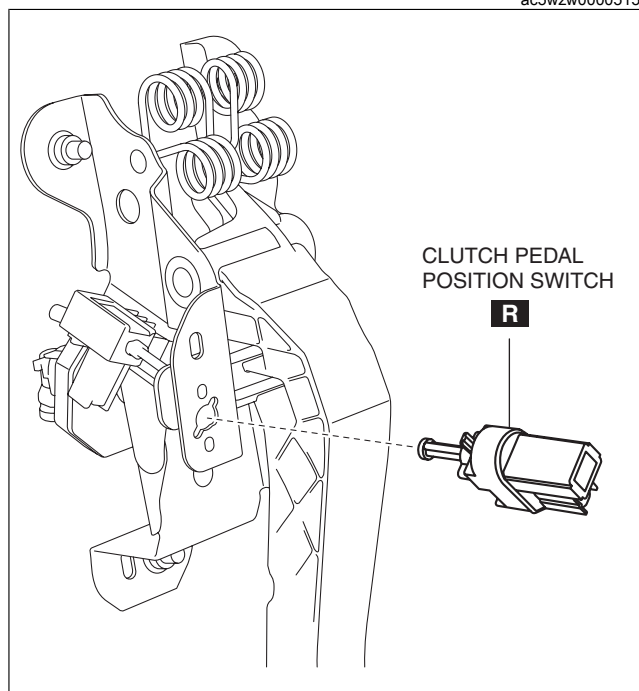

ac5uuw00000723

6. Rotate the clutch pedal position switch 45° clockwise.
7. Verify that the clutch pedal position switch is locked securely.
8. Connect the clutch pedal position switch connector.
9. Connect the negative battery cable. (See **NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].**)

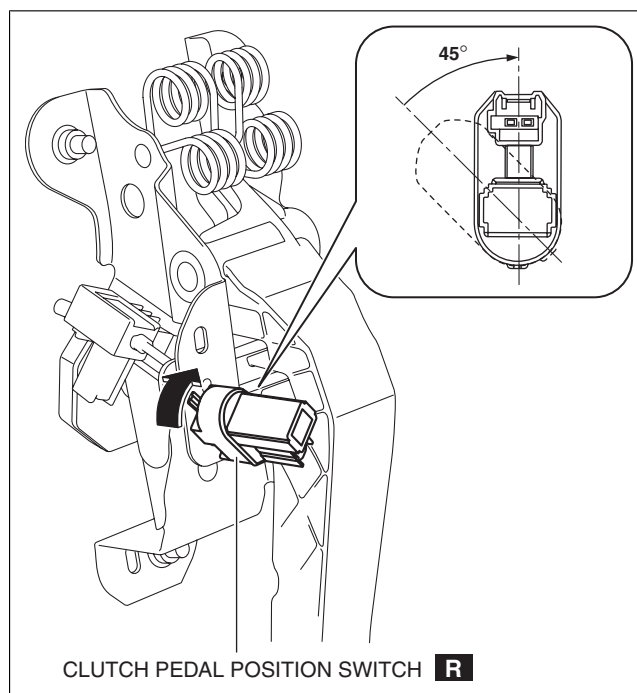

ac5wzw00005154