


INSTRUMENTATION/DRIVER INFO. LOCATION INDEX

id092200010200

Interior

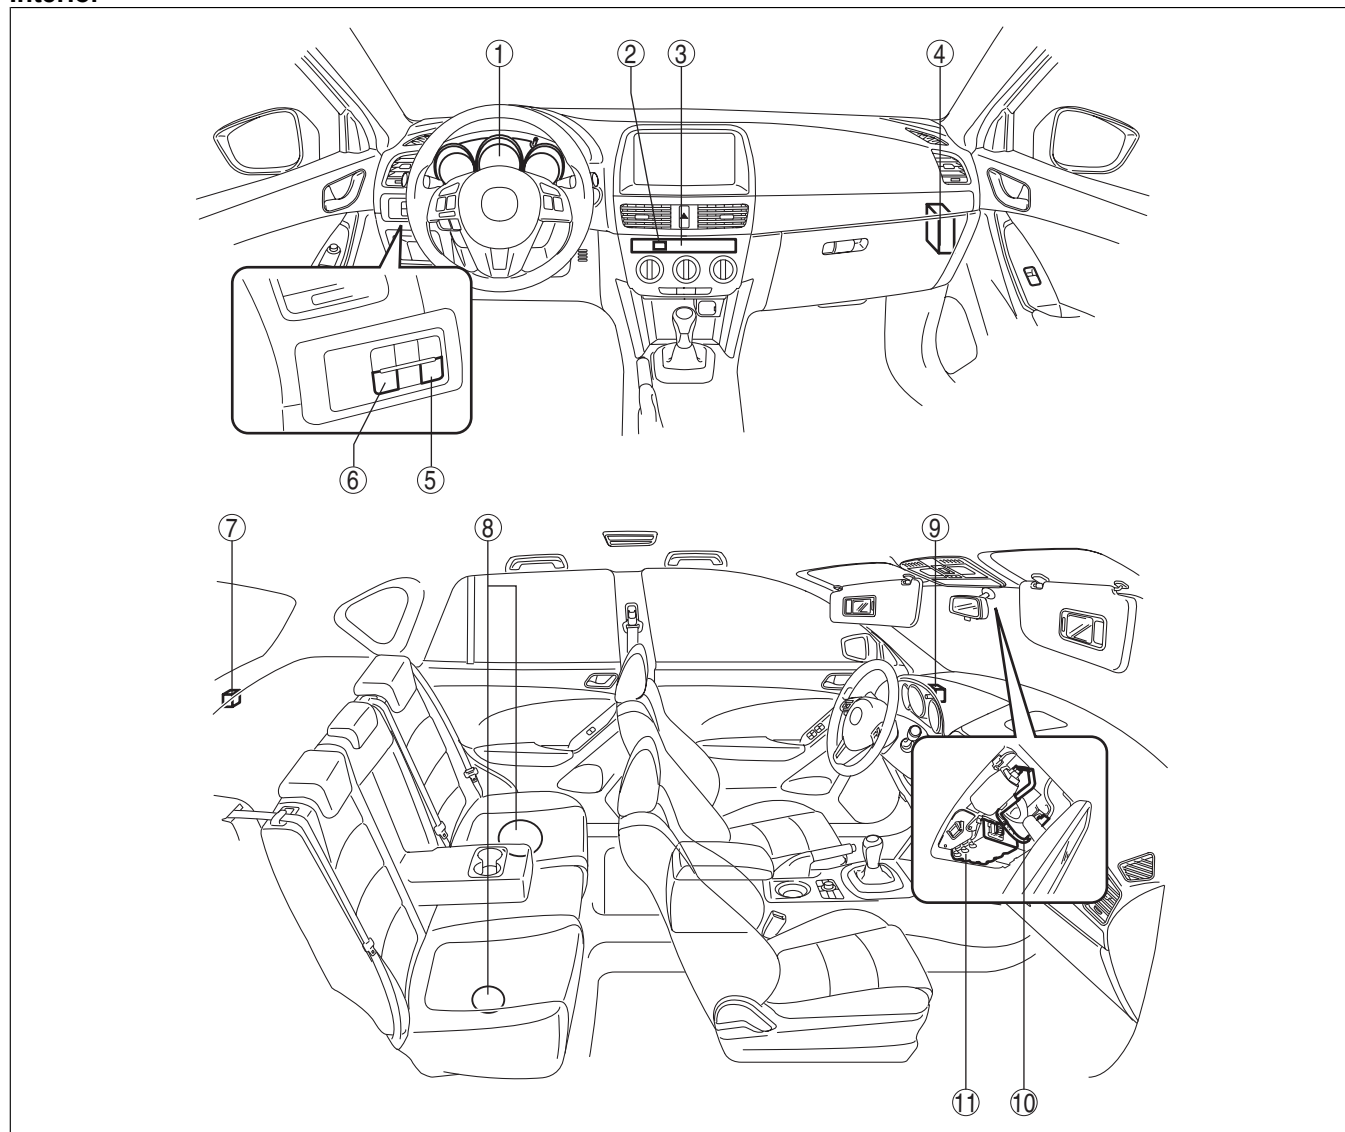


ac5wzw00001365

<p>1 Instrument cluster (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.) (See INSTRUMENT CLUSTER DISASSEMBLY/ASSEMBLY.) (See INSTRUMENT CLUSTER INSPECTION.) (See INSTRUMENT CLUSTER CONFIGURATION (USING READ/WRITE FUNCTION).) (See INSTRUMENT CLUSTER CONFIGURATION (USING AS-BUILT DATA).) (See INSTRUMENT CLUSTER PERSONALIZATION FEATURES SETTING PROCEDURE.) (See INSTRUMENT CLUSTER DATA RESET PROCEDURE.)</p>	<p>3 Clock (See CLOCK REMOVAL/INSTALLATION.) (See CLOCK INSPECTION.) (See CLOCK INPUT/OUTPUT CHECK MODE.)</p> <p>4 Parking sensor control module (with parking sensor system) (See PARKING SENSOR CONTROL MODULE REMOVAL/INSTALLATION.) (See PARKING SENSOR CONTROL MODULE INSPECTION.)</p> <p>5 LDWS switch (with lane departure warning system (LDWS)) (See LDWS SWITCH REMOVAL/INSTALLATION.) (See LDWS SWITCH INSPECTION.)</p>
<p>2 Parking sensor switch/indicator (with parking sensor system) (See PARKING SENSOR SWITCH/INDICATOR REMOVAL/INSTALLATION.) (See PARKING SENSOR SWITCH/INDICATOR INSPECTION.)</p>	

6	RVM switch (with rear vehicle monitoring (RVM) system) (See RVM SWITCH REMOVAL/INSTALLATION.) (See RVM SWITCH INSPECTION.)
	BSM OFF switch (with blind spot monitoring (BSM) system) (See BLIND SPOT MONITORING (BSM) OFF SWITCH REMOVAL/INSTALLATION.) (See BLIND SPOT MONITORING (BSM) OFF SWITCH INSPECTION.)
7	Rear parking sensor buzzer (with parking sensor system) (See REAR PARKING SENSOR BUZZER REMOVAL/INSTALLATION.) (See REAR PARKING SENSOR BUZZER INSPECTION.)
8	Fuel gauge sender unit (See FUEL GAUGE SENDER UNIT REMOVAL/INSTALLATION [2WD].) (See FUEL GAUGE SENDER UNIT REMOVAL/INSTALLATION [4WD].) (See FUEL GAUGE SENDER UNIT INSPECTION [2WD].) (See FUEL GAUGE SENDER UNIT INSPECTION [4WD].)
9	Front parking sensor buzzer (with parking sensor system) (See FRONT PARKING SENSOR BUZZER REMOVAL/INSTALLATION.) (See REAR PARKING SENSOR BUZZER INSPECTION.)

10	Forward sensing camera (FSC) short-cord (with lane departure warning system (LDWS)) (See FORWARD SENSING CAMERA (FSC) SHORT-CORD REMOVAL/INSTALLATION.) (See FORWARD SENSING CAMERA (FSC) SHORT-CORD INSPECTION.)
11	Forward sensing camera (FSC) (with lane departure warning system (LDWS)) (See FORWARD SENSING CAMERA (FSC) REMOVAL/INSTALLATION.) (See FORWARD SENSING CAMERA (FSC) CLIP REMOVAL/INSTALLATION.) (See FORWARD SENSING CAMERA (FSC) COVER REMOVAL/INSTALLATION.) (See FORWARD SENSING CAMERA (FSC) AIMING.) (See FORWARD SENSING CAMERA (FSC) CONFIGURATION (USING READ/WRITE FUNCTION).) (See FORWARD SENSING CAMERA (FSC) CONFIGURATION (USING AS-BUILT DATA).) (See FORWARD SENSING CAMERA (FSC) PERSONALIZATION FEATURES SETTING PROCEDURE.)

Exterior

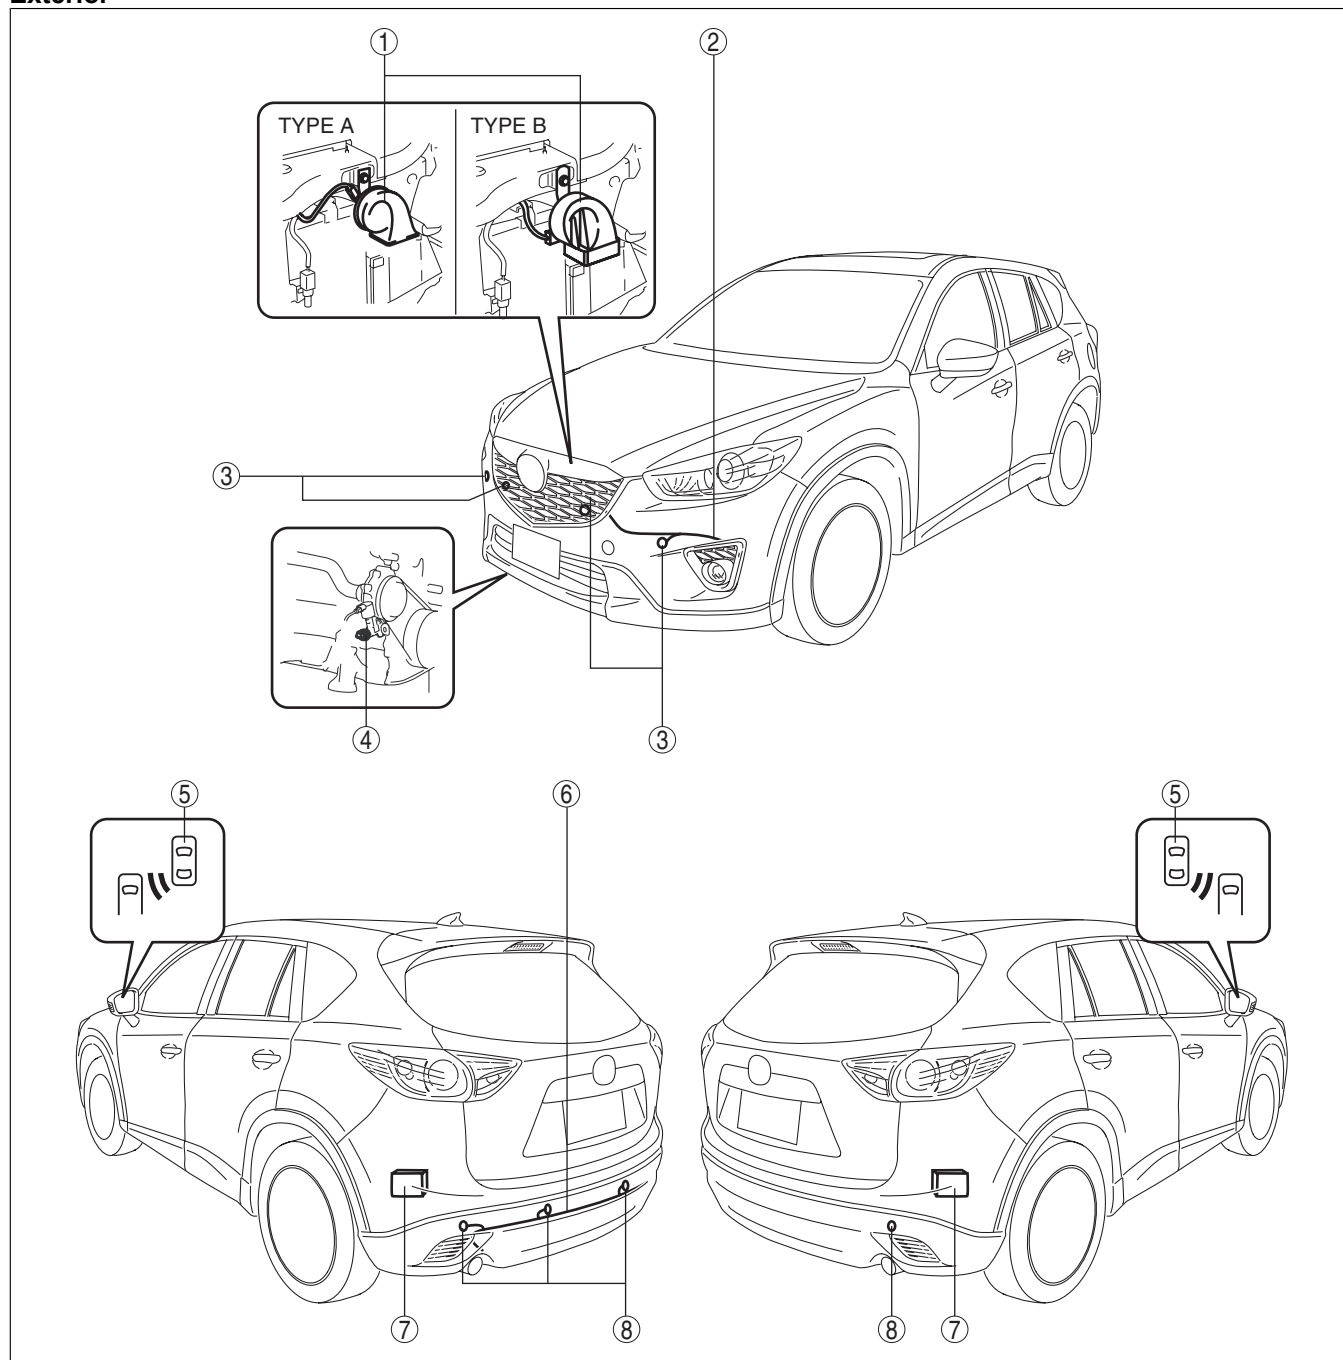

ac5wzw00001366

1	Horn (See HORN REMOVAL/INSTALLATION.) (See HORN INSPECTION.)
2	Front ultrasonic sensor short-cord (with parking sensor system) (See FRONT ULTRASONIC SENSOR SHORT-CORD REMOVAL/INSTALLATION.) (See FRONT ULTRASONIC SENSOR SHORT-CORD INSPECTION.)
3	Front ultrasonic sensor (with parking sensor system) (See FRONT ULTRASONIC SENSOR REMOVAL/INSTALLATION.)
4	Oil pressure switch (See OIL PRESSURE SWITCH REMOVAL/INSTALLATION.) (See OIL PRESSURE SWITCH INSPECTION.)

5	Rear vehicle monitoring (RVM) warning indicator light (with rear vehicle monitoring (RVM) system) (See RVM WARNING INDICATOR LIGHT REMOVAL/INSTALLATION.) (See RVM WARNING INDICATOR LIGHT INSPECTION.) Blind spot monitoring (BSM) warning indicator light (with blind spot monitoring (BSM) system) (See BLIND SPOT MONITORING (BSM) INDICATOR LIGHT REMOVAL/INSTALLATION.) (See BLIND SPOT MONITORING (BSM) INDICATOR LIGHT INSPECTION.)
---	--

6	Rear ultrasonic sensor short-cord (with parking sensor system) (See REAR ULTRASONIC SENSOR SHORT-CORD REMOVAL/INSTALLATION.) (See REAR ULTRASONIC SENSOR SHORT-CORD INSPECTION.)
7	Rear vehicle monitoring (RVM) control module (with rear vehicle monitoring (RVM) system) (See REAR VEHICLE MONITORING CONTROL MODULE REMOVAL/INSTALLATION.) (See REAR VEHICLE MONITORING CONTROL MODULE INSPECTION.) (See REAR VEHICLE MONITORING BRACKET REMOVAL/INSTALLATION.) (See REAR VEHICLE MONITORING CONTROL MODULE CONFIGURATION (USING READ/ WRITE FUNCTION).) (See REAR VEHICLE MONITORING CONTROL MODULE CONFIGURATION (USING AS-BUILT DATA).) (See REAR VEHICLE MONITORING RADAR AIMING.) Blind spot monitoring (BSM) control module (with blind spot monitoring (BSM) system) (See BLIND SPOT MONITORING (BSM) CONTROL MODULE REMOVAL/INSTALLATION.) (See BLIND SPOT MONITORING (BSM) CONTROL MODULE INSPECTION.) (See BLIND SPOT MONITORING (BSM) BRACKET REMOVAL/INSTALLATION.) (See BLIND SPOT MONITORING (BSM) RADAR TEST.)

8	Rear ultrasonic sensor (with parking sensor system) (See REAR ULTRASONIC SENSOR REMOVAL/ INSTALLATION.)
---	--