

CLIMATE CONTROL UNIT DISASSEMBLY/ASSEMBLY [MANUAL AIR CONDITIONER]

id0740a2802000

1. Disassemble in the order indicated in the figure.


L.H.D.

1	Dials
2	Airflow mode wire (See Wire Removal Note.) (See Wire Installation Note.)
3	Air mix wire (See Wire Removal Note.) (See Wire Installation Note.)
4	Fan switch (See Fan Switch Removal Note.)
5	Climate control unit (See Clock Removal Note.)


R.H.D.

1	Dials
2	Airflow mode wire (See Wire Removal Note.) (See Wire Installation Note.)
3	Air mix wire (See Wire Removal Note.) (See Wire Installation Note.)
4	Fan switch (See Fan Switch Removal Note.)
5	Climate control unit (See Clock Removal Note.)

2. Assemble in the reverse order of disassembly.

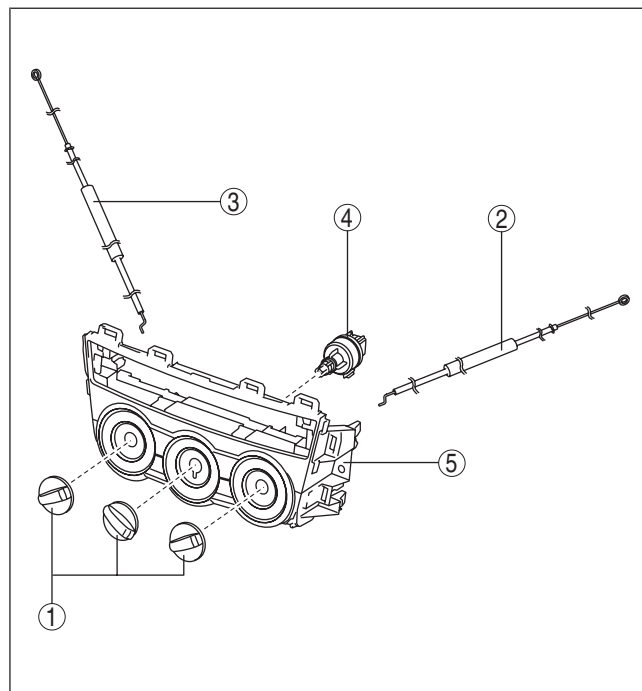

ac5wzw00001910

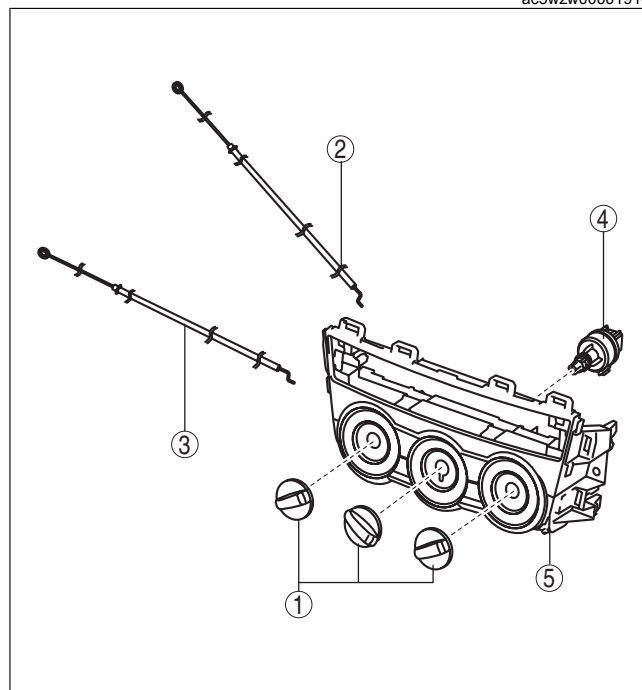


ac5wzw00001911


Wire Removal Note

1. Remove in the order indicated in the figure.

L.H.D.

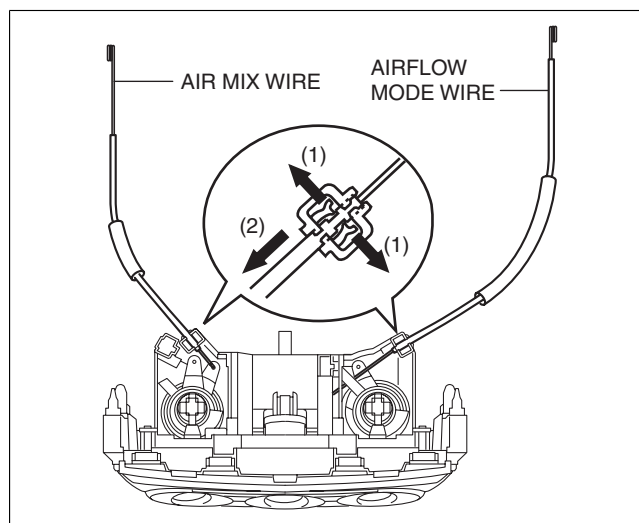


R.H.D.

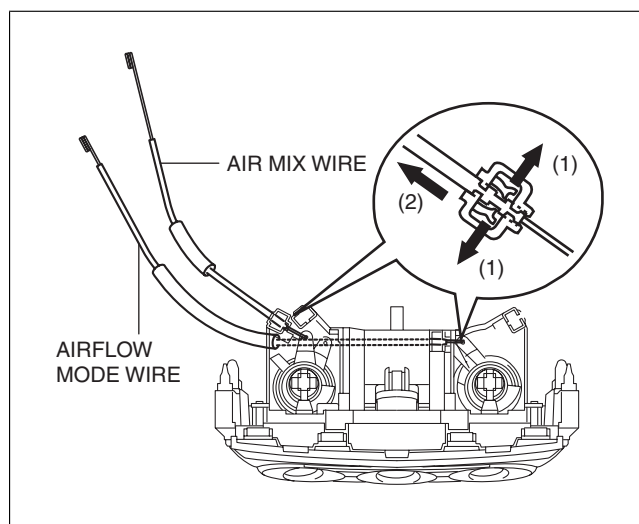


Wire Installation Note

1. Install as shown in the figure.

L.H.D.

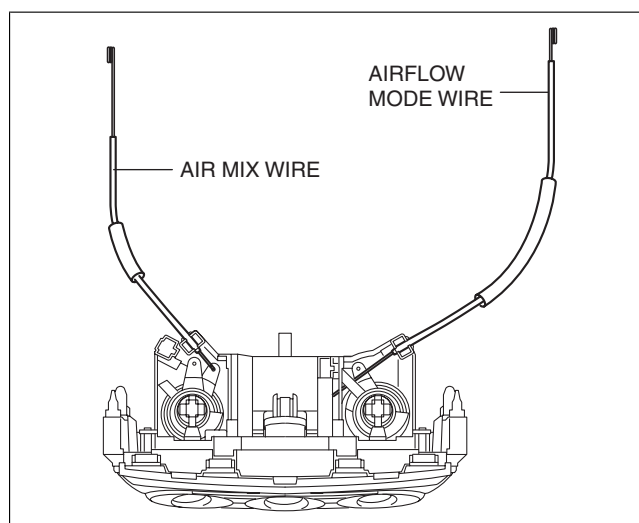


R.H.D.

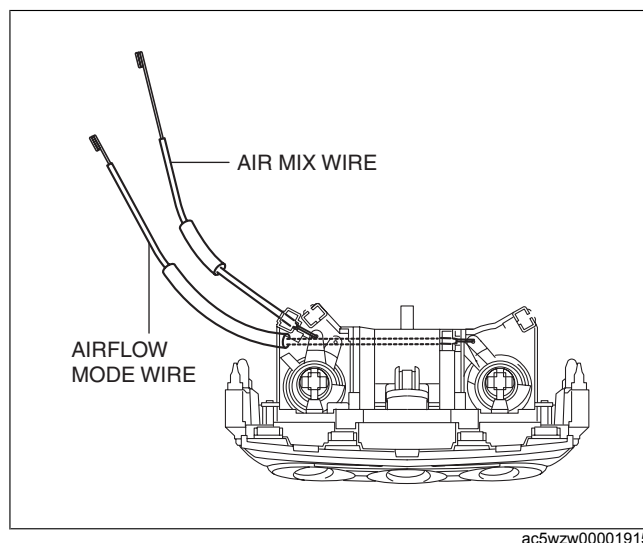


Fan Switch Removal Note

1. Remove the fan switch dial.
2. Press the tab as shown in the figure.

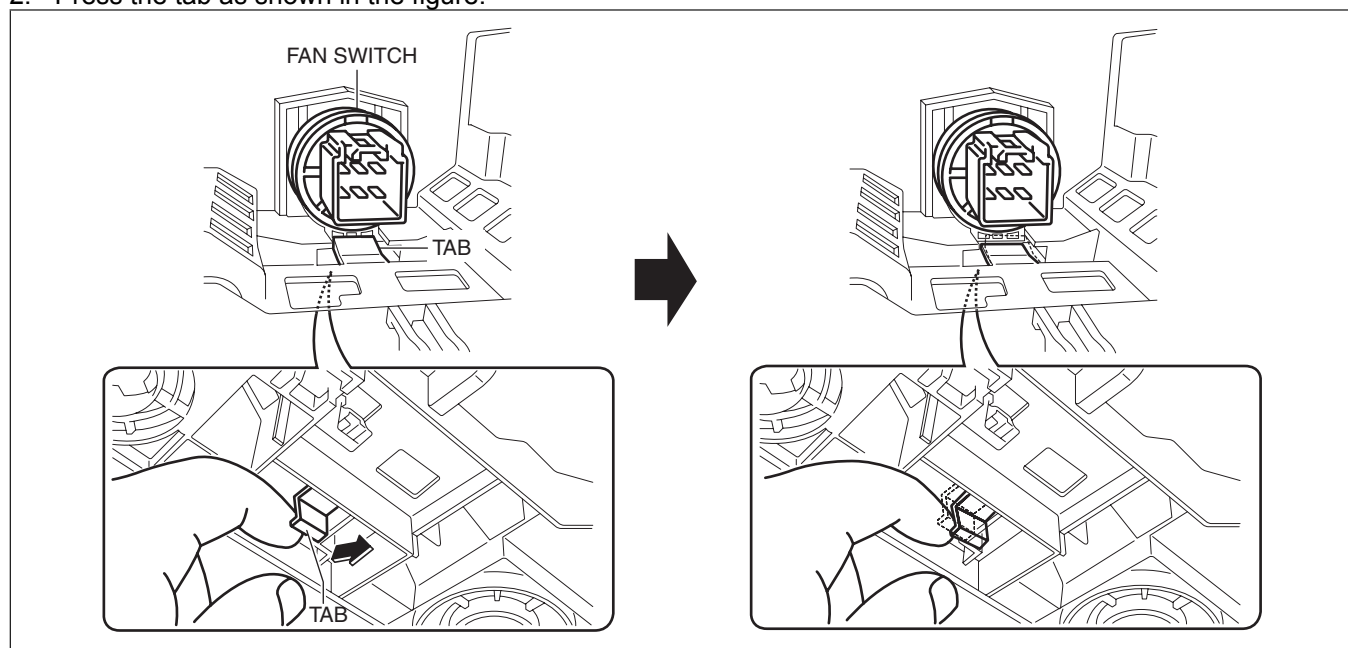

3. Pull the fan switch outward and remove it with the tab pressed.

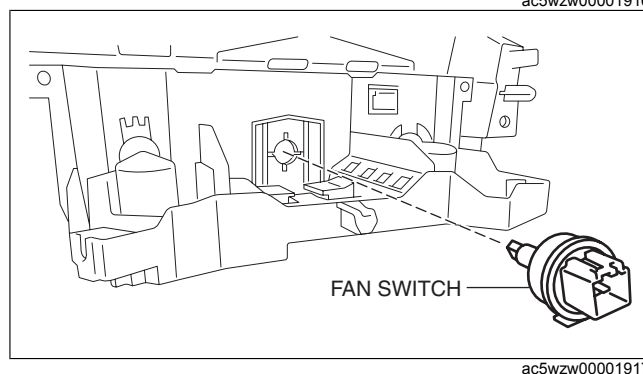

Clock Removal Note

1. The clock can be removed from the climate control unit as shown in the figure. Refer to the clock removal/ installation for the detailed procedure. (See CLOCK REMOVAL/INSTALLATION.)

