


## LIFTGATE LOCK ACTUATOR INSPECTION


id091400512100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
  - (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
  - (3) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
  - (4) Liftgate latch and lock actuator (See LIFTGATE LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
3. Press in the latch lever of the liftgate latch and lock actuator using a flathead screwdriver, and set it to the latched condition.

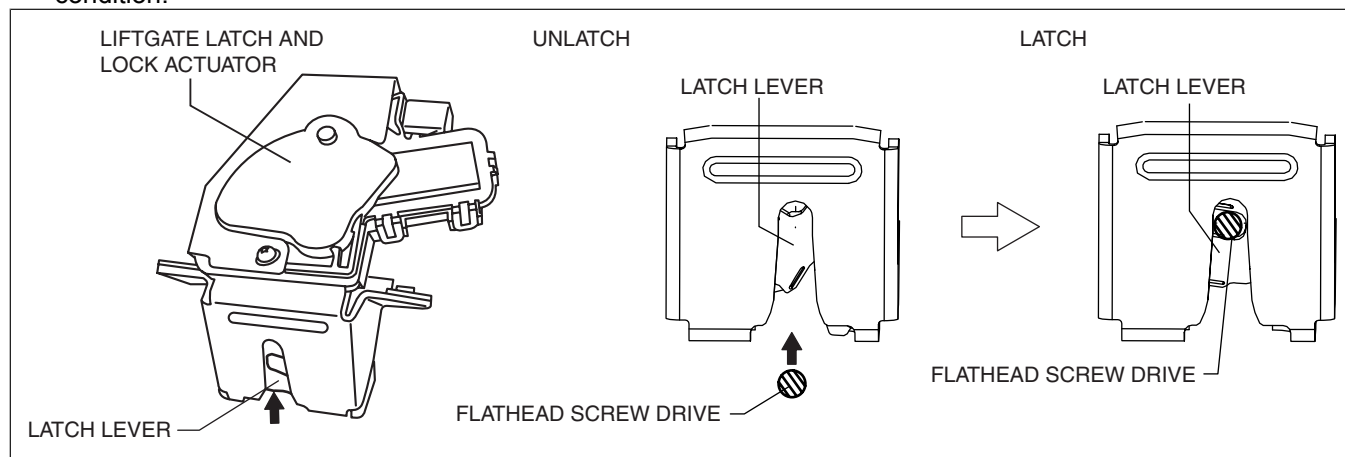

ac5wzw00000773

4. Connect terminal D to the positive battery voltage, connect terminal B to the ground, and verify that the latch lever is released and the condition changes to the unlatch condition.
  - If the operation cannot be verified, replace the liftgate latch and lock actuator.

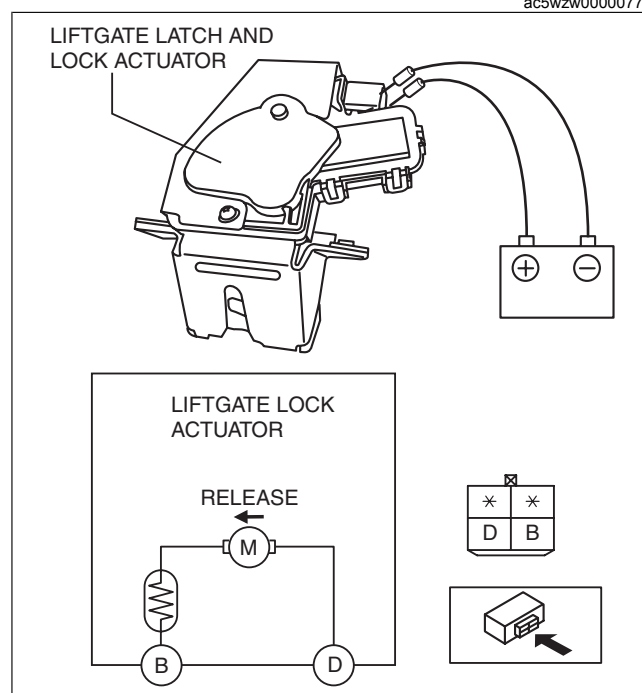

ac5jjw00000224