


TCS OFF SWITCH INSPECTION

id041500803100

1. Remove the TCS OFF switch. (See TCS OFF SWITCH REMOVAL/INSTALLATION.)
2. Verify that the resistance between the TCS OFF switch terminals B and C is as indicated in the table.
 - If not as indicated in the table, replace the TCS OFF switch.

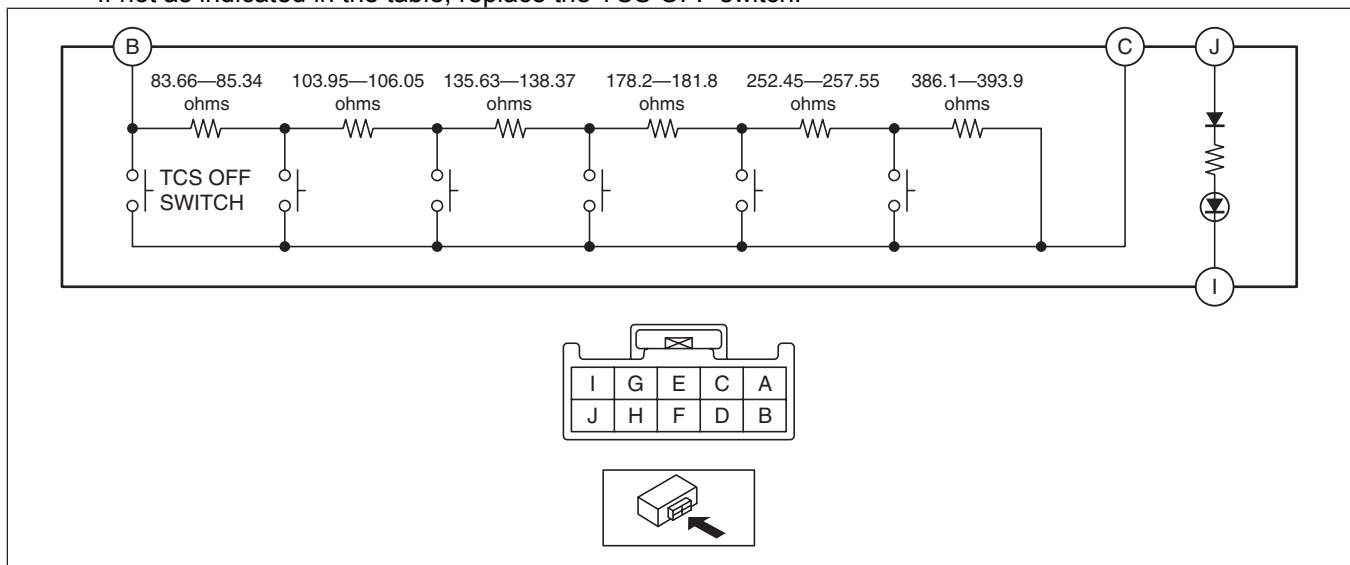

ac5wzw00000248

TCS OFF switch specification

Terminal	Test condition	Resistance (ohms)
B—C	Switch pressed	0
	Switch released	1139.99—1163.01

3. Apply battery voltage to TCS OFF switch terminal J, and connect terminal I to ground.
4. Verify that the LED illuminates.
 - If there is any malfunction, replace the TCS OFF switch.