


## RESISTOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER]

id0740a2800700


### Note

- When removing the resistor, perform the procedure in the posture shown in the figure.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the dashboard under cover. (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
3. Disconnect the connector.

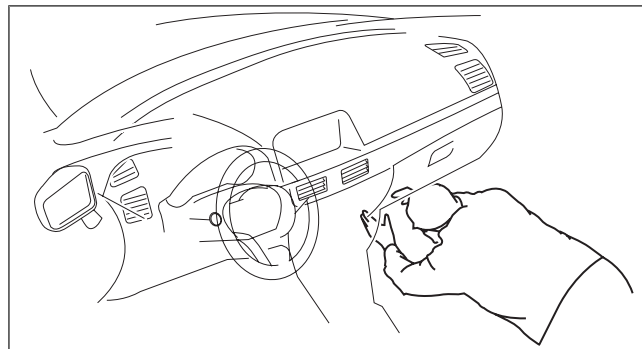


ac5wzw00001899

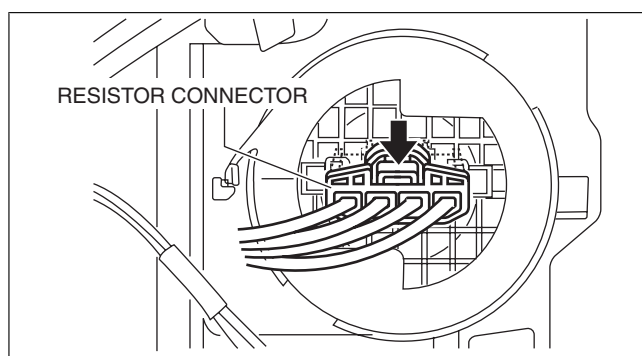


ac5wzw00001900

4. Rotate the resistor (2) while pressing the tab (1).

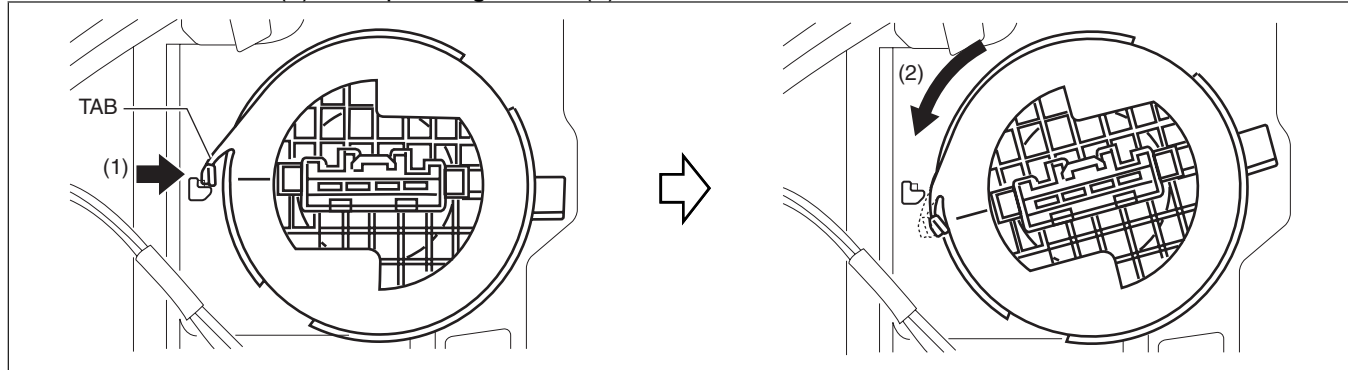

ac5wzw00001901

5. Remove the resistor.
6. Install in the reverse order of removal.

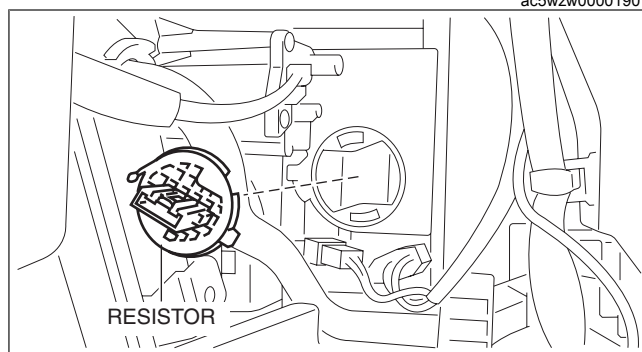

ac5wzw00001902