



AUTO LEVELING SENSOR REMOVAL/INSTALLATION

id091800805700

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Disconnect the connector.

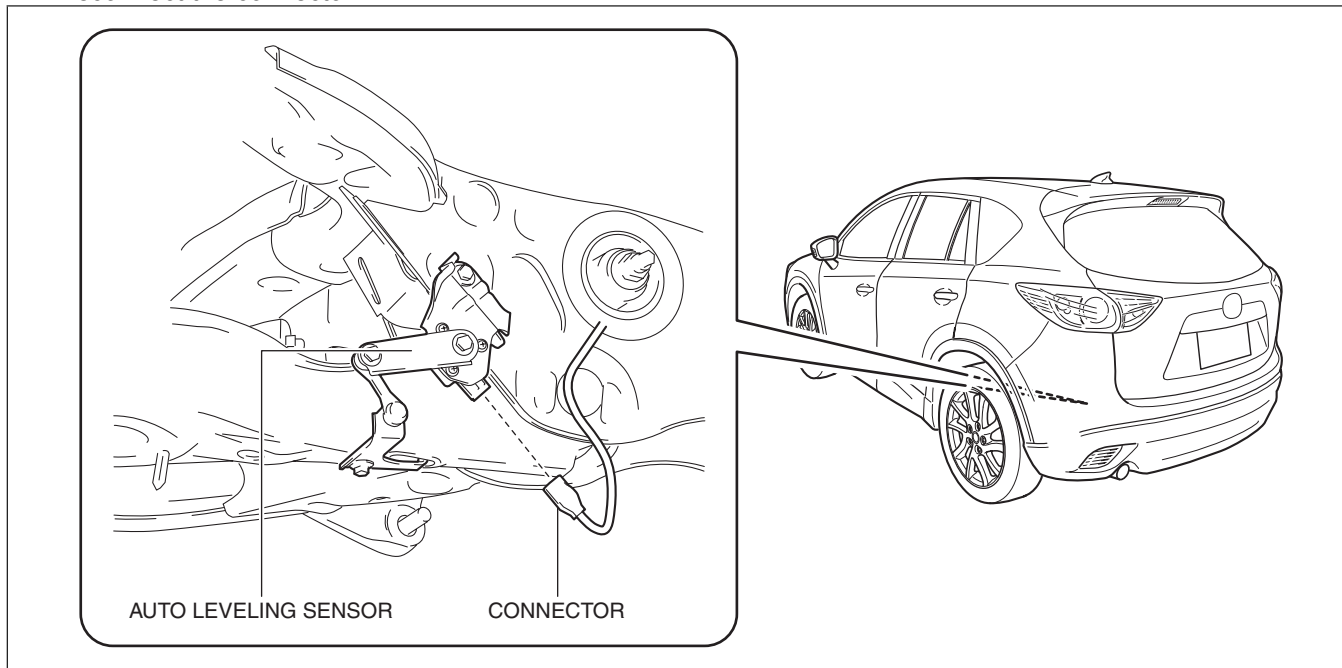


3. Remove the bolts.

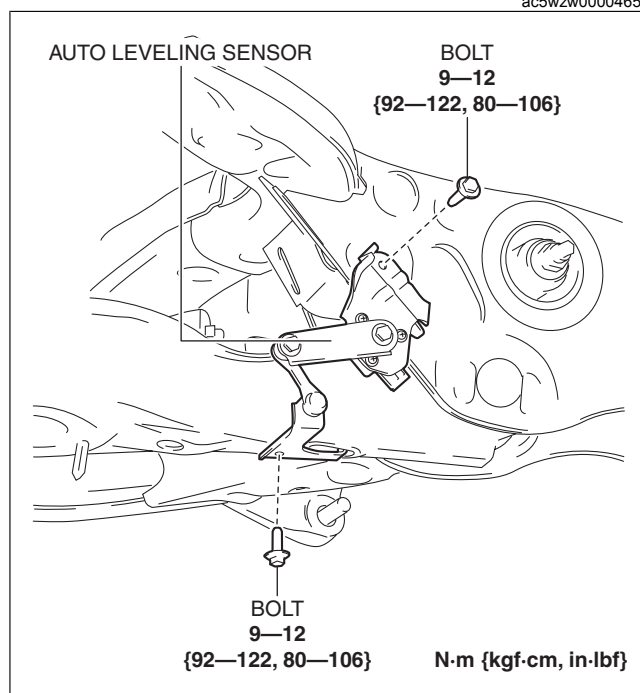

ac5wzw00000462

4. Remove the auto leveling sensor.
5. Install in the reverse order of removal.
6. Perform the auto leveling system initial setting. (See HEADLIGHT AUTO LEVELING SYSTEM INITIALIZATION.)

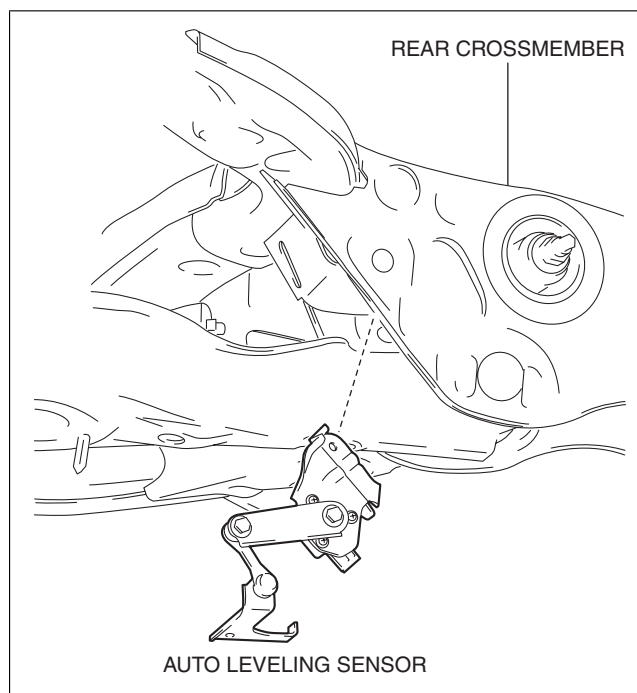

ac5wzw00000463