


FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION

id091400510700


Fuel-filler Lid Opener

1. Open the fuel-filler lid.
2. Remove the nut.

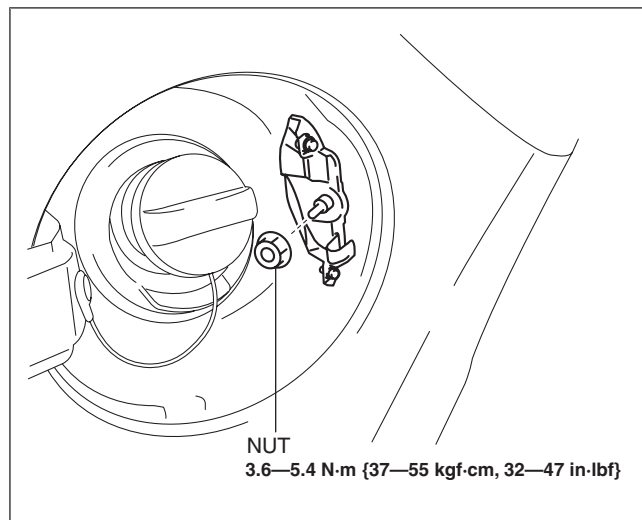


ac5wzw00000311

3. Remove the service hole cover on the trunk side trim.

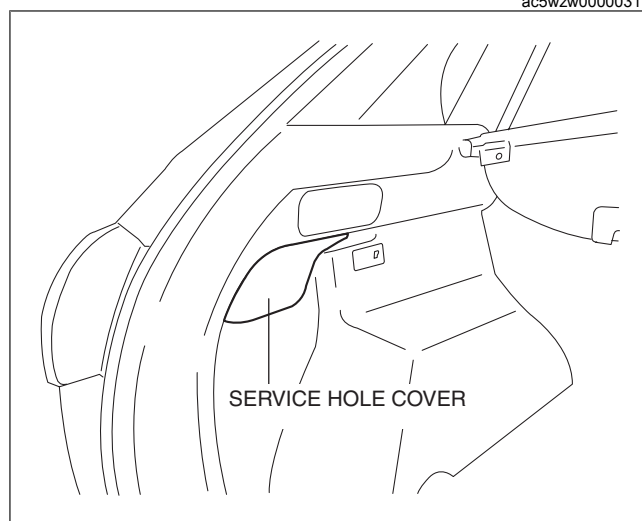


ac5wzw00000312

4. While pressing the tabs of the stopper bracket in the direction of arrow (1) shown in the figure, press it in the direction of arrow (2) to detach it from the body.

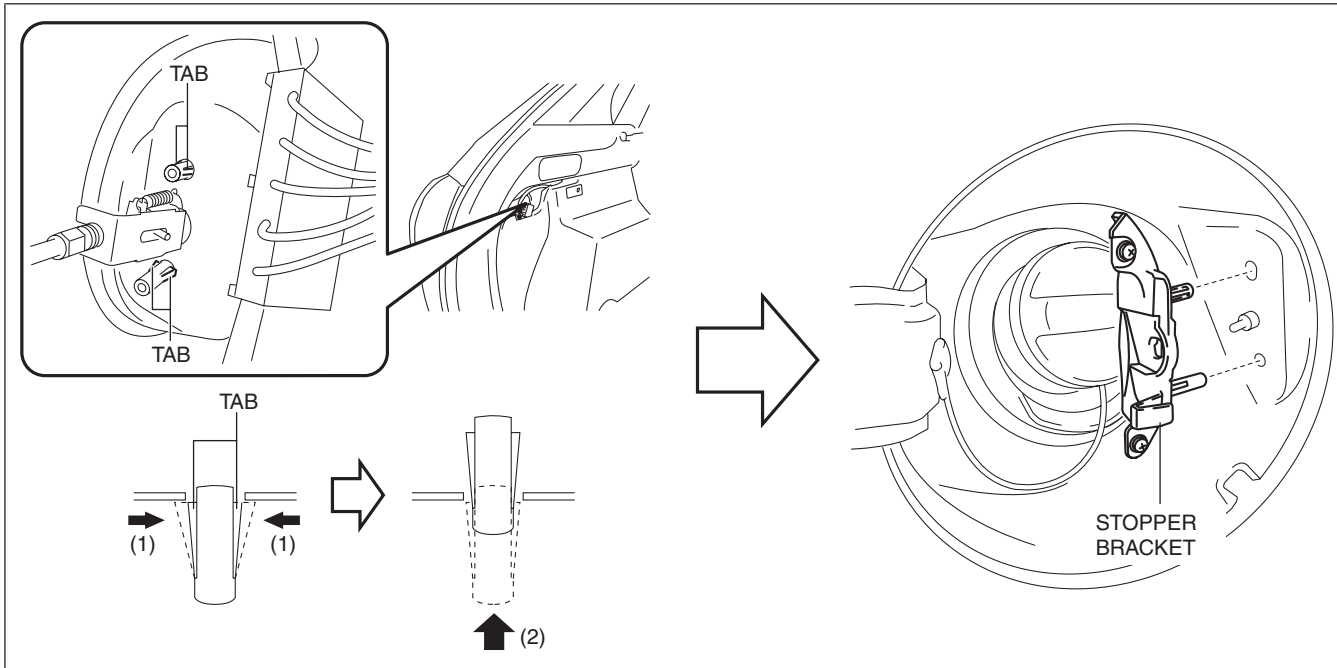


ac5wzw00002747

5. Detach all the stopper bracket tabs from the body and remove the stopper bracket.
6. Remove the fuel-filler lid opener in the direction of the arrow.

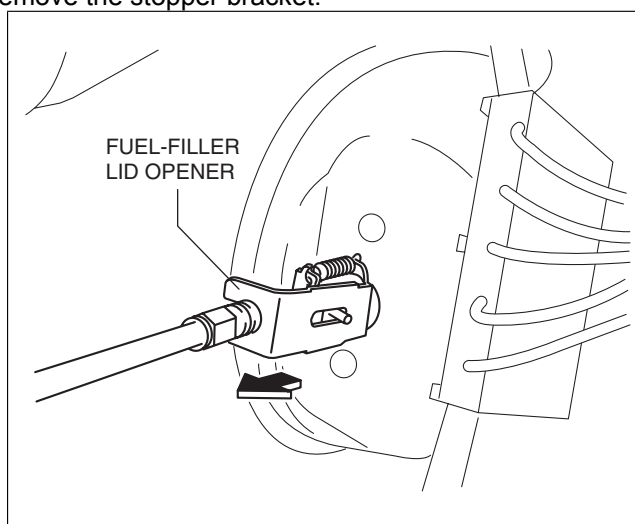

ac5wzw00000314

7. Disconnect the fuel-filler lid opener cable from the fuel-filler lid opener.
8. Install in the reverse order of removal.

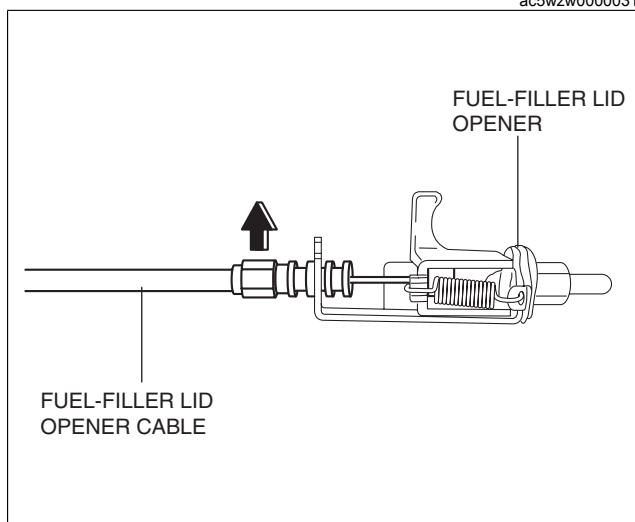


ac5wzw00000315

Fuel-filler Lid Opener Lever

1. Remove the front scuff plate. (Driver's side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
2. Remove the front side trim. (Driver's side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)

3. Partially peel back the floor covering.
4. Remove the bolts.

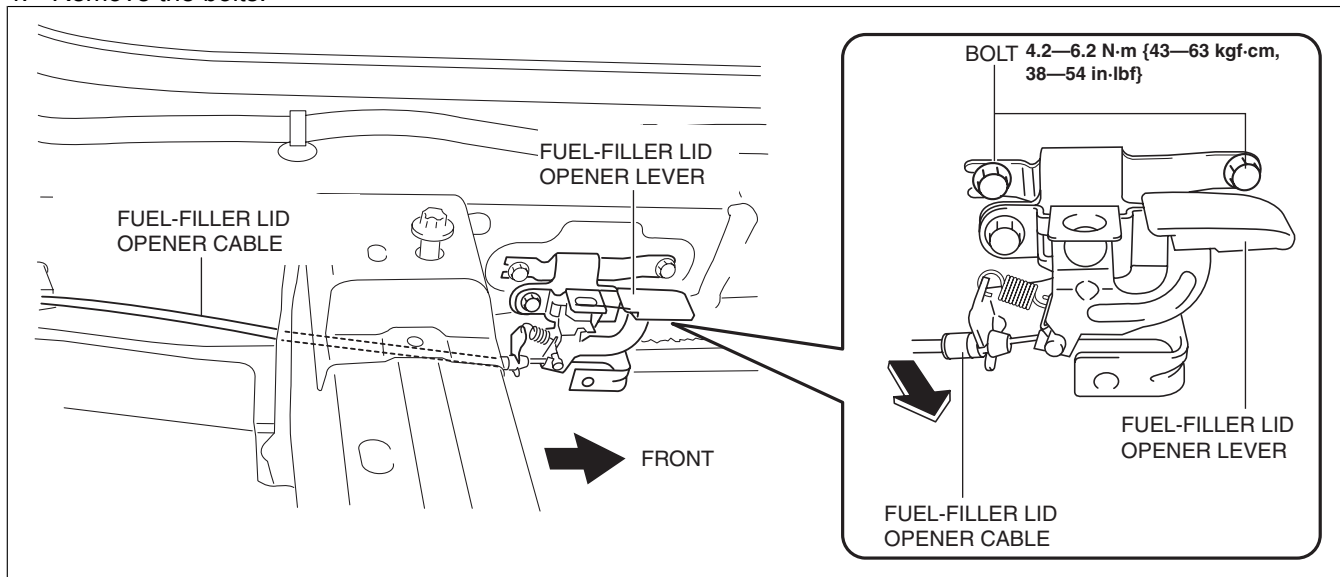

ac5wzw00000692

5. Disconnect the fuel-filler lid opener cable from the fuel-filler lid opener lever.
6. Install in the reverse order of removal.