


## FLOOR UNDER COVER REMOVAL/INSTALLATION


id091600820200

1. Lift up the vehicle.
2. Remove fasteners A.

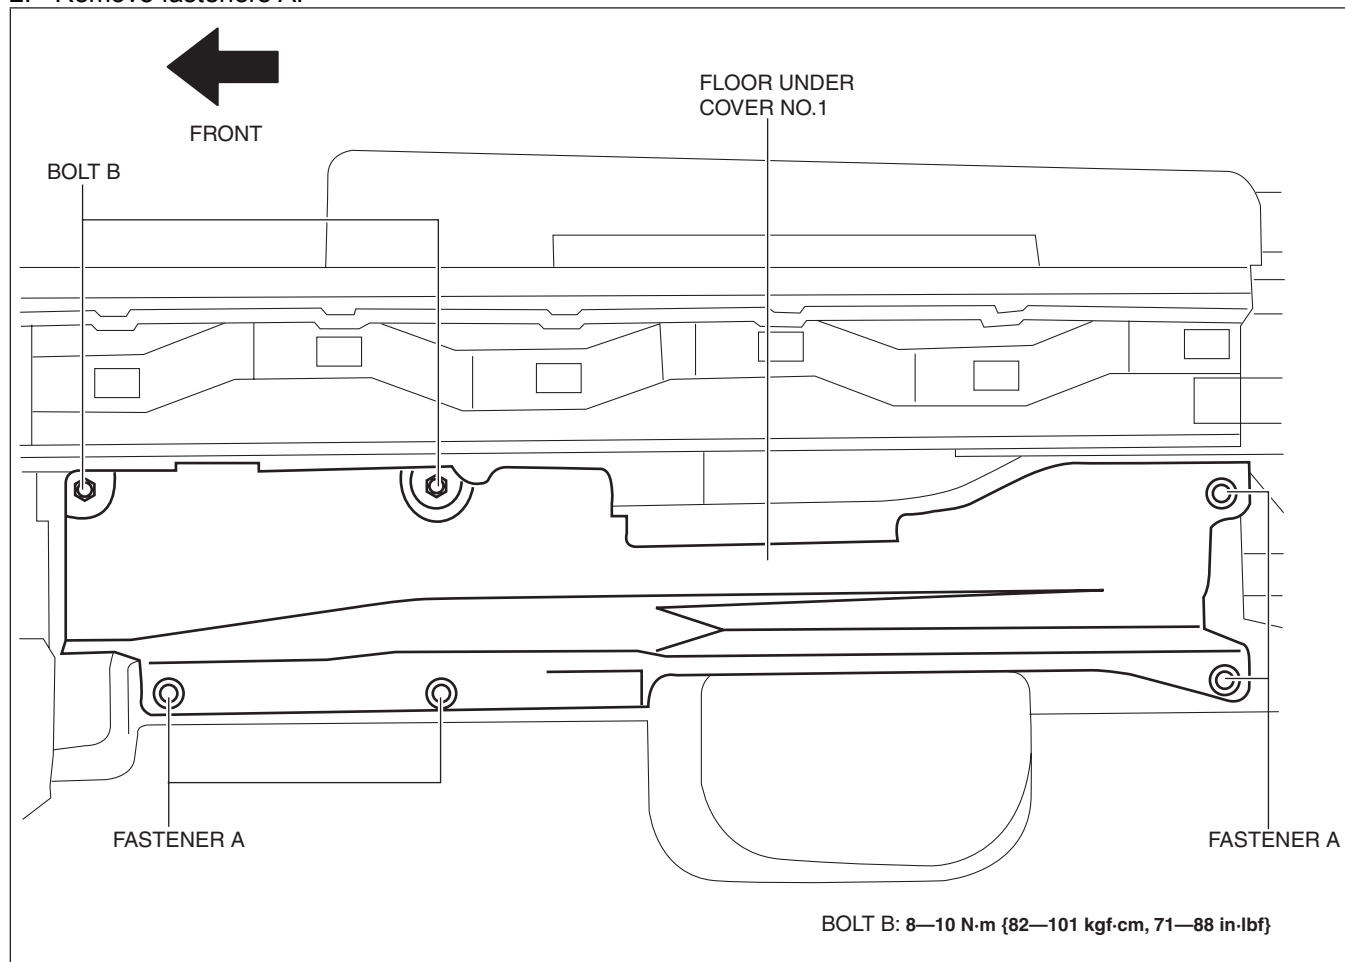


ac5wzw00003022

3. Remove bolts B.
4. Remove the floor under cover No.1.
5. Remove fasteners C.

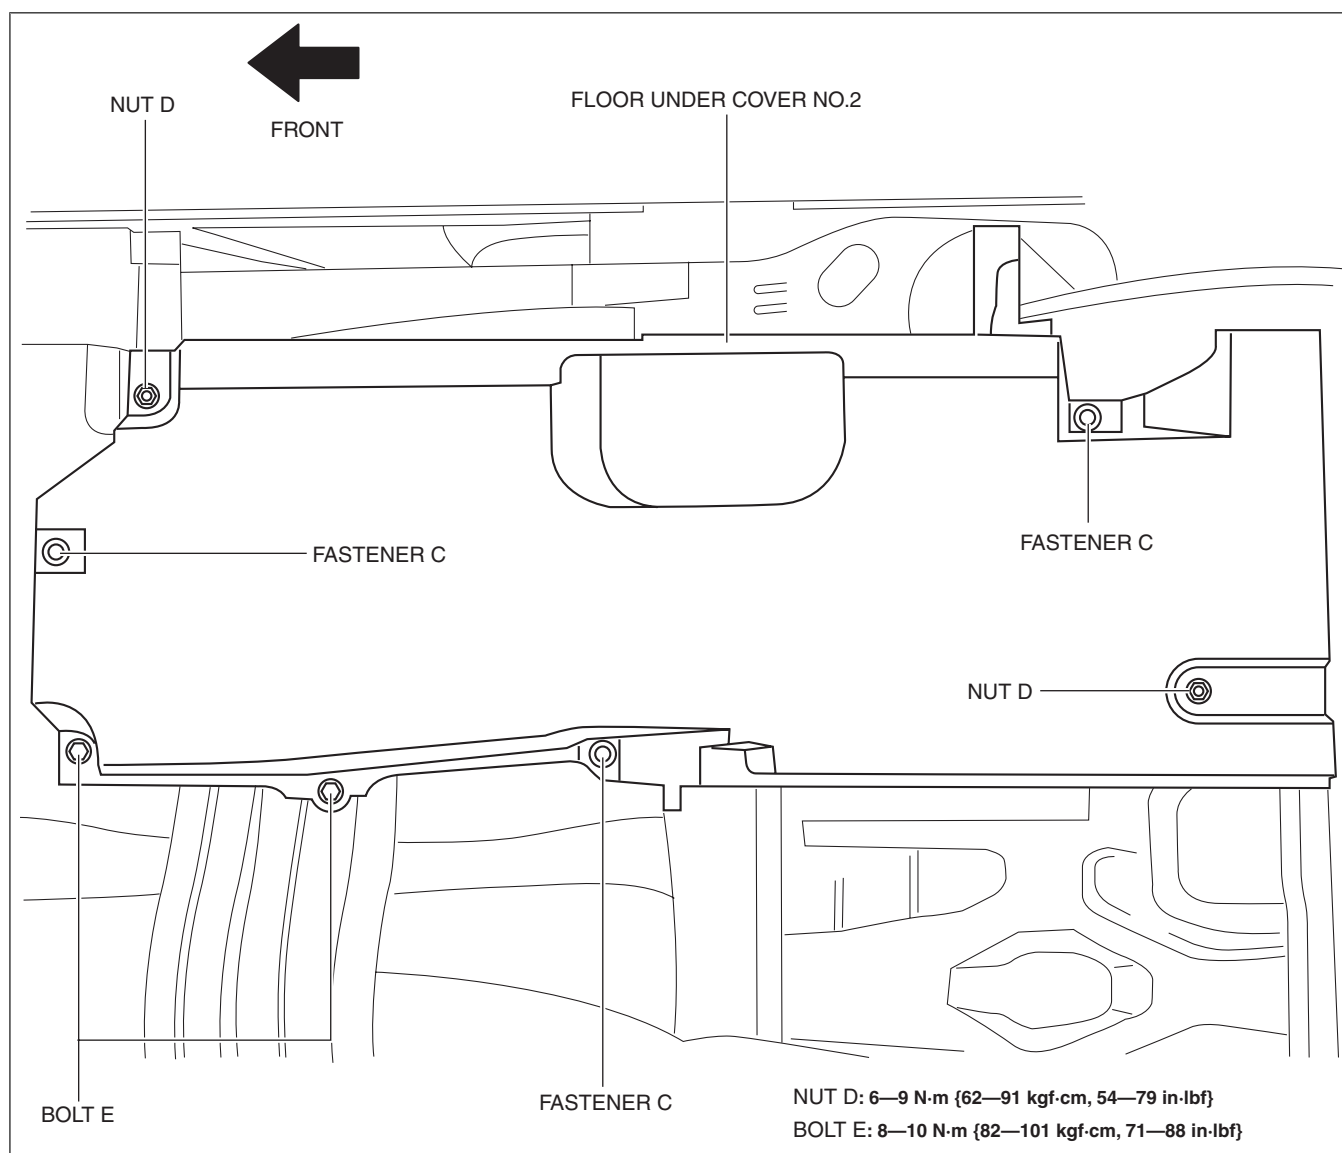

ac5wzw00003023

6. Remove nuts D.
7. Remove bolts E.
8. Remove the floor under cover No.2.
9. Remove bolts F.

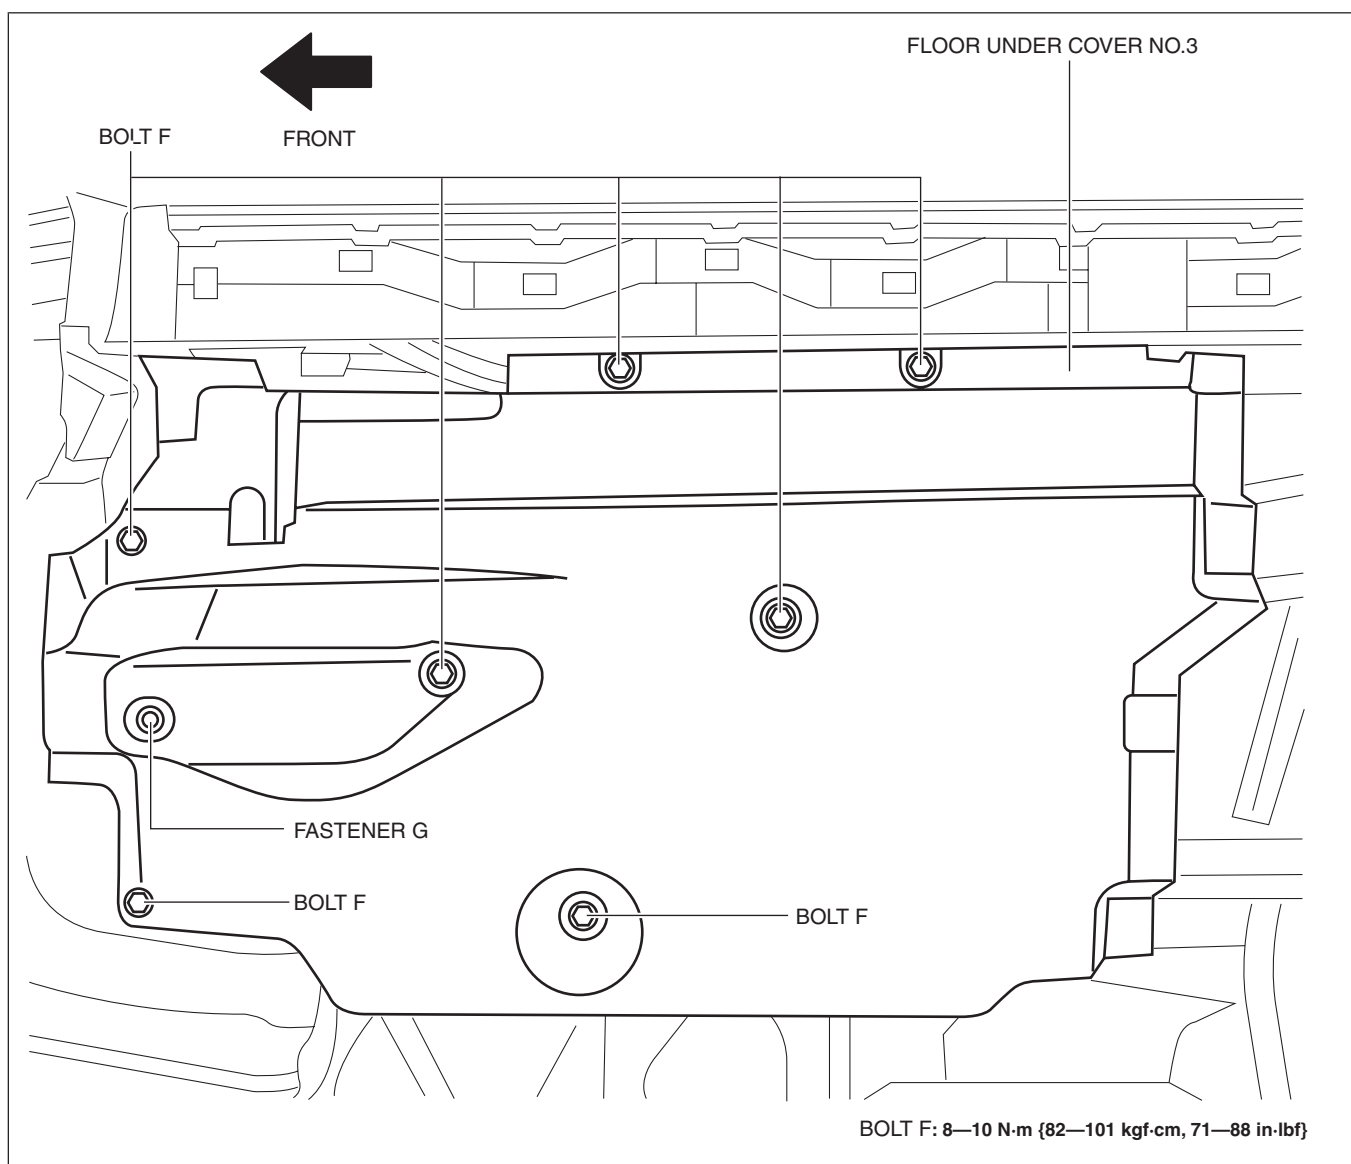

ac5wzw00003024

10. Remove the fastener G.
11. Remove the floor under cover No.3.
12. Install in the reverse order of removal.