


REAR OIL SEAL REPLACEMENT [SKYACTIV-D 2.2]

id0110s5800900

1. Remove the transaxle. (See MANUAL TRANSAXLE REMOVAL/INSTALLATION [D66M-R] (MTX, 2WD).) (See MANUAL TRANSAXLE REMOVAL/INSTALLATION [D66MX-R] (MTX, 4WD).) (See AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION [GW6A-EL] (ATX, 2WD).) (See AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION [GW6AX-EL] (ATX, 4WD).)
2. Remove the flywheel (MTX) or the drive plate (ATX). (See CLUTCH UNIT REMOVAL/INSTALLATION [D66M-R, D66MX-R] (MTX).) (See DRIVE PLATE REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL] (ATX).)
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.


| | |
|---|--|
| 1 | Rear oil seal (See Rear Oil Seal Removal Note.) (See Rear Oil Seal Installation Note.) |
|---|--|

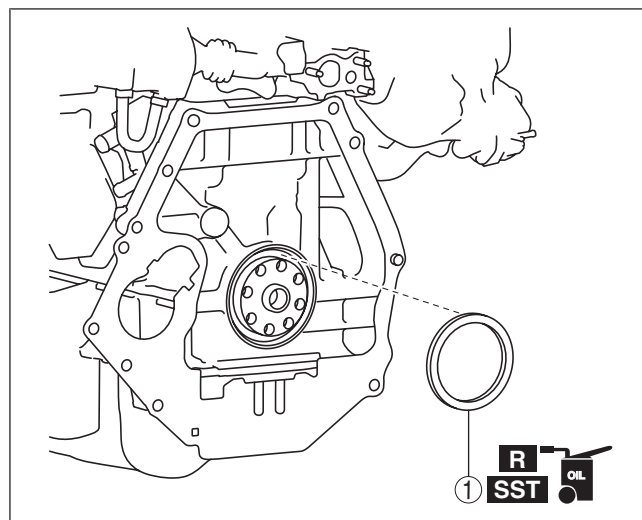

ac5wzw00004957

Rear Oil Seal Removal Note

1. Cut the oil seal lip using a utility knife.
2. Remove the oil seal using a flathead screwdriver with the tip protected by a clean cloth to prevent damage to the oil seal sliding part of the crankshaft.

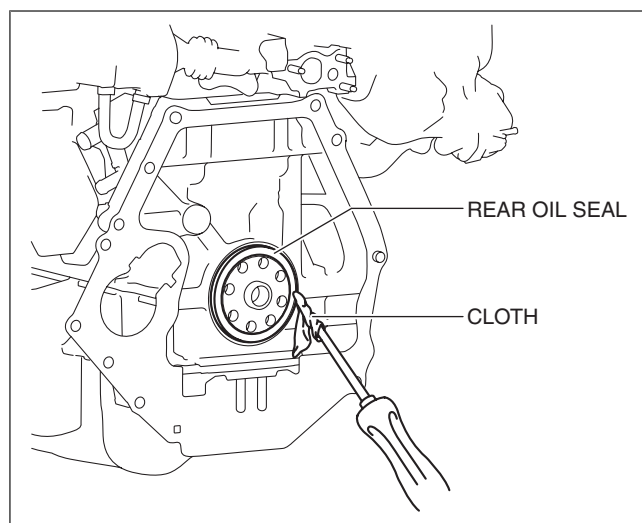


ac5wzw00004958

Rear Oil Seal Installation Note


1. Apply clean engine oil to the inner surface of a new rear oil seal.
2. Insert the rear oil seal into the cylinder block by hand.

3. Tap the oil seal in evenly using the **SST** and a hammer.

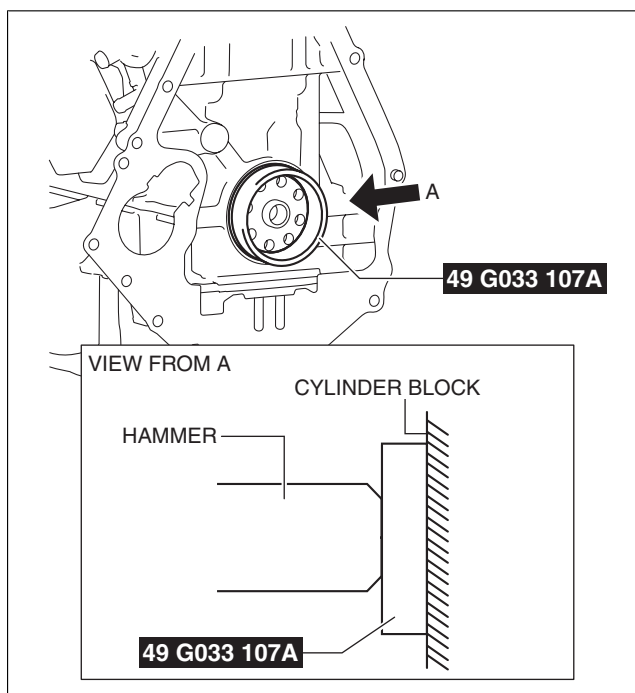

ac5wzw00005234

Rear oil seal press on amount
0—0.5 mm {0—0.019 in}

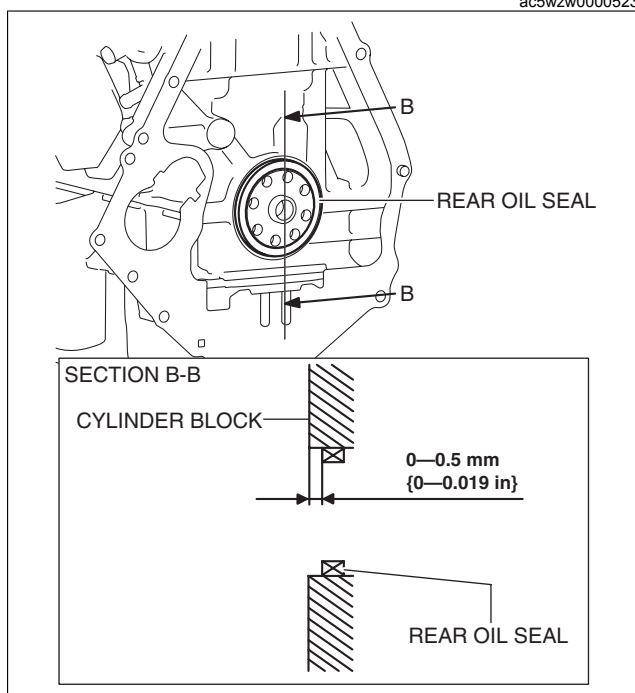

ac5wzw00005277