

## MAP LIGHT BULB REMOVAL/INSTALLATION


id091800812500

### Front Map Light


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. To prevent scratches or damage, affix protective tape to the position shown in the figure.

#### Caution


- If a flathead screwdriver is inserted into the gap between the front map light and lens, the front map light could interfere with the flathead screwdriver resulting in damage to the front map light. When removing the lens from the front map light, perform the procedure after affixing protective tape to the front map light.

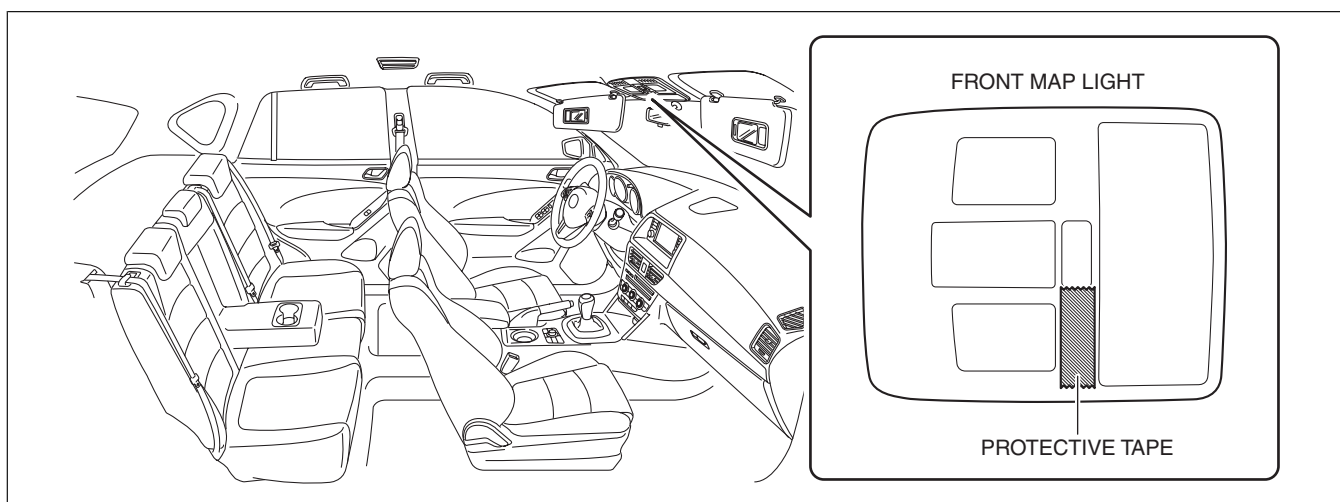

3. Press the lens to secure a sufficient space for inserting a flathead screwdriver.

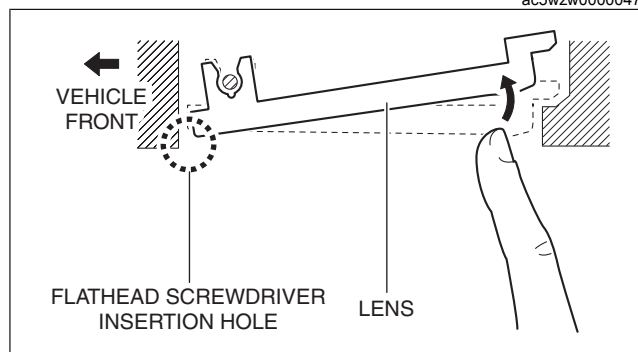


4. Insert a tape-wrapped flathead screwdriver into the gap between the lens and front map light shown in the figure.

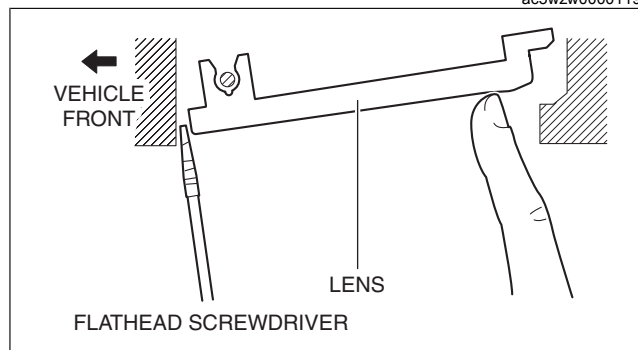


ac5wzw00000051

5. Move the flathead screwdriver in the direction of the arrow (1) shown in the figure, pull out the lens from the front map light, and detach the front map light pin and lens.

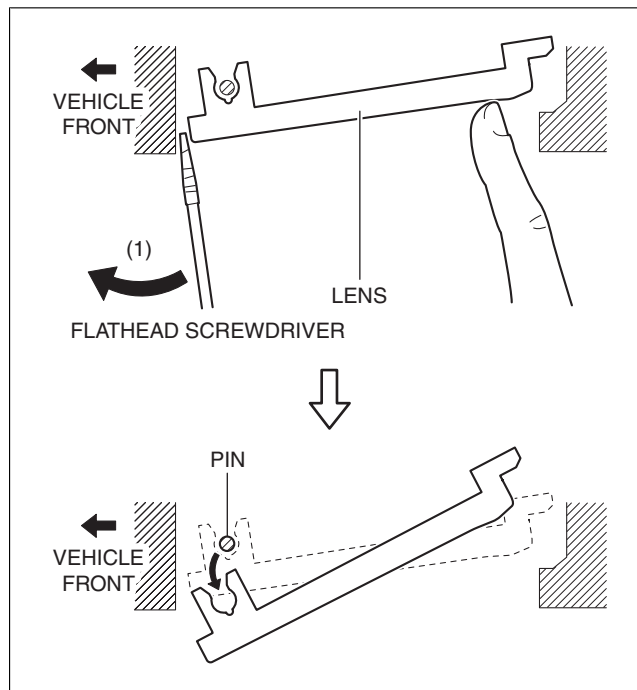


ac5wzw00000052

6. Remove the lens.

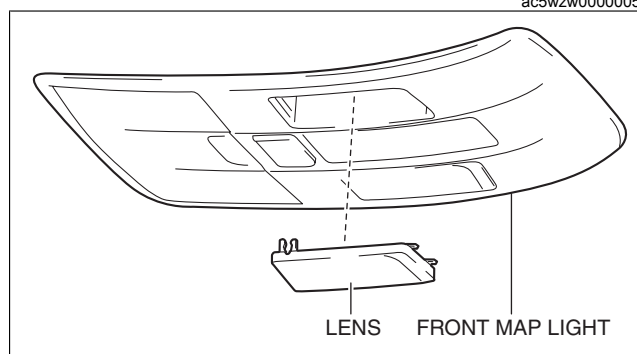


ac5wzw000000473

7. Press the front map light spring in the direction of the arrow (2) shown in the figure and detach the front map light spring and front map light bulb.

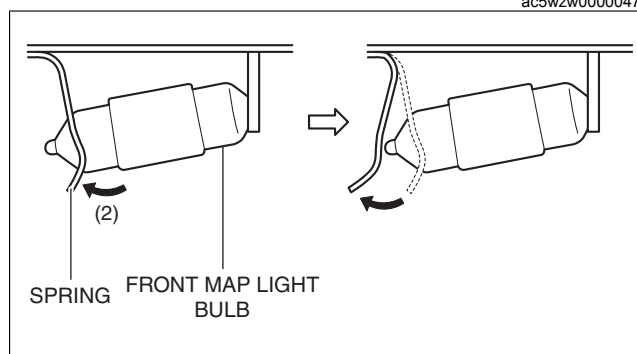

ac5wzw00001198

8. Remove the front map light bulb.
9. Install in the reverse order of removal.

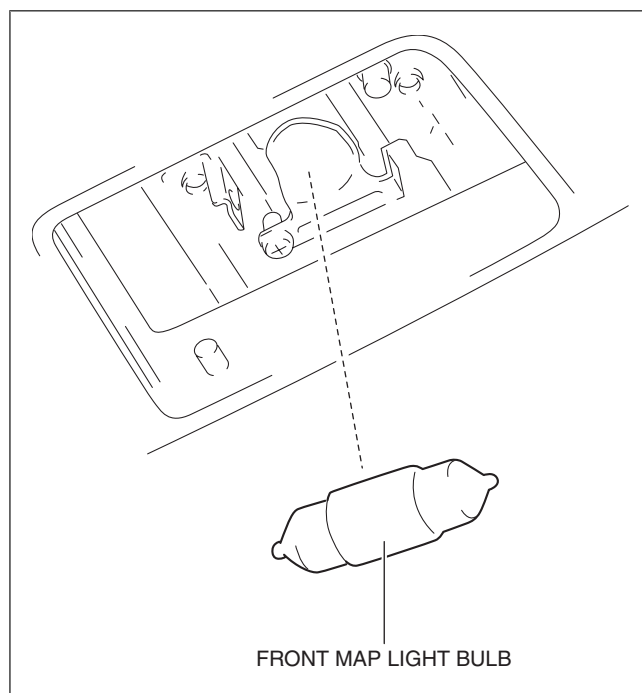


ac5wzw00000053

### Rear Map Light

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. To prevent scratches or damage, affix protective tape to the position shown in the figure.


#### Caution

- If a flathead screwdriver is inserted into the gap between the rear map light and lens, the rear map light could interfere with the flathead screwdriver resulting in damage to the rear map light. When removing the lens from the rear map light, perform the procedure after affixing protective tape to the rear map light.

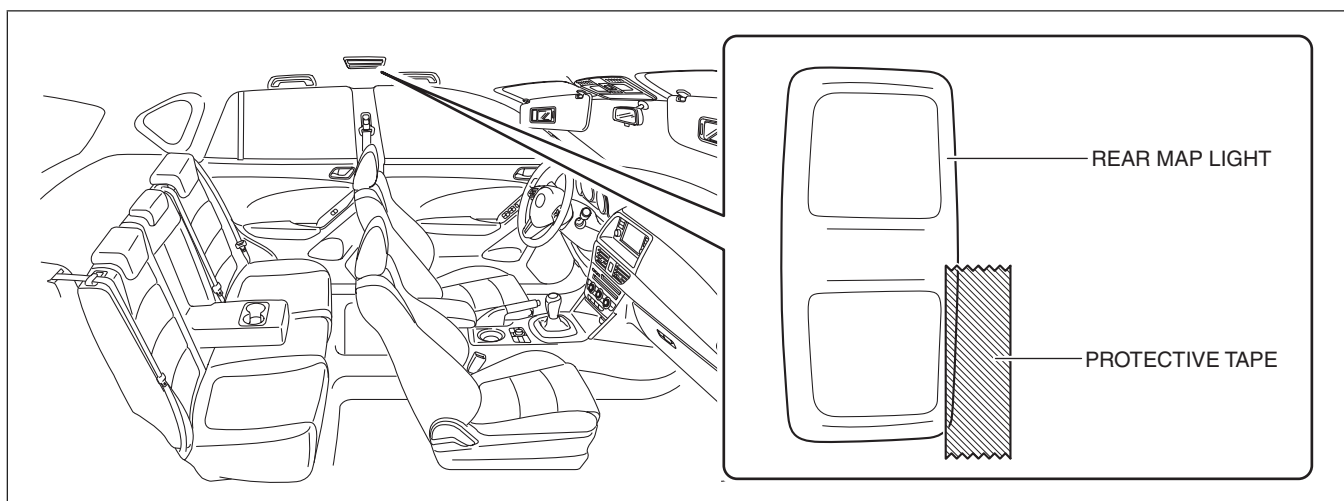


ac5wzw000000475


3. Press the lens to secure a sufficient space for inserting a flathead screwdriver.

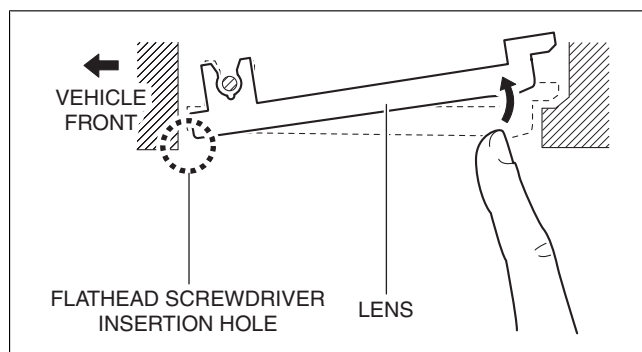


4. Insert a tape-wrapped flathead screwdriver into the gap between the lens and rear map light shown in the figure.

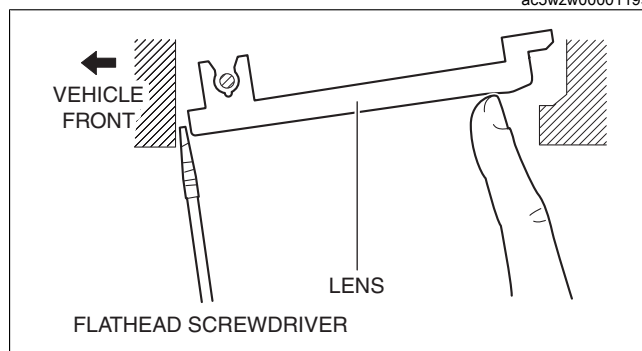


5. Move the flathead screwdriver in the direction of the arrow (1) shown in the figure, pull out the lens from the rear map light, and detach the rear map light pin and lens.

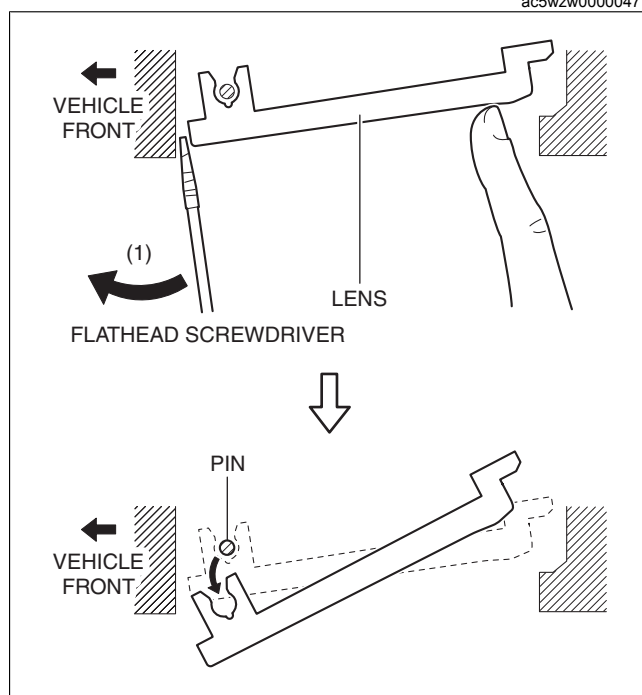

6. Remove the lens.

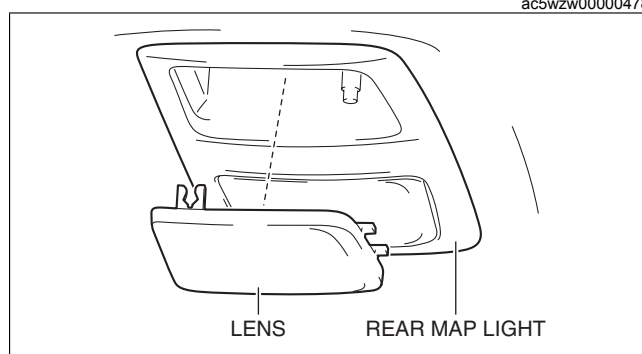


7. Move the rear map light spring in the direction of the arrow (2) shown in the figure and detach the rear map light spring and rear map light bulb.

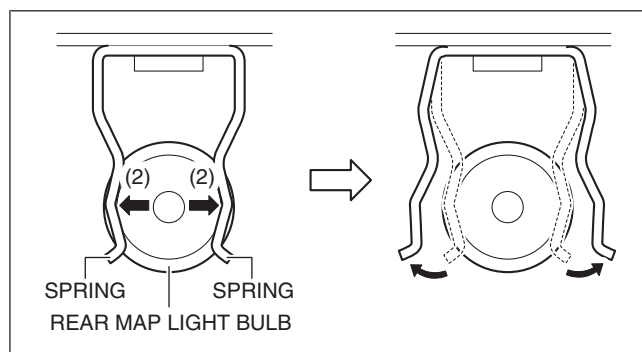

ac5wzw00001200

8. Remove the rear map light bulb.
9. Install in the reverse order of removal.

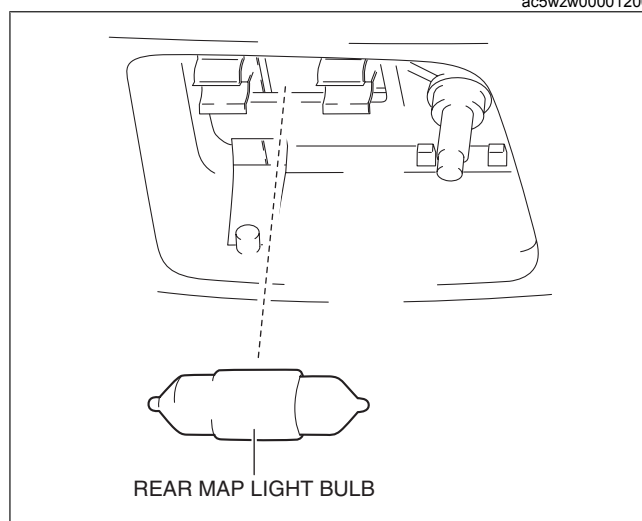

ac5wzw00000481