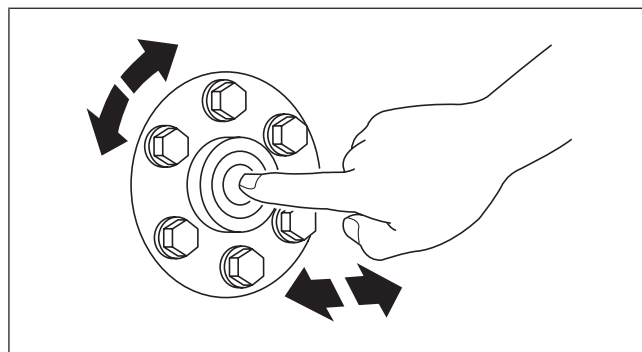

PILOT BEARING INSPECTION

id011000505200

1. Without removing the pilot bearing, turn the bearing while applying force in the axial direction.
 - If there is any malfunction, replace the pilot bearing.



am3uuw00002078