

FRONT DOOR SPEAKER REMOVAL/INSTALLATION


id092000802200

Without Bose®

Note

- If the procedure is performed while holding the front door speaker cone, it could deform the cone causing a malfunction. Therefore, perform the procedure while holding any part other than the cone.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION.)
 - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
3. Disconnect the connector.

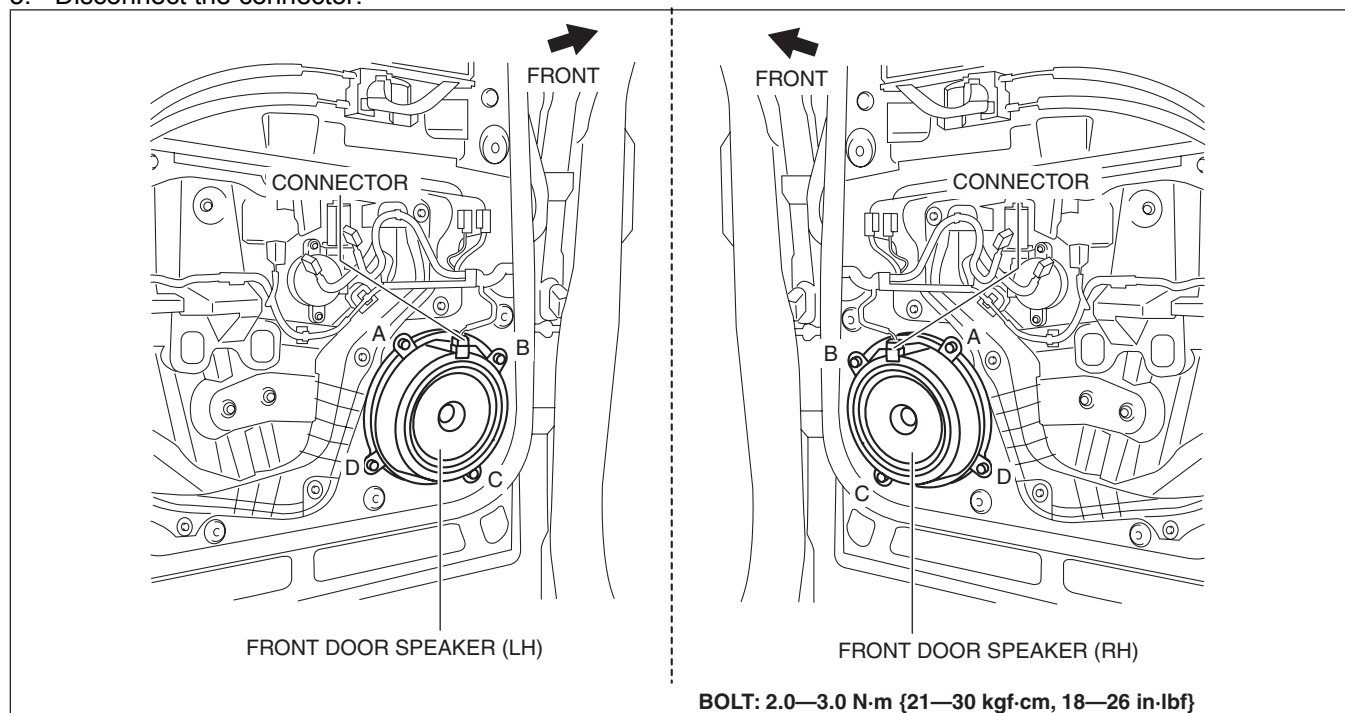

ac5jjw00000567

4. Remove the bolts in alphabetical order.


5. Pull the front door speaker in the direction of the arrow shown in the figure and remove it while detaching the pins.
6. Install in the reverse order of removal.

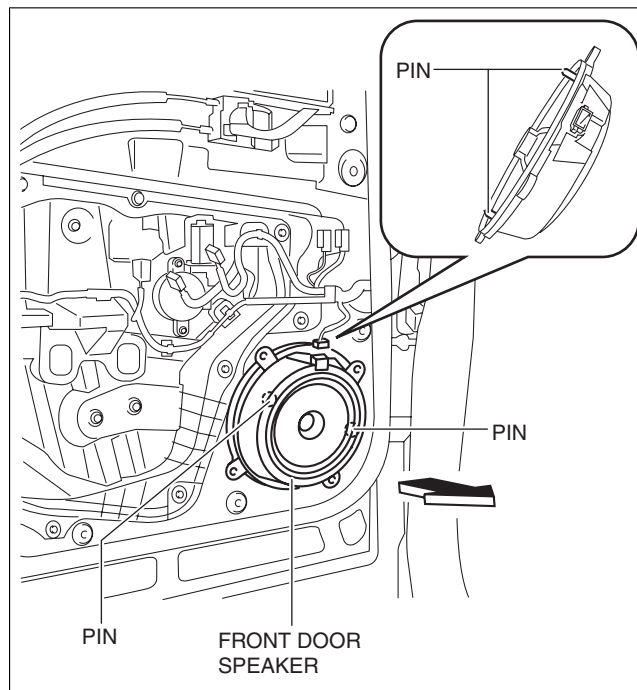

ac5wzw00003601

With Bose®


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION.)
 - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
3. Disconnect the connector.

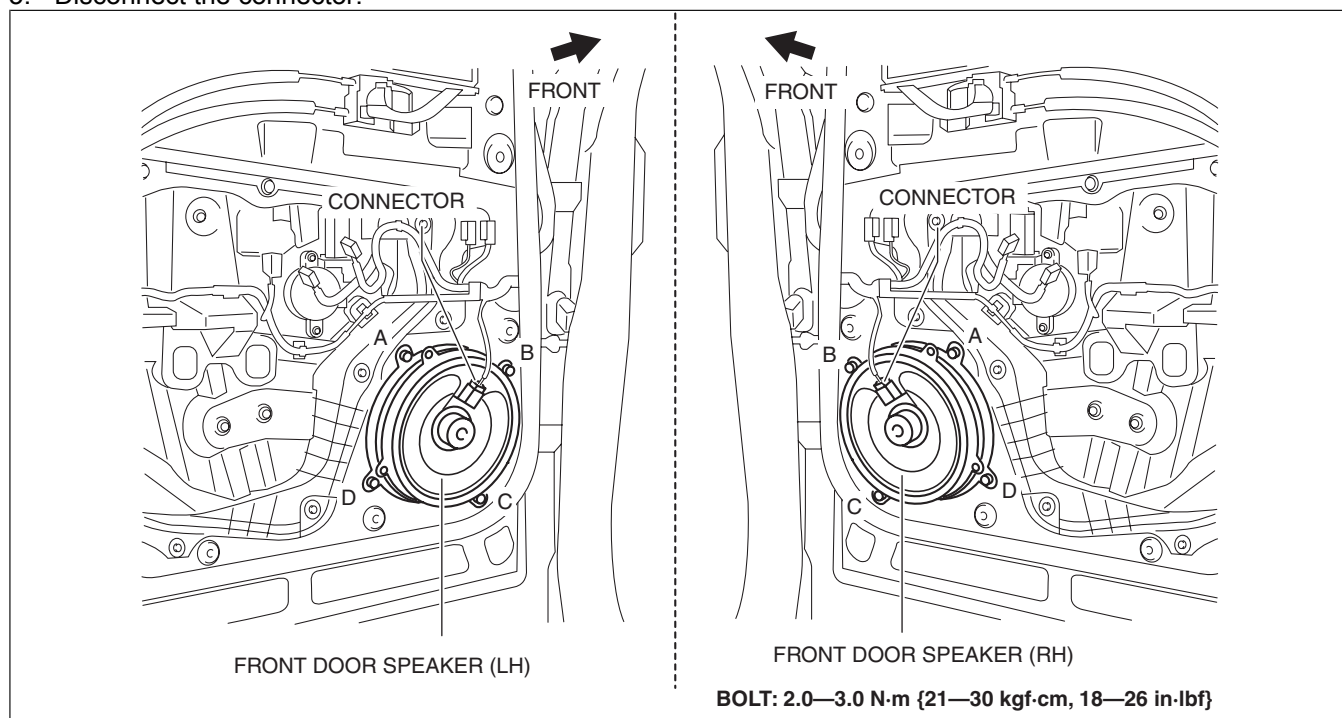

ac5jiw00000143


4. Remove the bolts in alphabetical order.

5. Pull the front door speaker in the direction of the arrow shown in the figure and remove it while detaching the pins.

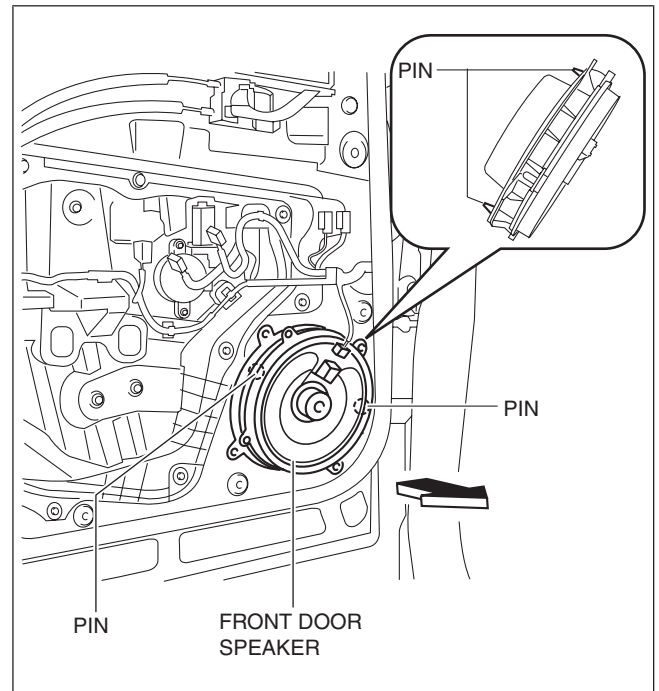

ac5wzw00003602

6. Remove the screws.
7. Remove the front door speaker from the bracket.
8. Install in the reverse order of removal.

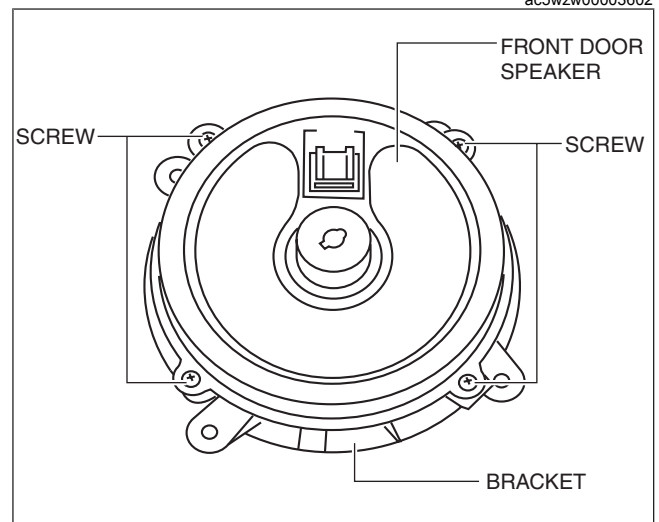

ac5jjw00000145