


## HEADLIGHT LEVELING ACTUATOR OPERATION CHECK MODE [ADAPTIVE FRONT LIGHTING SYSTEM (AFS)]

id09021n961000

1. Connect the M-MDS to the DLC-2.
2. Switch the ignition ON (engine off or on).
3. Verify that AFS OFF indicator light is illuminated for **3 s** and then turned off.
4. Turn on the headlights.
5. After vehicle identification, select in the following order from the M-MDS initial screen.
  - (1) "Electrical"
  - (2) "ExteriorLighting"
  - (3) "Headlamp"
  - (4) "Auto Leveling Sensor"
  - (5) "Auto Leveling Actuator Test"
6. Verify that the headlight optical axis lowers from the current position and returns the original position after **2 s**.
  - If the headlight leveling actuator does not operate normally, replace the front combination light. (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)

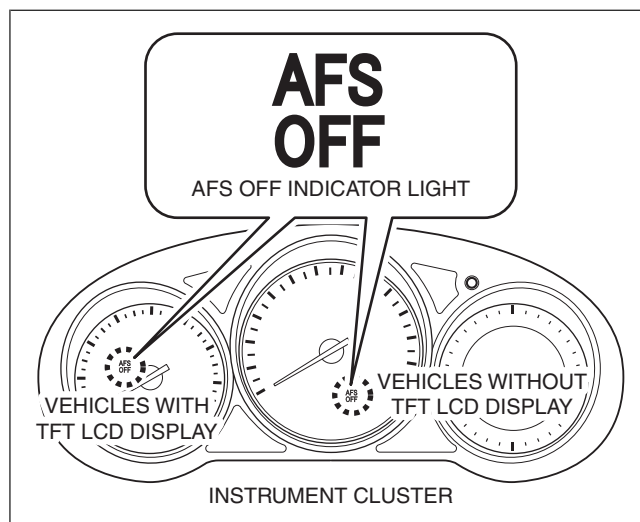

ac5wzw00002124