

UP SWITCH [FW6A-EL, FW6AX-EL]


id0517h2360400

Purpose/Function

- The up switch detects the shift up operation of the selector lever.
- The up switch signal is sent to the TCM via CAN and is used for manual shift control and engine-transaxle integration control.

Construction


- The up switch is installed to the selector lever.
- The up switch is an on/off type switch.

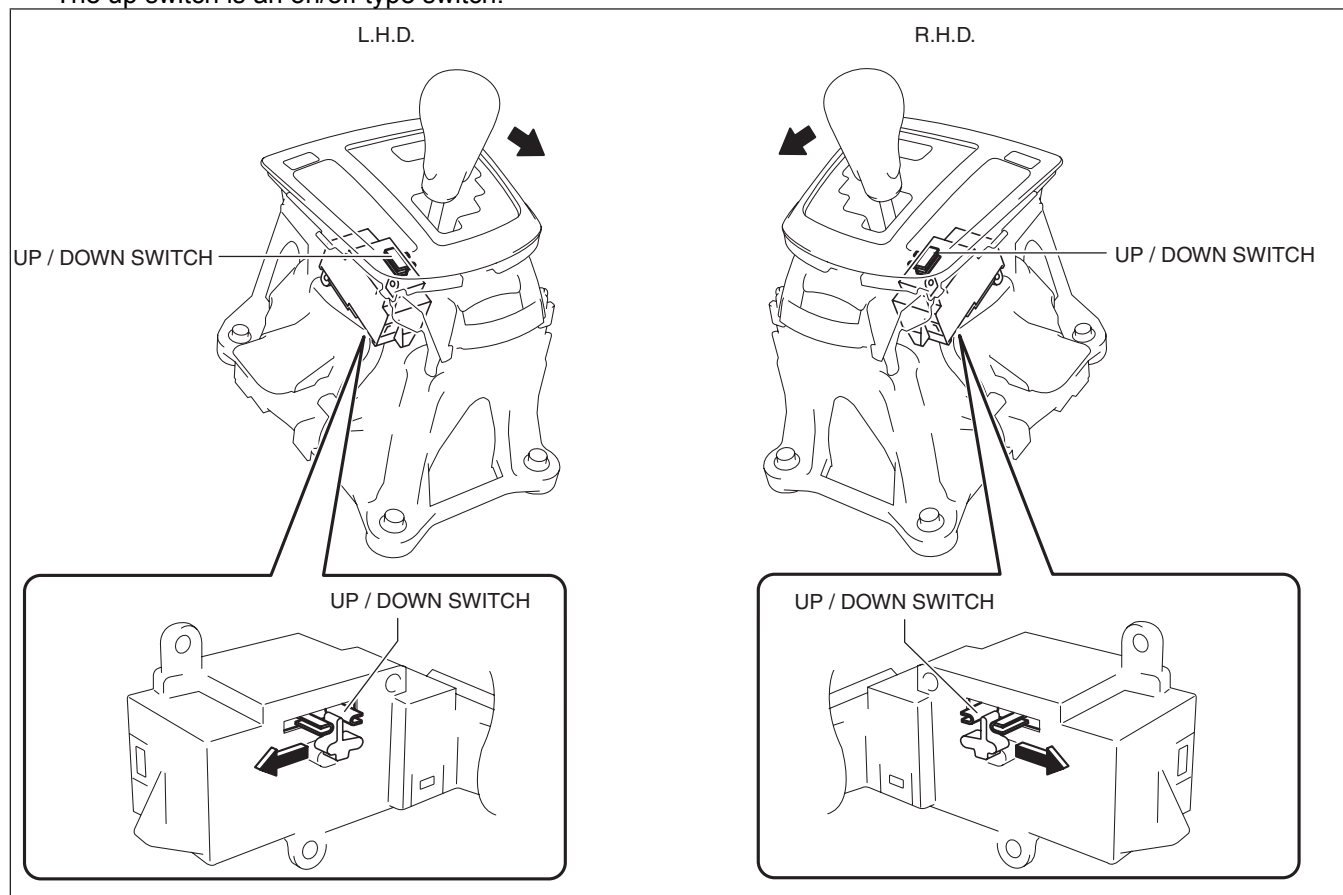

ac5wzn00000918

Operation

- When the selector lever is in the shift up position (+), the up switch contact point closes.
- Based on the opening and closing of the up switch contact point, the TCM detects that the shift up has been operated.

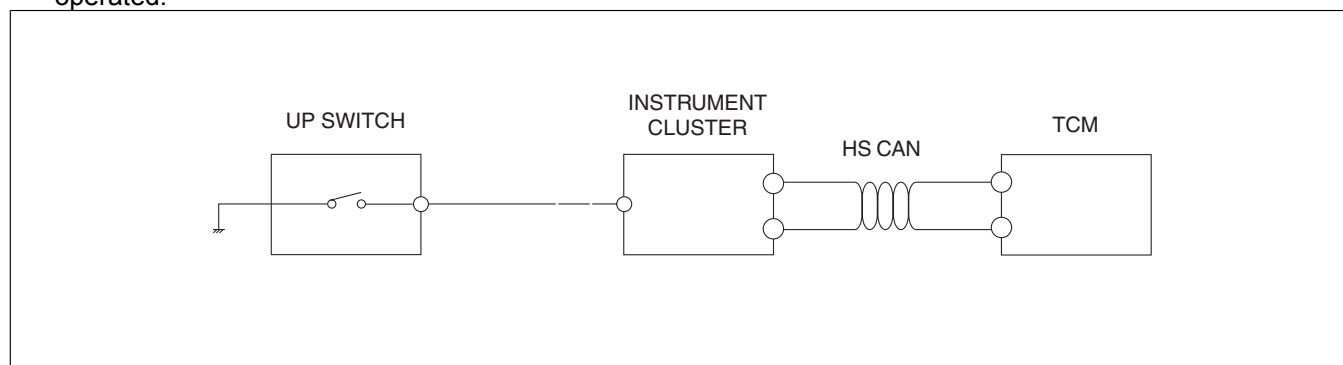

ac5uun00000563