


## FRONT DOOR SPEAKER INSPECTION

id092000802300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION)
  - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
3. Disconnect the front door speaker connector. (See FRONT DOOR SPEAKER REMOVAL/INSTALLATION.)
4. Verify that the resistance and continuity between the front door speaker terminals is as indicated in the table.

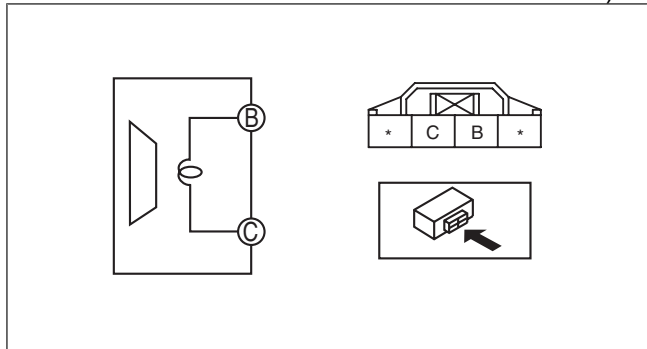

adejjw00001161

- If not as indicated in the table, replace the front door speaker.

### Without Bose®

○○ : Resistance

Test condition	Terminal		Resistance (ohm)
	A	B	
Under any condition	○○	○○	3.4—4.6

am5ezw00006717

### With Bose®

○○ : Resistance

Test condition	Terminal		Resistance (ohm)
	B	C	
Under any condition	○○	○○	1.25

ac5wzw00005910