


## FRONT CONSOLE REMOVAL/INSTALLATION

id091700457400


### Caution

- Affix protective tape to the position shown in the figure.

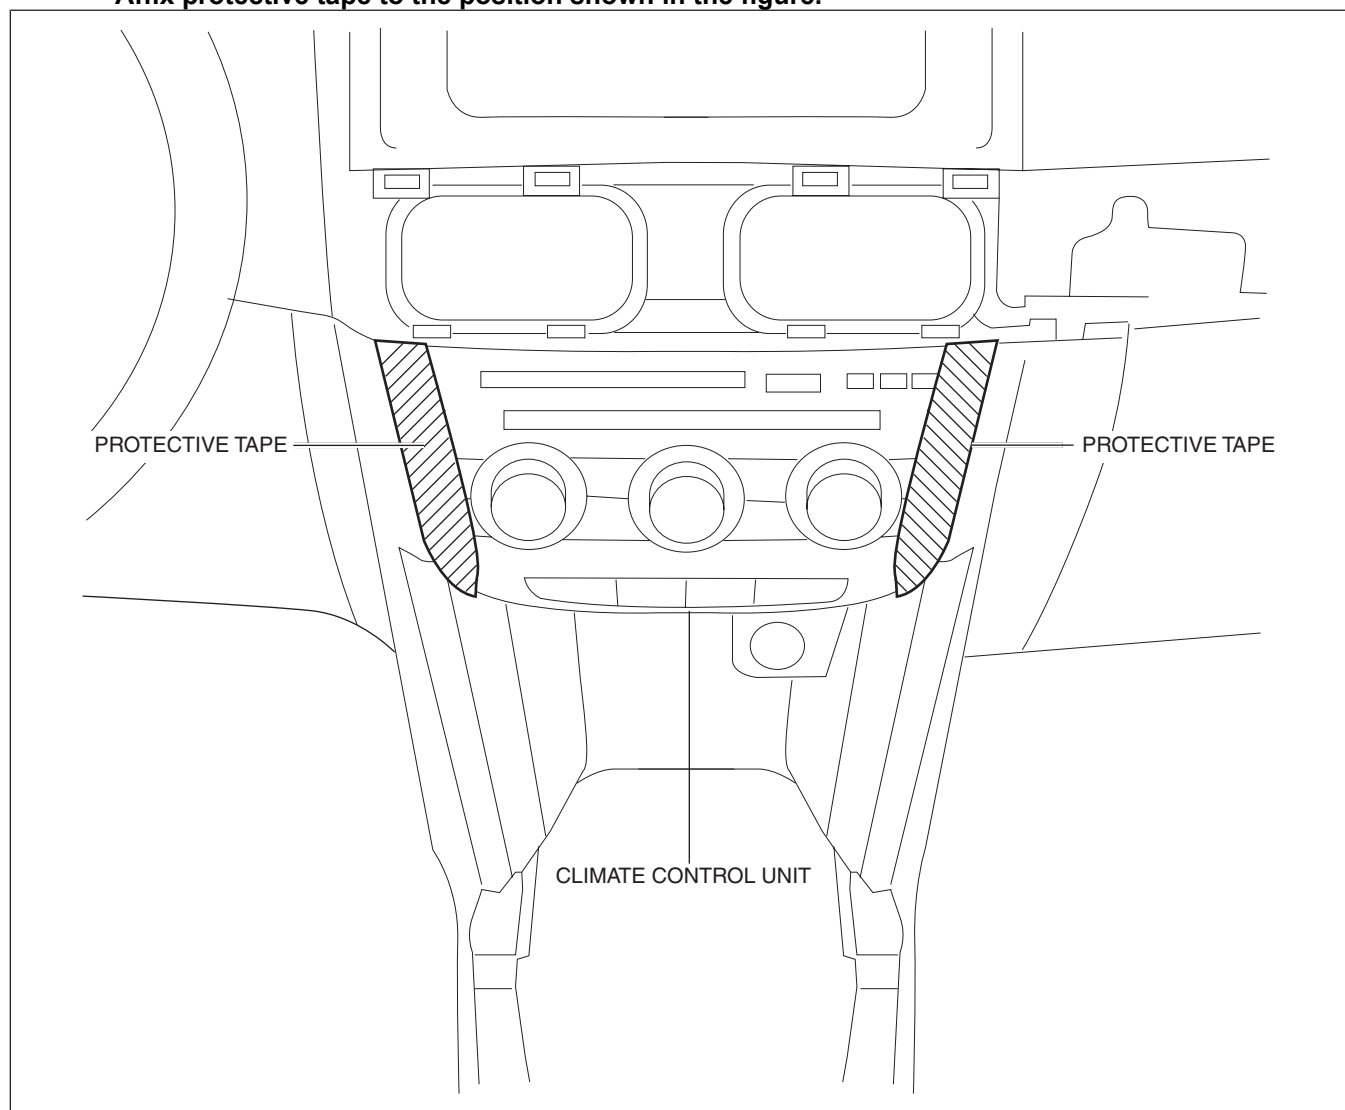

ac5uuw00001739


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
  - (2) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
  - (3) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
  - (4) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
  - (5) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
  - (6) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
  - (7) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
3. Take the shaded area shown in the figure, and remove the front console in the direction of the arrow in the order of (1), (2), (3), (4) while detaching clips A, clips B, hooks C, guides D.

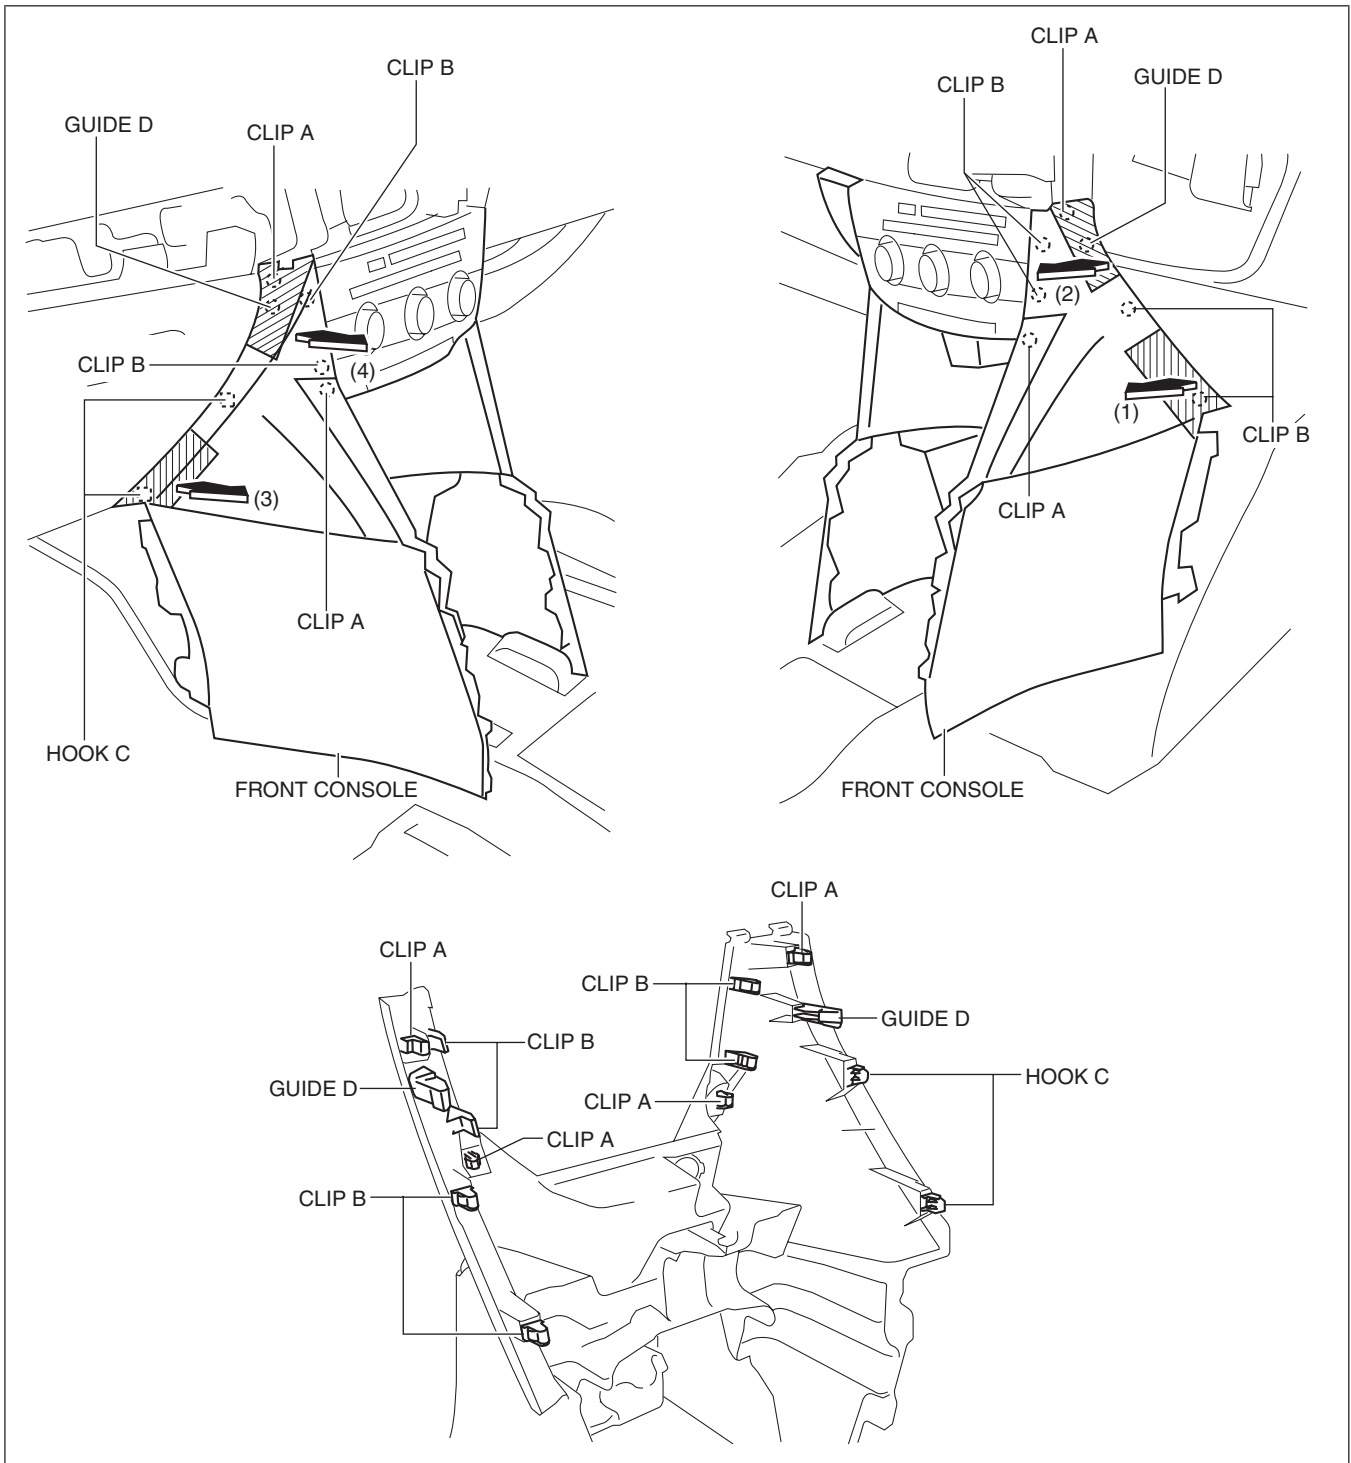


ac5uuw00001740

4. Disconnect the front accessory socket connector.
5. Pull the front console in the direction of the arrow in the order of (5), (6) and remove the front console while detaching the selector lever (ATX) or shift lever (MTX).

## ATX

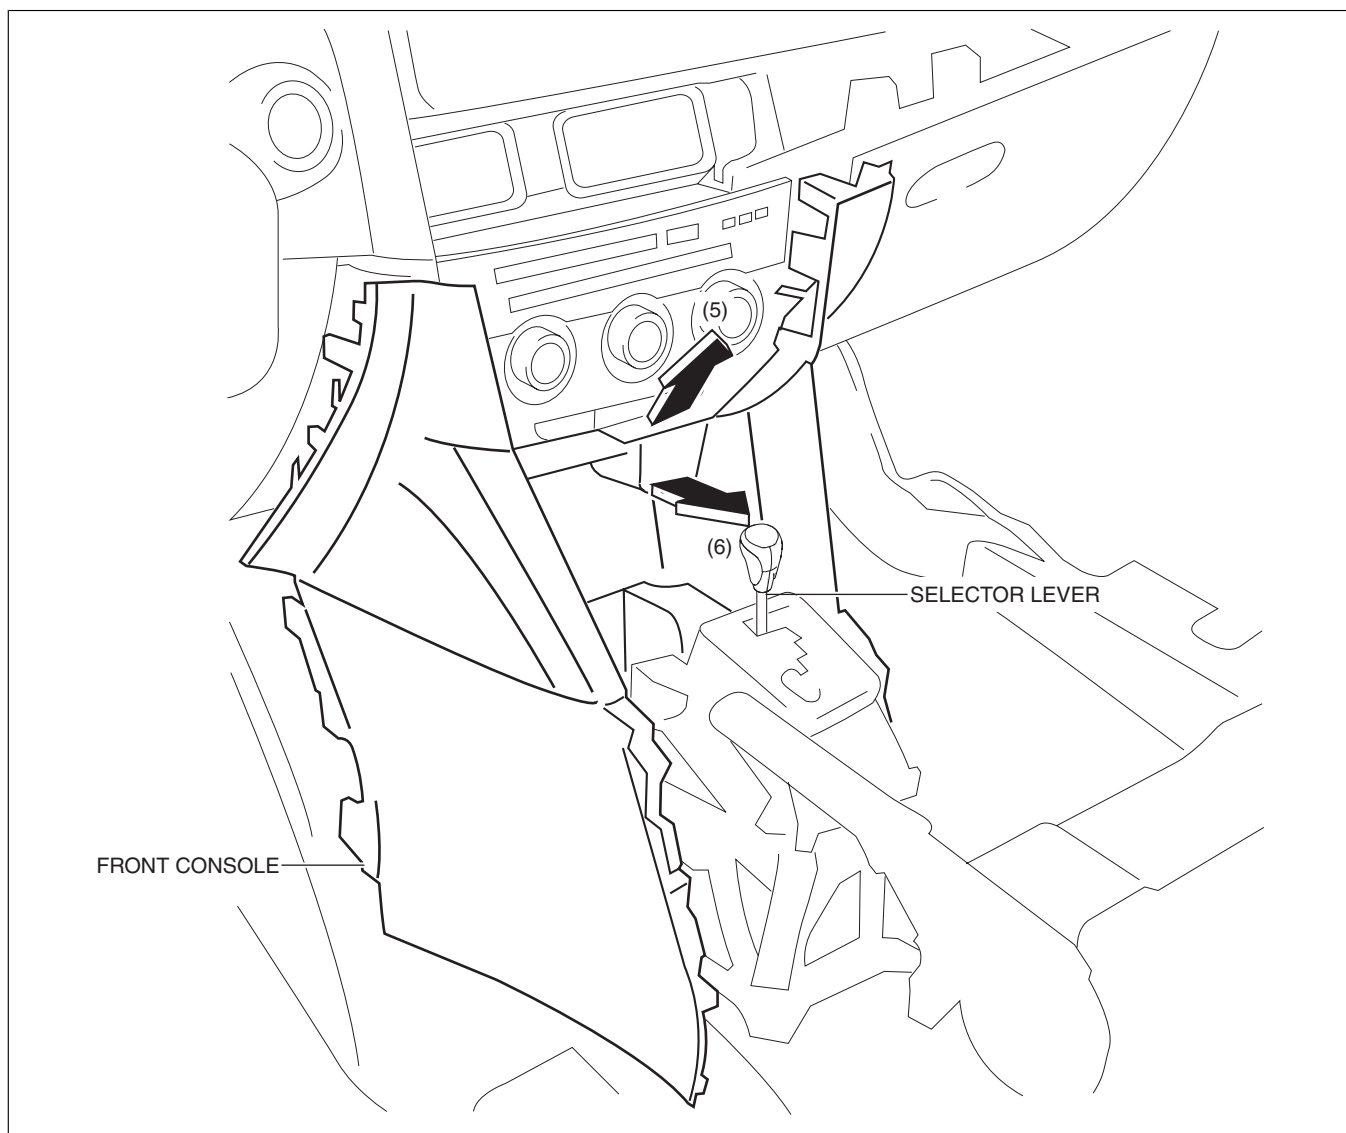

ac5wzw00004615

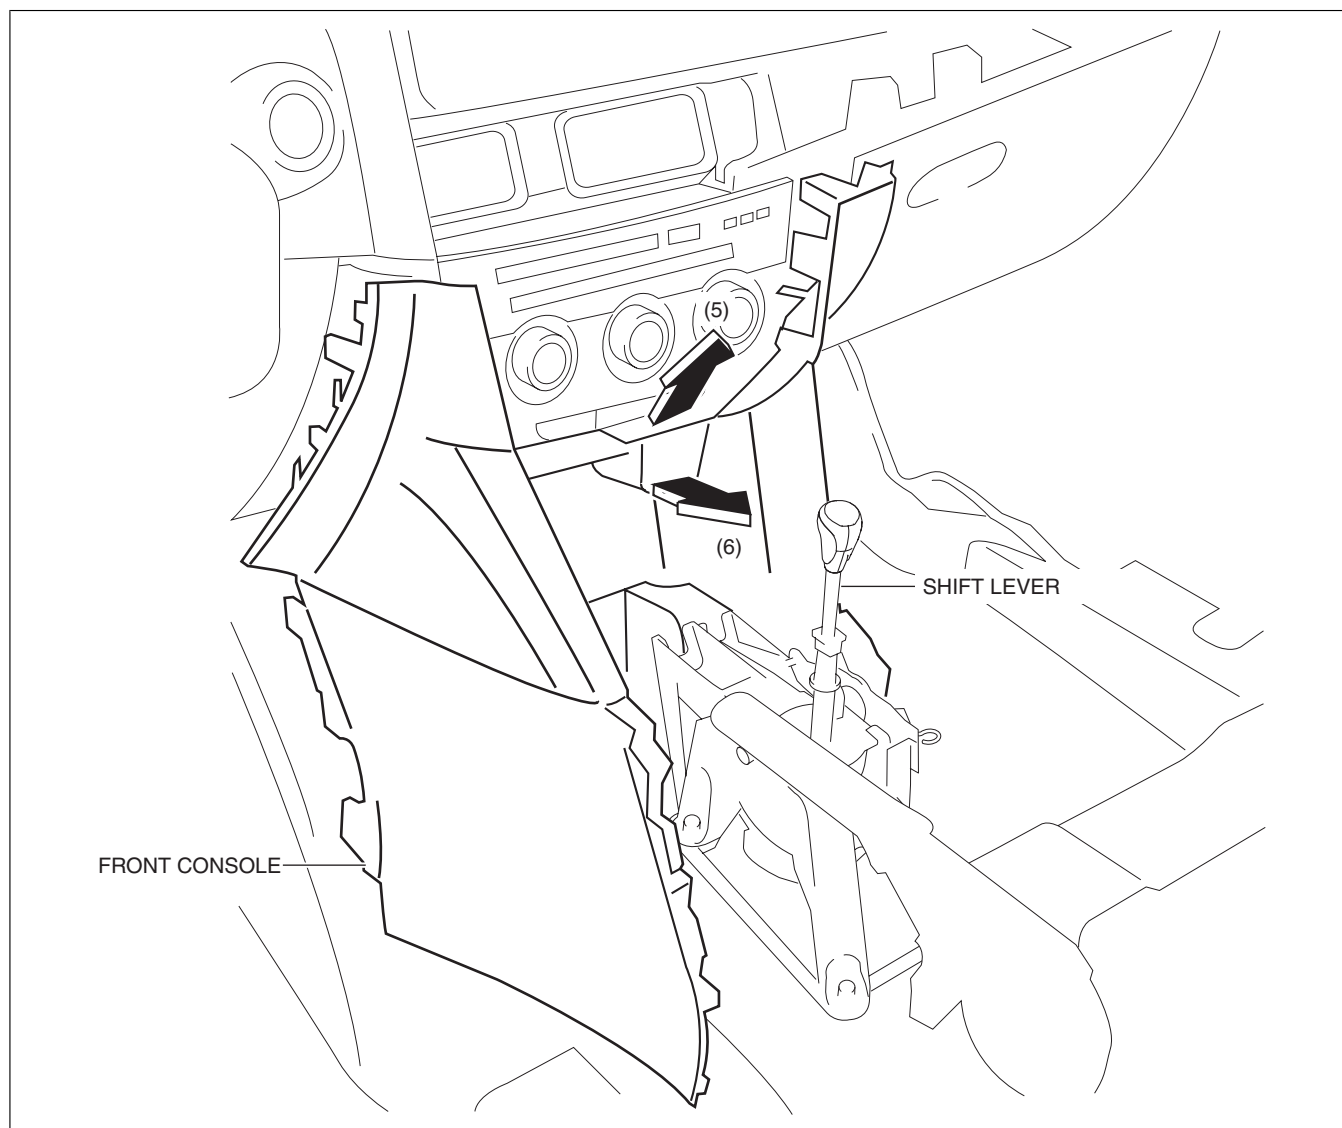

6. Install in the reverse order of removal.

ac5wzw00004616