


B-PILLAR LOWER TRIM REMOVAL/INSTALLATION

id091700802000

1. Remove the front scuff plate. (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
2. Remove the rear scuff plate. (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
3. Partially peel back the seaming welt.
4. Take the shaded area shown in the figure, and pull the B-pillar lower trim in the direction of the arrow in the order of (1), (2) while detaching hooks A, pins B.

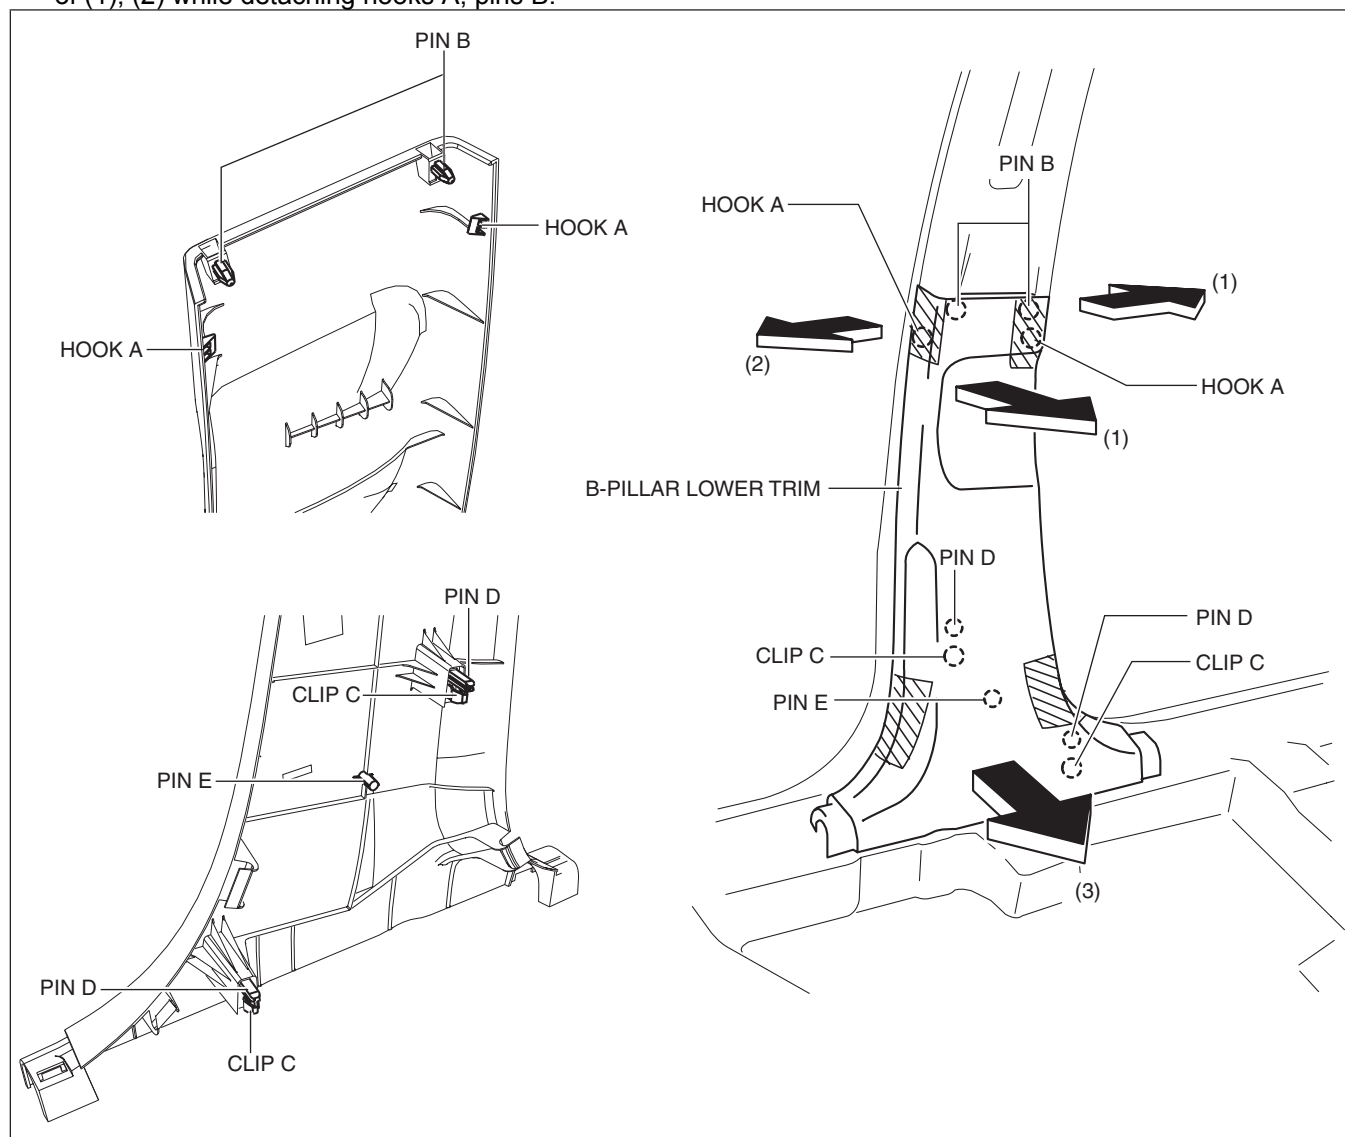

5. Take the shaded area shown in the figure, and pull the B-pillar lower trim in the direction of the arrow (3) while detaching the clips C, pin D, pin E.
6. Install in the reverse order of removal.

ac5uuw00001766