


BLOWER MOTOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER]


id0740a1800900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the dashboard under cover. (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
3. Disconnect the connector.

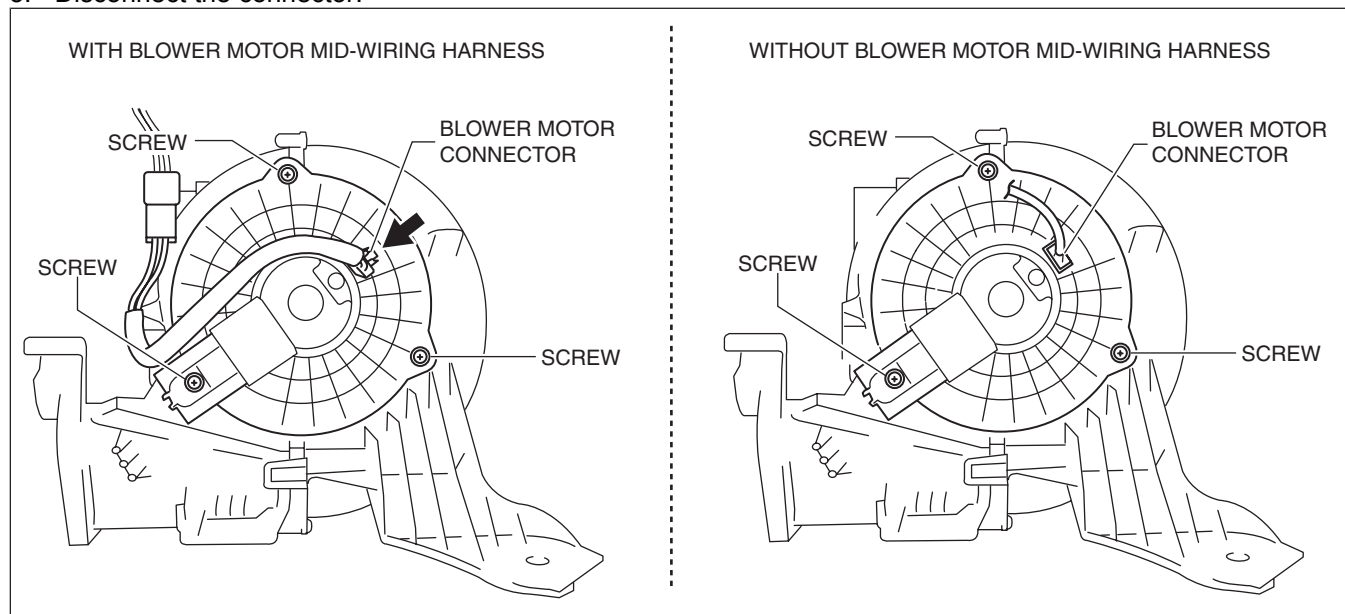

ac5wzw00006476

4. Remove the screws.
5. Remove the blower motor.
6. Install in the reverse order of removal.

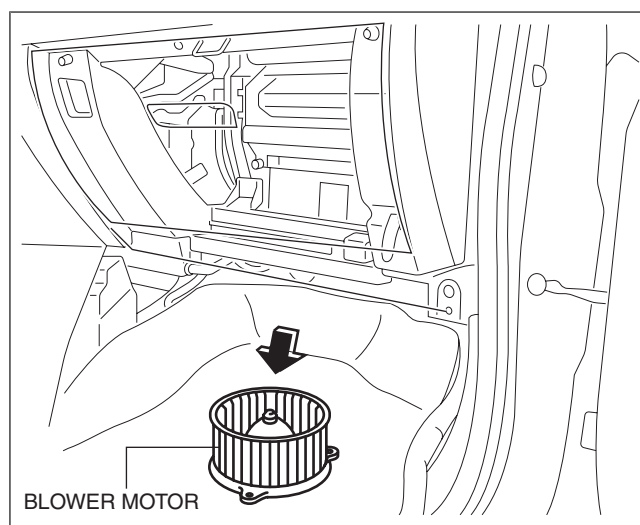

ac5wzw00001843