

OIL STRAINER [SKYACTIV-D 2.2]


id0111s6002400

Purpose, Function

- The oil strainer suctions the engine oil in the oil pan using the oil pump vacuum. The engine oil is filtered by the internal filter at that time.


Construction

- The oil strainer is installed on the suction port of the oil pump.

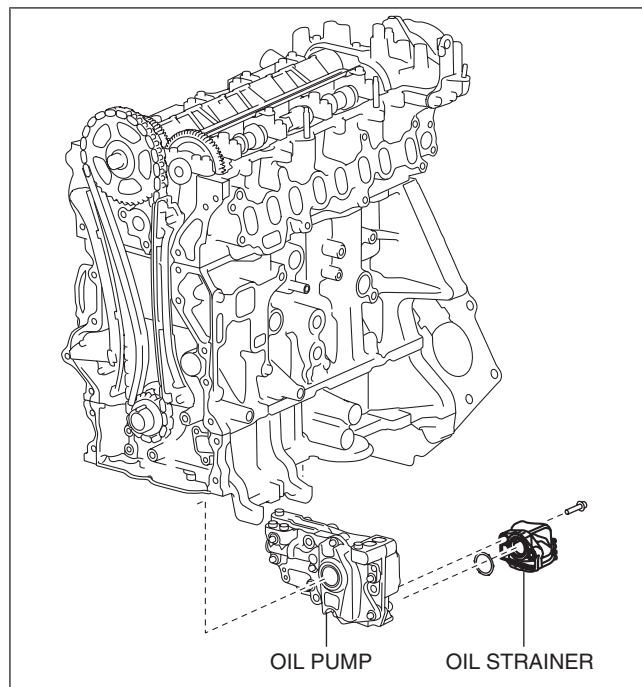

ac5wzn00001814

- The oil strainer has a filter in the inside.

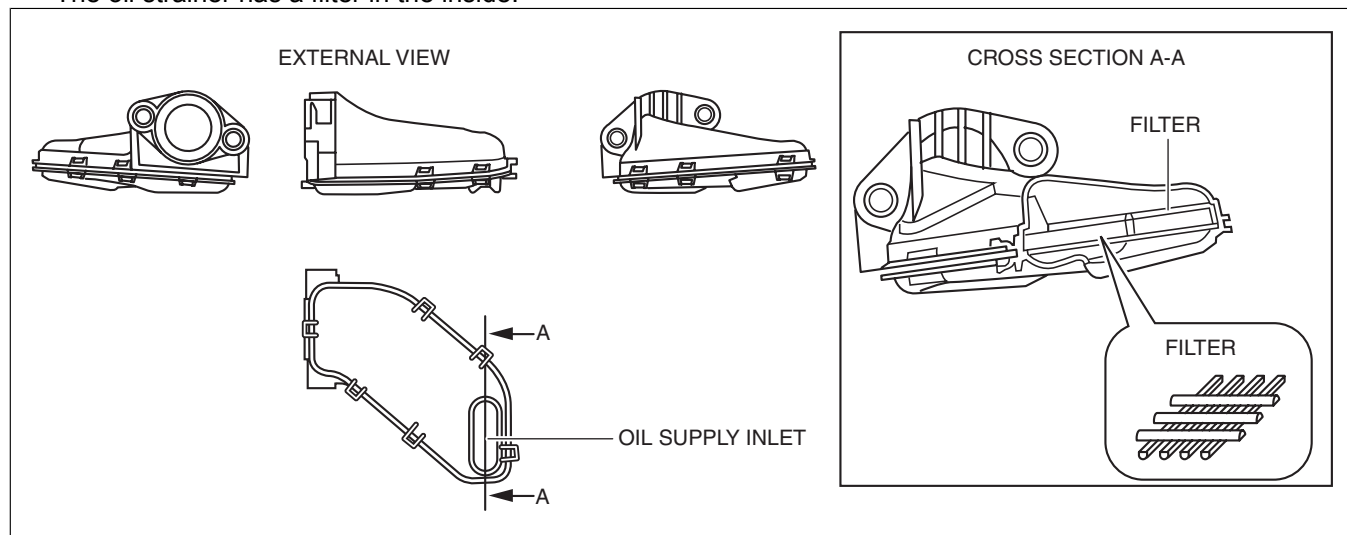

ac5wzn00001815