

---


## WHEEL HUB, STEERING KNUCKLE INSPECTION

id031100800300

### Wheel Bearing Excessive Play Inspection

1. Install the magnetic base and dial gauge as shown in the figure and measure the wheel bearing axial excessive play.
  - If it exceeds the maximum specification, replace the wheel hub bearing.

**Front wheel bearing maximum play**  
**0.05 mm {0.002 in}**

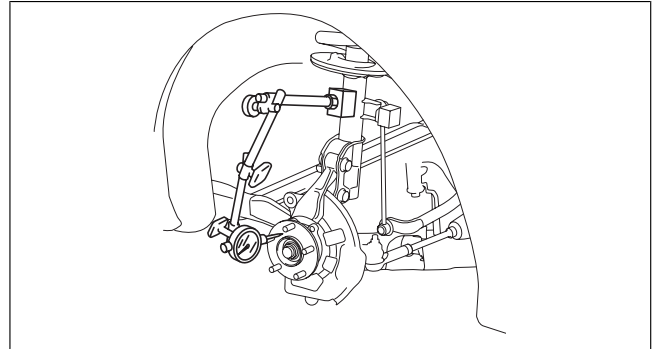

ac5wzw00002553