


AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER]

id0740a1801400

L.H.D.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Disconnect the air intake actuator connector.
4. Remove the screw, then remove the air intake actuator.
5. Install in the reverse order of removal.

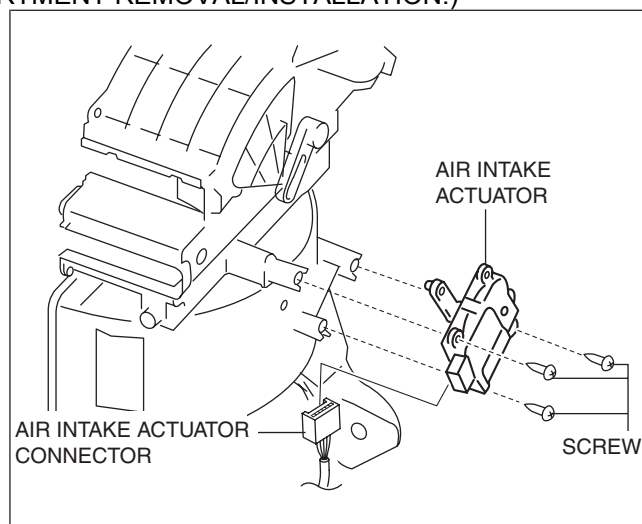

ac5wzw00001844

R.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Front scuff plate (passenger-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Front side trim (passenger-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
 - (4) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
 - (5) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (6) Lower panel (passenger-side) (See LOWER PANEL REMOVAL/INSTALLATION.)
 - (7) Front heat duct (passenger-side) (See FRONT HEAT DUCT REMOVAL/INSTALLATION.)
3. Remove the blower unit. (See BLOWER UNIT REMOVAL/INSTALLATION.)
4. Remove the screw, then remove the air intake actuator.
5. Install in the reverse order of removal.

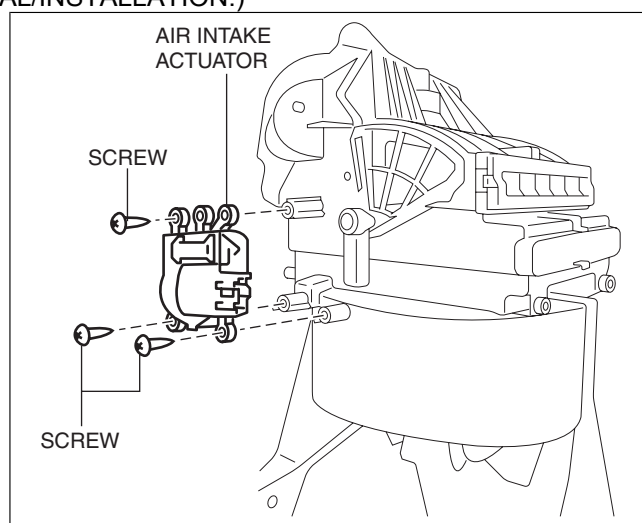

ac5wzw00001845