

HEATER CORE


id071100290200

Purpose

- The heater core heats passing air.

Function


- A portion of the engine coolant is taken into the heater core to heat the air passing through the heater core.

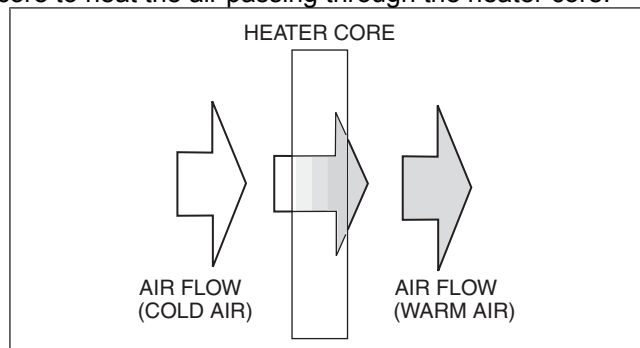

ac5wzn00000765

Construction


- The heater core consists of a tube which passes engine coolant, and the heat radiation fin.

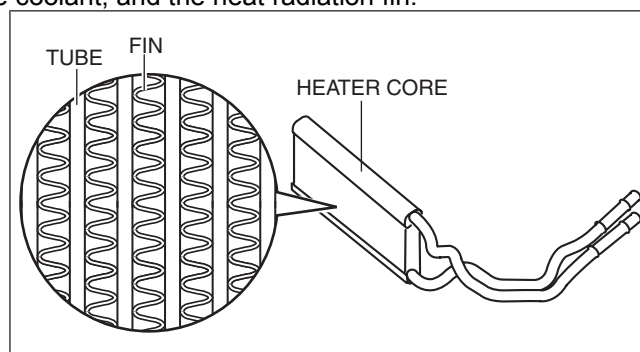

ac5wzn00000766

Operation

- The engine coolant warmed by the engine heat is sent to the heater core.
- The air blown by the blower motor is warmed up by heat exchange when it passes through the heat radiation fin of the heater core.

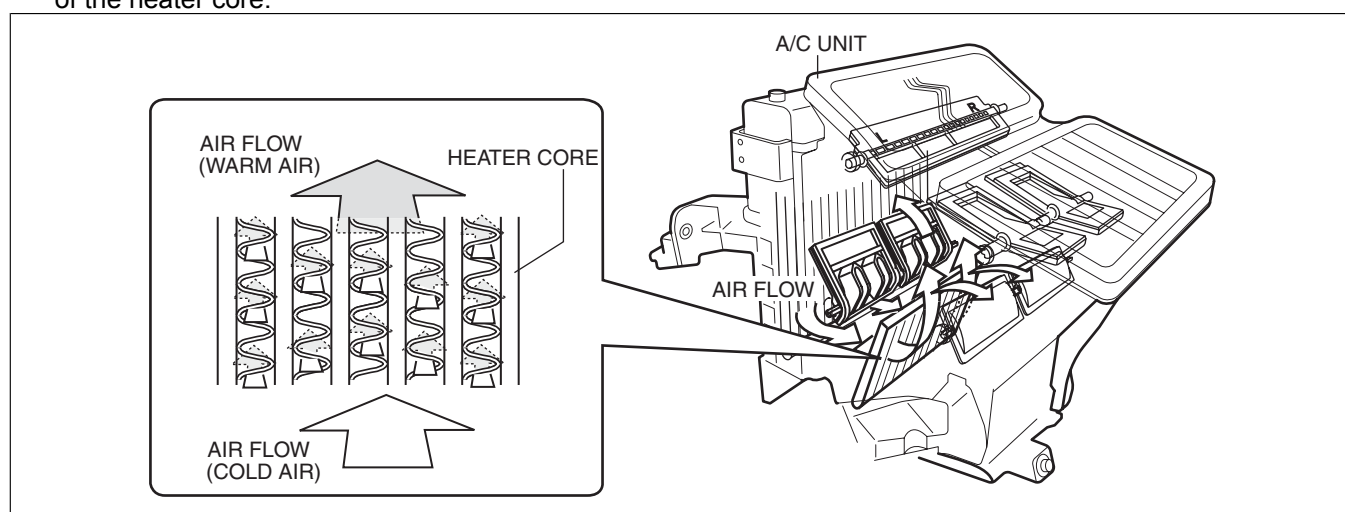

ac5wzn00000767

Fail-safe

- Function not equipped.