


SIDE TURN LIGHT REMOVAL/INSTALLATION


id091800811500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Outer mirror glass (See OUTER MIRROR GLASS REMOVAL.)
 - (2) Outer mirror garnish (upper side) (See OUTER MIRROR GARNISH REMOVAL/INSTALLATION.)
3. Remove the screws.

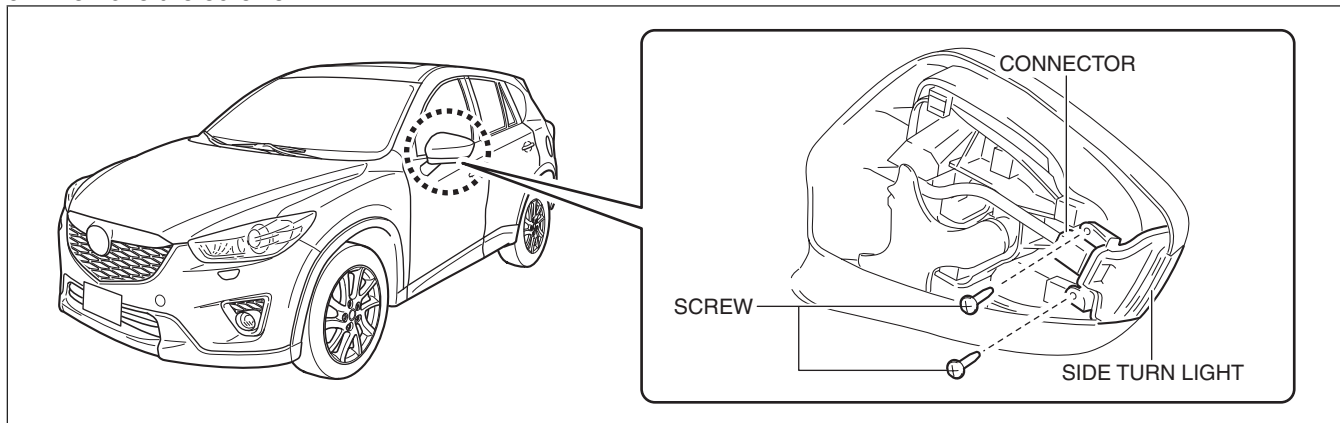

ac5wzw00003031

4. Disconnect the connector.
5. Remove the side turn light.
6. Install in the reverse order of removal.

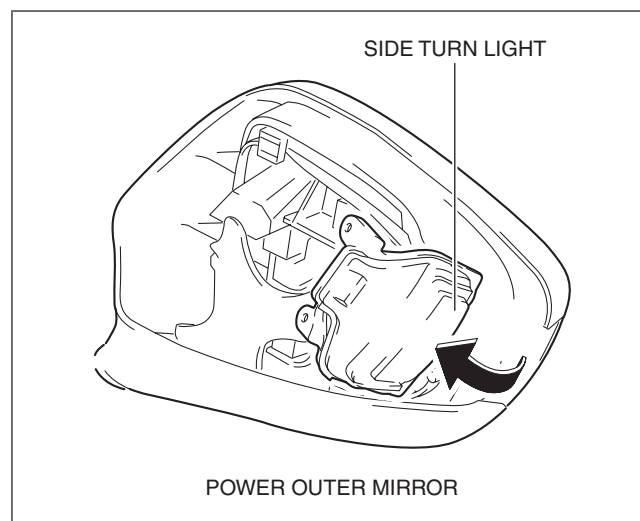

ac5wzw00003032