




REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION

id041500800100

1. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)
2. Remove the trunk end trim. (See TRUNK END TRIM REMOVAL/INSTALLATION.)
3. Remove the rear scuff plate. (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
4. Remove the trunk side trim. (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
5. Disconnect the rear ABS wheel-speed sensor connector.
6. Press the rear ABS wheel-speed sensor tabs and press out the sensor toward the outside of the vehicle.
7. Remove in the order indicated in the table.
8. Install in the reverse order of removal.
9. After installation, verify that there is no twisting in the rear ABS wheel-speed sensor.

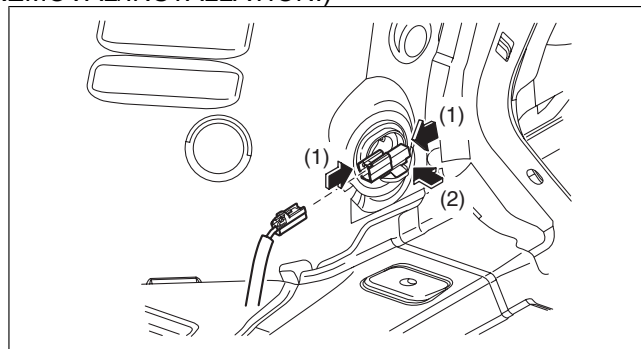

ac5wzw00000223

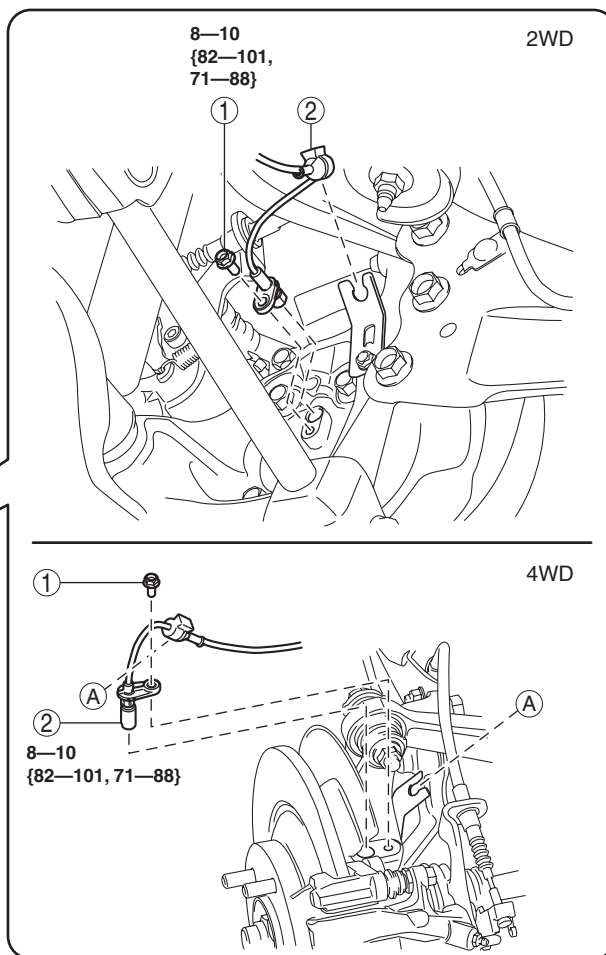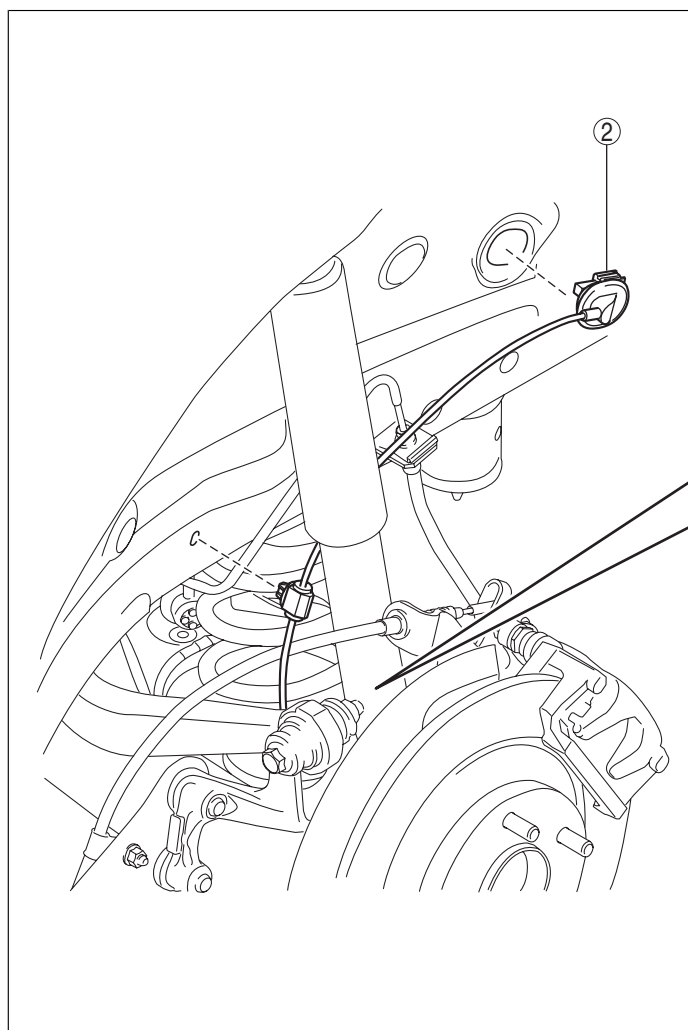

N·m {kgf·cm, in·lbf}

ac5wzw00000224

1	Bolt
---	------

2	Rear ABS wheel-speed sensor (See Rear ABS Wheel-speed Sensor Removal Note.)
---	--

Rear ABS Wheel-speed Sensor Removal Note

1. Pull aside the mudguard and remove the rear ABS wheel-speed sensor.