

REAR DOOR LOCK-LINK SWITCH

id091400110900

Purpose


- Switches on/off in conjunction with the rear door lock knob lock/unlock, and detects the rear door lock/unlock condition by the voltage which is changed by the rear body control module (RBCM).

Function

- The door lock-link switch contact point changes in conjunction with the rear door lock knob lock/unlock operation.

Construction

- The rear door lock knob and door lock-link switch are connected by the door lock-link cable, and are built into the rear door latch and lock actuator.

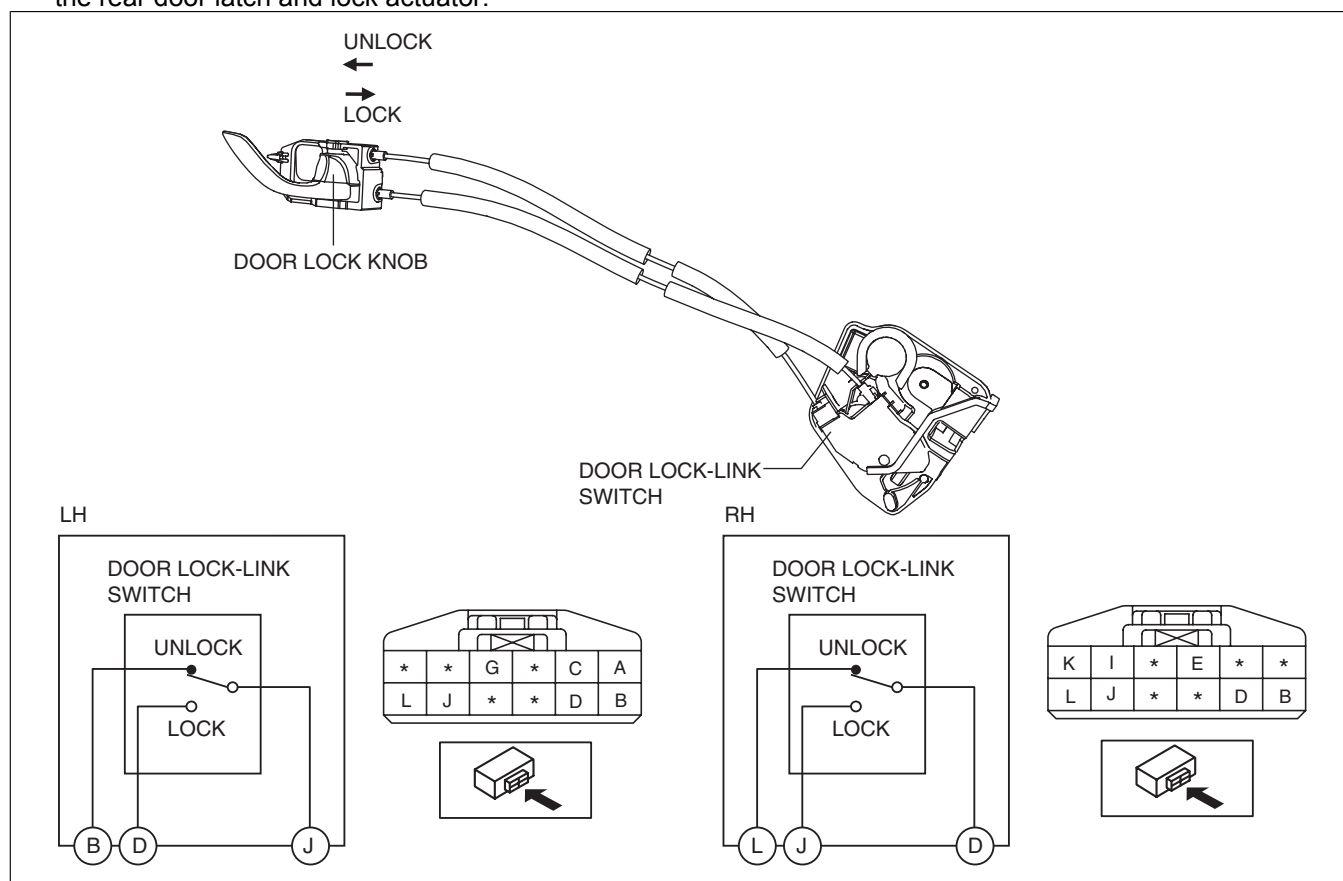

ac5wzn00001484

Operation

Lock operation

- When the rear door lock knob is turned to the lock position, the door lock-link cable is pressed, and the door lock-link switch is switched to the lock side.

Unlock operation

- When the rear door lock knob is turned to the unlock position, the door lock-link cable is pulled, and the door lock-link switch is switched to the unlock side.

Fail-safe

- Function not equipped.