


REAR DRAIN HOSE REMOVAL/INSTALLATION


id091500443900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Sunroof seaming welt (See SUNROOF UNIT REMOVAL/INSTALLATION.)
 - (2) A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (3) Map light (See MAP LIGHT REMOVAL/INSTALLATION.)
 - (4) Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
 - (5) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (6) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (7) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
 - (8) Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
 - (9) Upper anchor installation bolt on the seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
 - (10) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
 - (11) Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
 - (12) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
 - (13) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
 - (14) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
 - (15) D-pillar trim (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (16) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (17) Headliner (See HEADLINER REMOVAL/INSTALLATION.)
3. Disconnect the front drain hose from the sunroof frame.

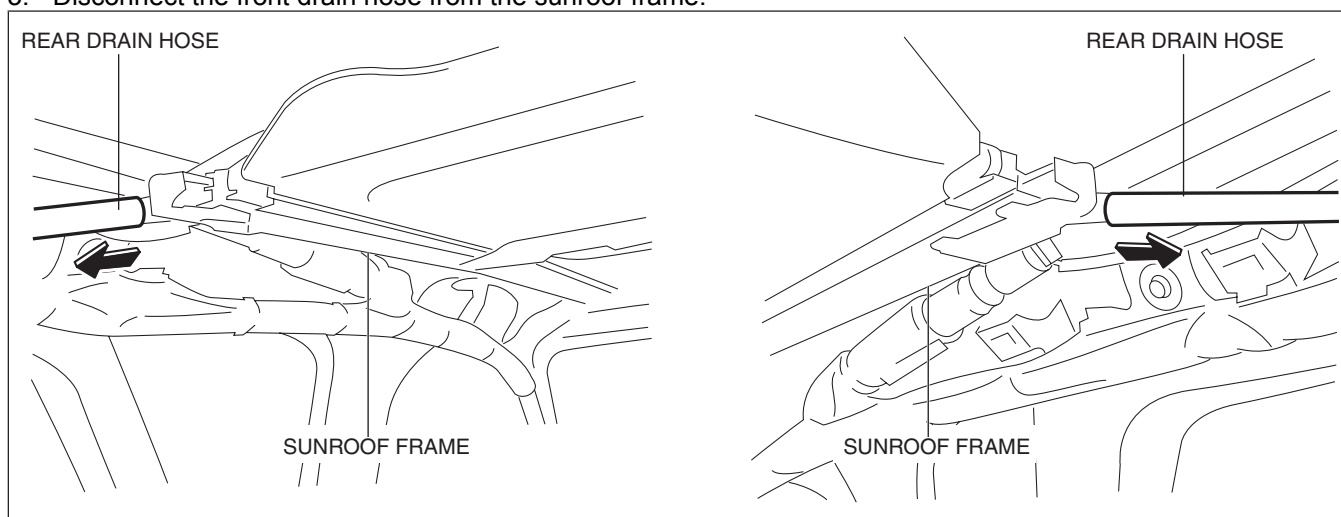

ac5wzw00001722

4. Pull the rear drain hose in the direction of the arrow in the order of (1), (2) shown in the figure from hooks A.

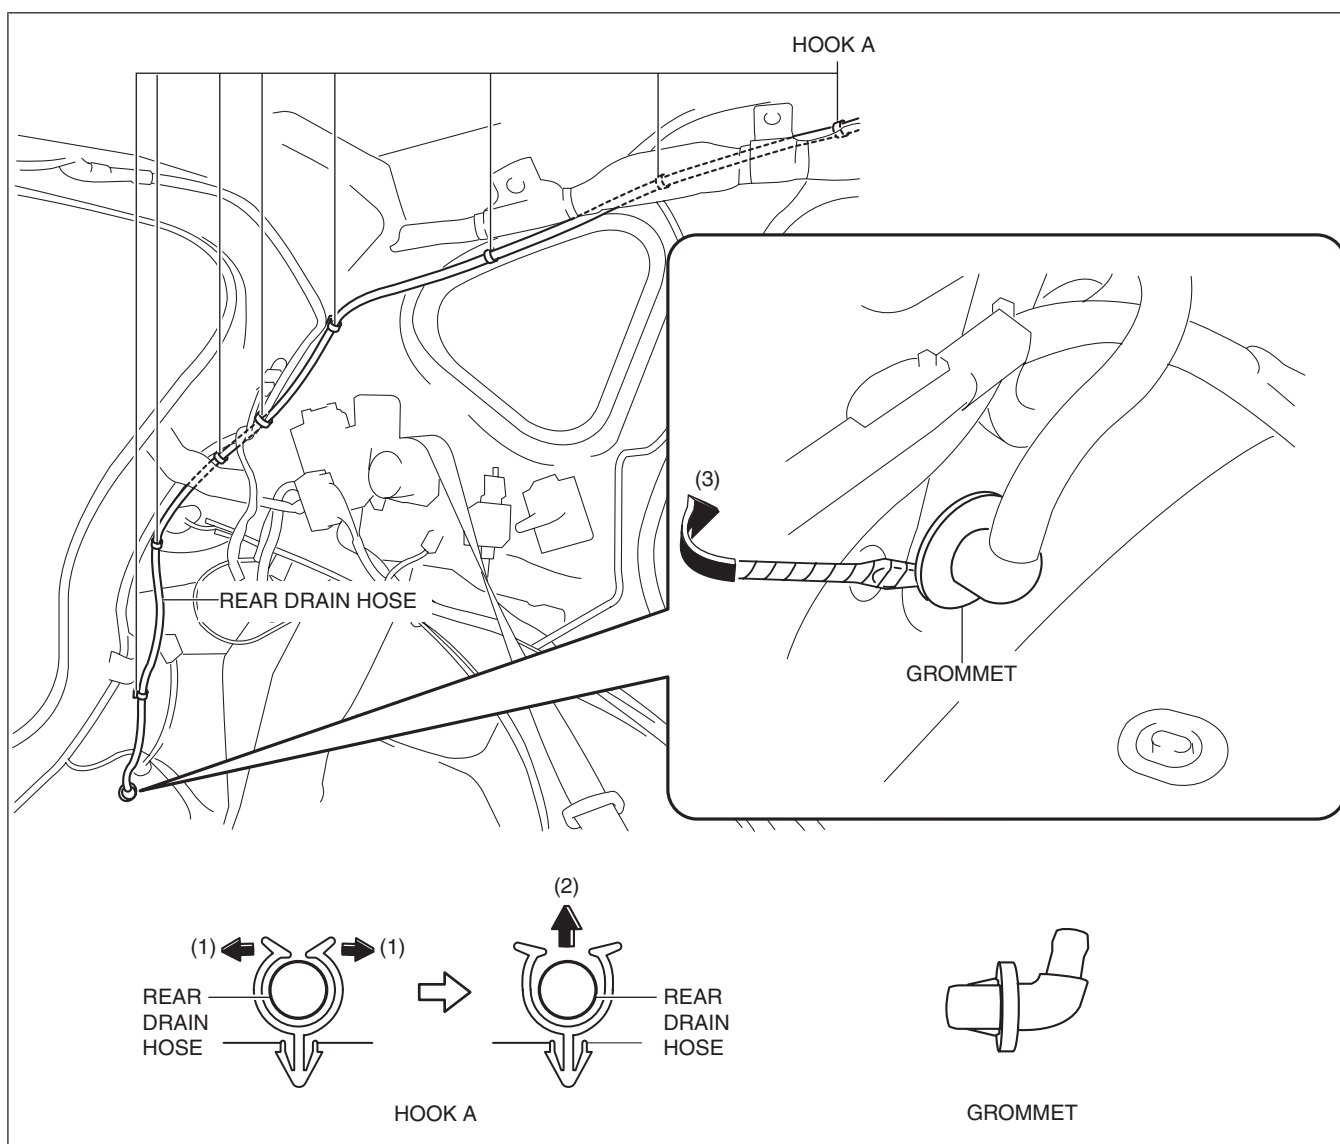

5. Insert a tape-wrapped flathead screwdriver into the position shown in the figure, then remove the grommet in the direction of the arrow (3).
6. Remove the rear drain hose.
7. Install in the reverse order of removal.