


## ON-BOARD DIAGNOSTIC SYSTEM MALFUNCTION INDICATION FUNCTION [GW6A-EL, GW6AX-EL]

id050230280400

### Purpose/Function

- The on-board diagnostic system malfunction indication function notifies the driver of a transaxle malfunction.
- The malfunction indication function notifies the driver of a transaxle malfunction by illuminating the check engine light and automatic transaxle warning light.

### Construction/Operation

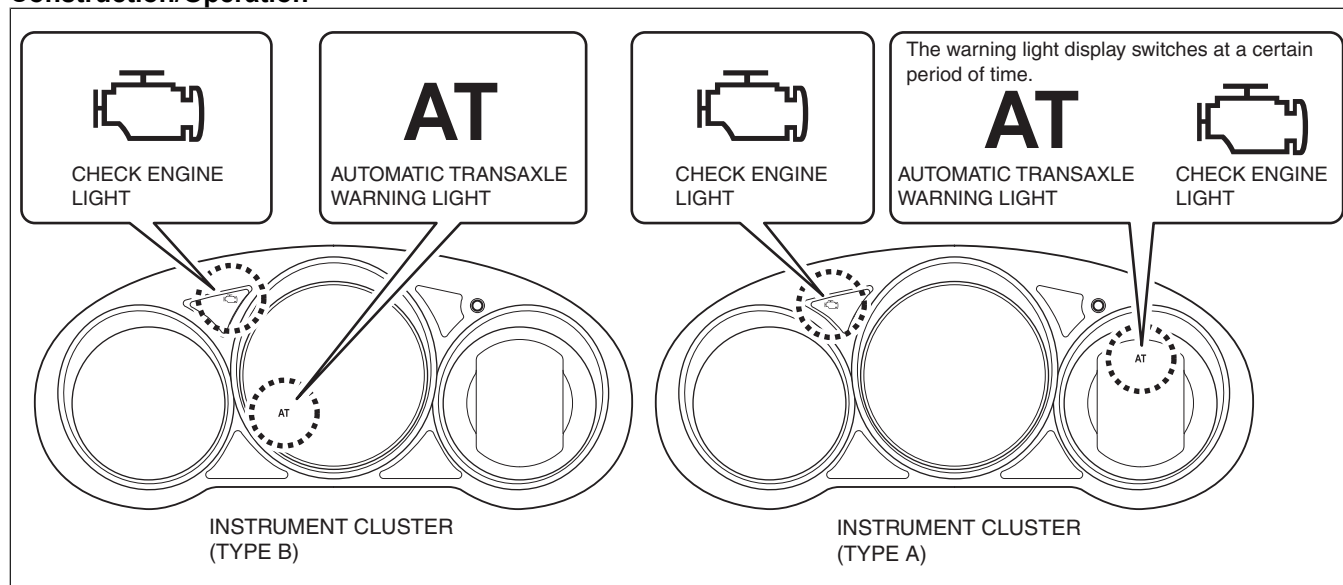

am6zzn00002202