



Engine compartment side
L.H.D.

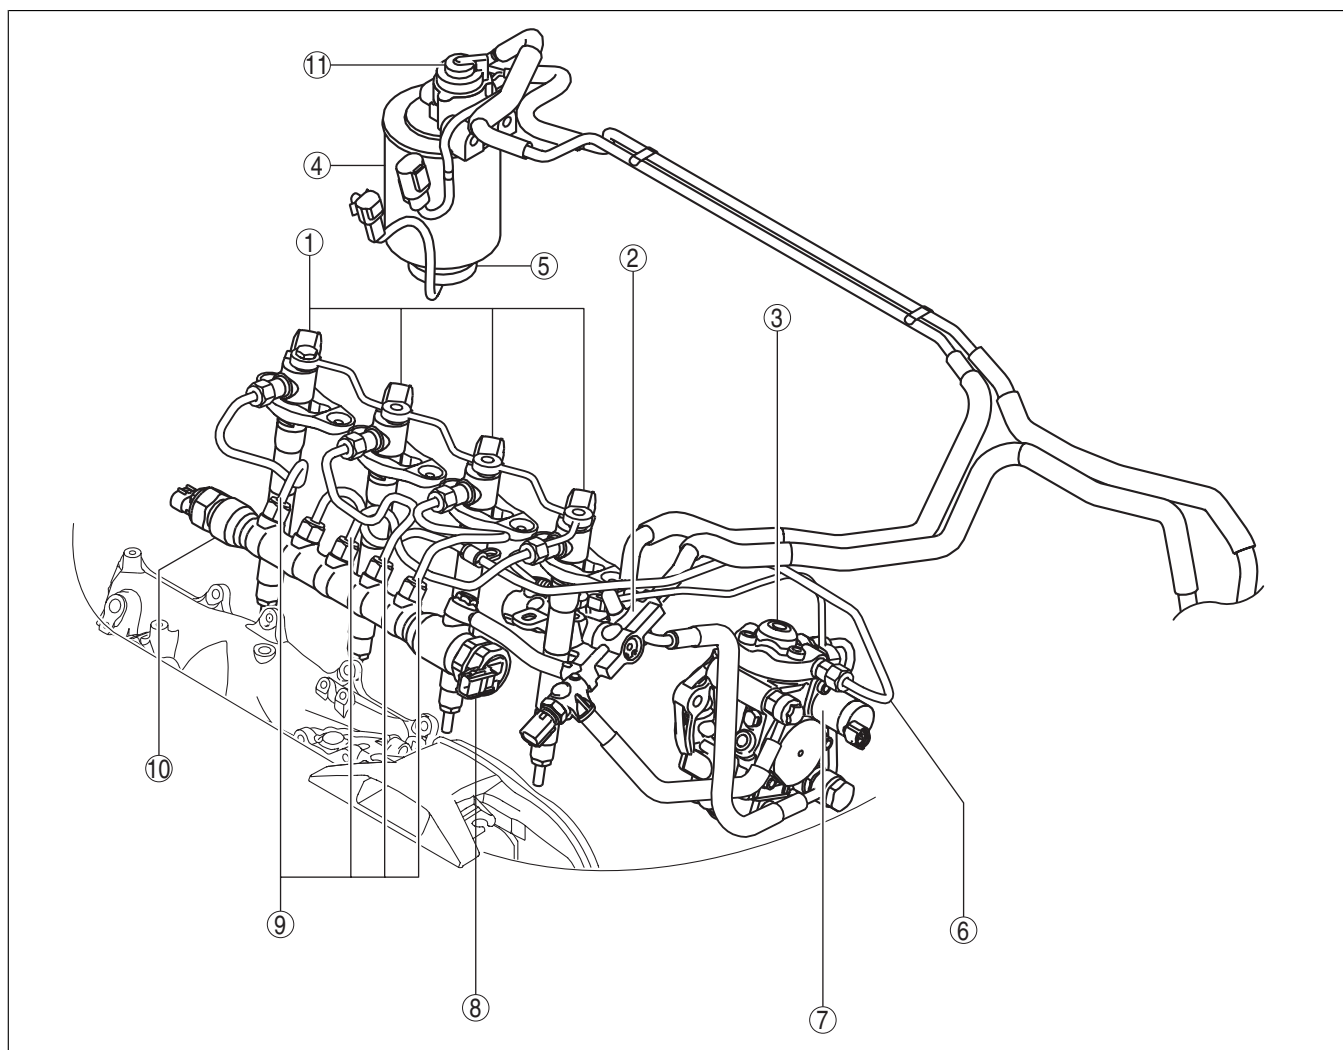

R.H.D.

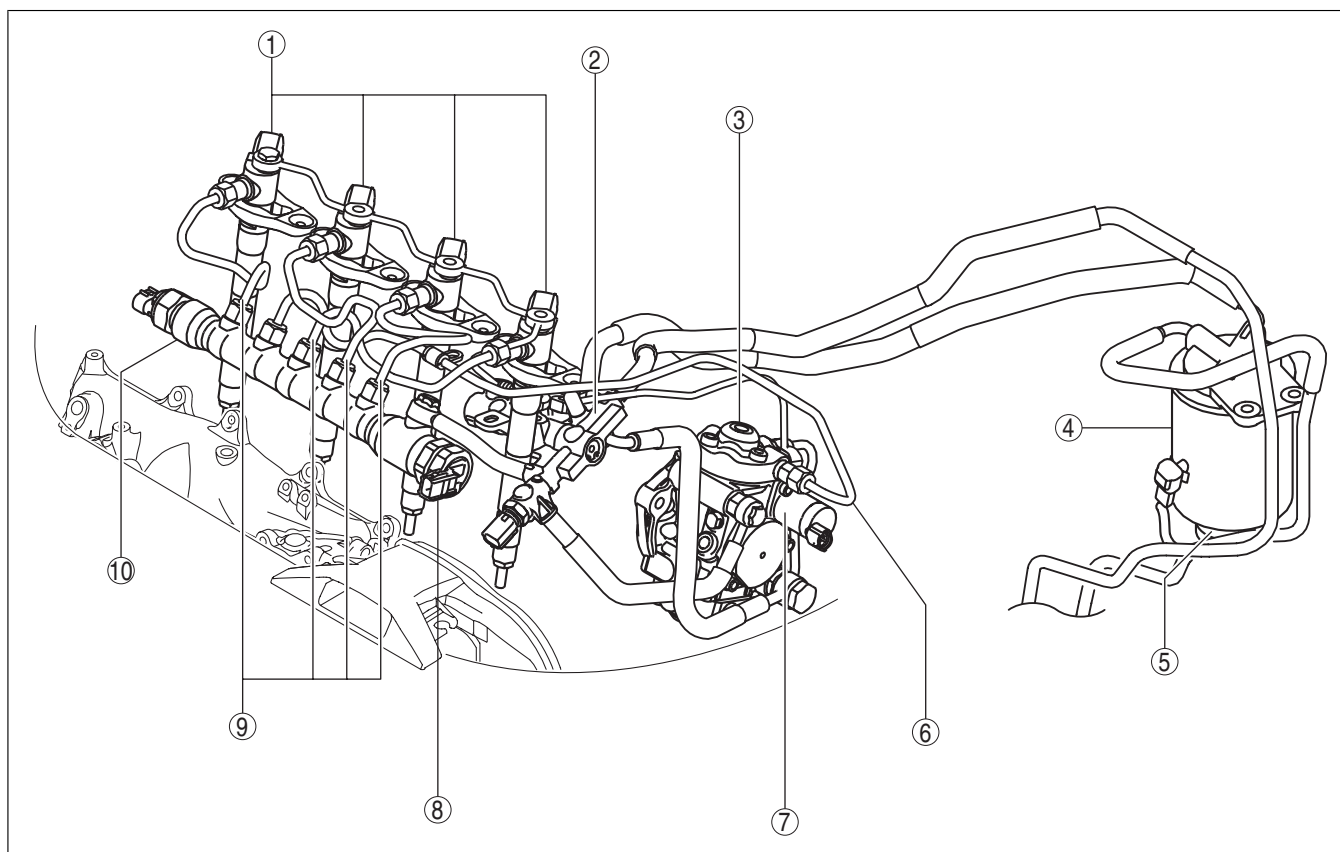


ac5wzw00004736

1	Fuel injector (See FUEL INJECTOR REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See FUEL INJECTOR INSPECTION [SKYACTIV-D 2.2].)
2	Lower case (See LOWER CASE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See FUEL CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See FUEL CHECK VALVE INSPECTION [SKYACTIV-D 2.2].) (See FUEL FEED VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See FUEL FEED VALVE INSPECTION [SKYACTIV-D 2.2].)
3	Supply pump (See SUPPLY PUMP REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See SUPPLY PUMP INSPECTION [SKYACTIV-D 2.2].)
4	Fuel filter (See FUEL FILTER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See FUEL FILTER INSPECTION [SKYACTIV-D 2.2].)
5	Sedimentor switch (See SEDIMENTOR SWITCH INSPECTION [SKYACTIV-D 2.2].)

6	Injection pipe (supply pump side) (See INJECTION PIPE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
7	Suction control valve (See SUCTION CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See SUCTION CONTROL VALVE INSPECTION [SKYACTIV-D 2.2].)
8	Fuel pressure relief valve (See FUEL PRESSURE RELIEF VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See FUEL PRESSURE RELIEF VALVE INSPECTION [SKYACTIV-D 2.2].)
9	Injection pipe (fuel injector side) (See INJECTION PIPE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
10	Common rail (See COMMON RAIL REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See COMMON RAIL INSPECTION [SKYACTIV-D 2.2].)
11	Fuel warmer (See FUEL FILTER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See FUEL WARMER INSPECTION [SKYACTIV-D 2.2].)

Fuel tank side


2WD

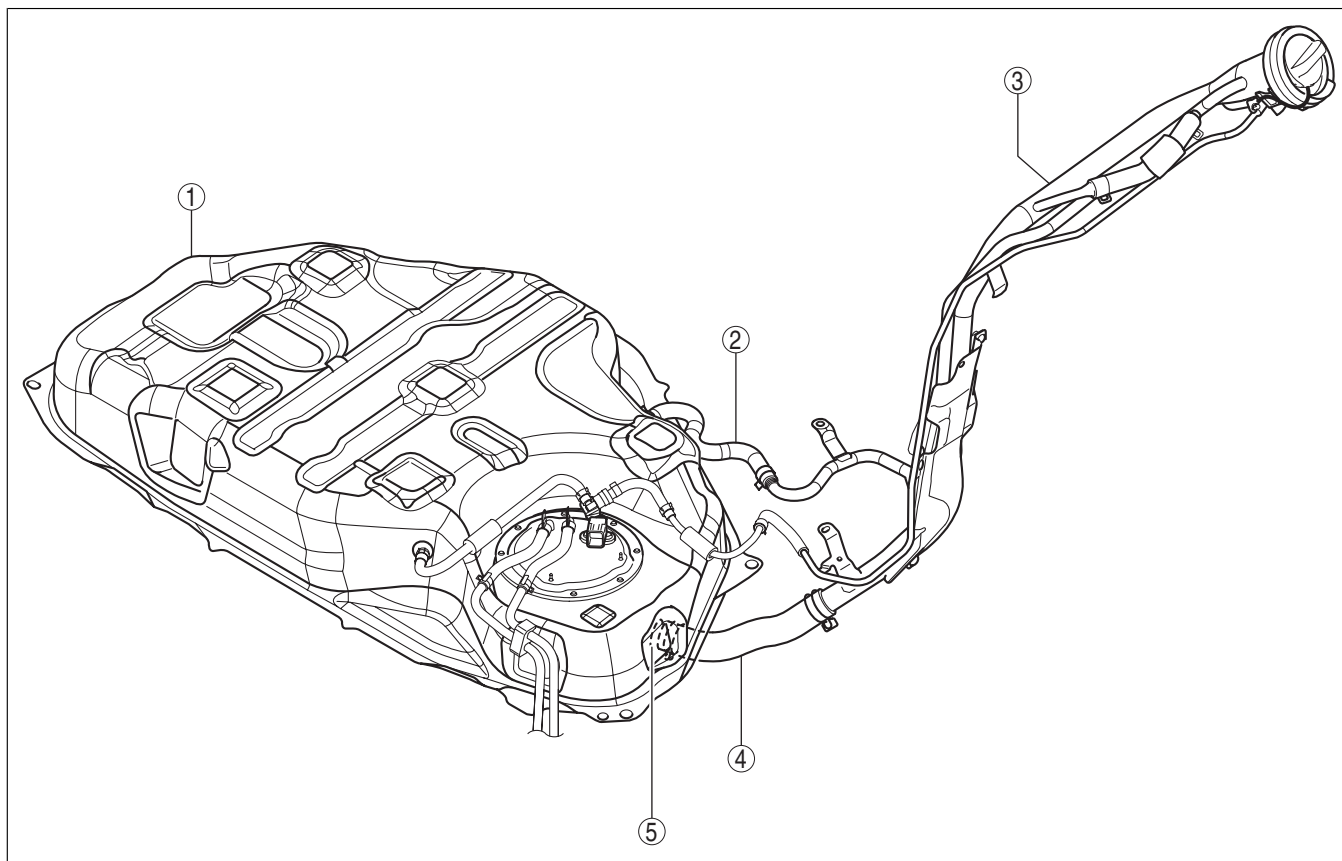

ac5jjw00003515

1	Fuel tank (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See FUEL TANK INSPECTION [SKYACTIV-D 2.2].)
2	Breather hose (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3	Fuel-filler pipe (See FUEL-FILLER PIPE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

4	Joint hose (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
5	Non-return valve (See NON-RETURN VALVE INSPECTION [SKYACTIV-D 2.2].)

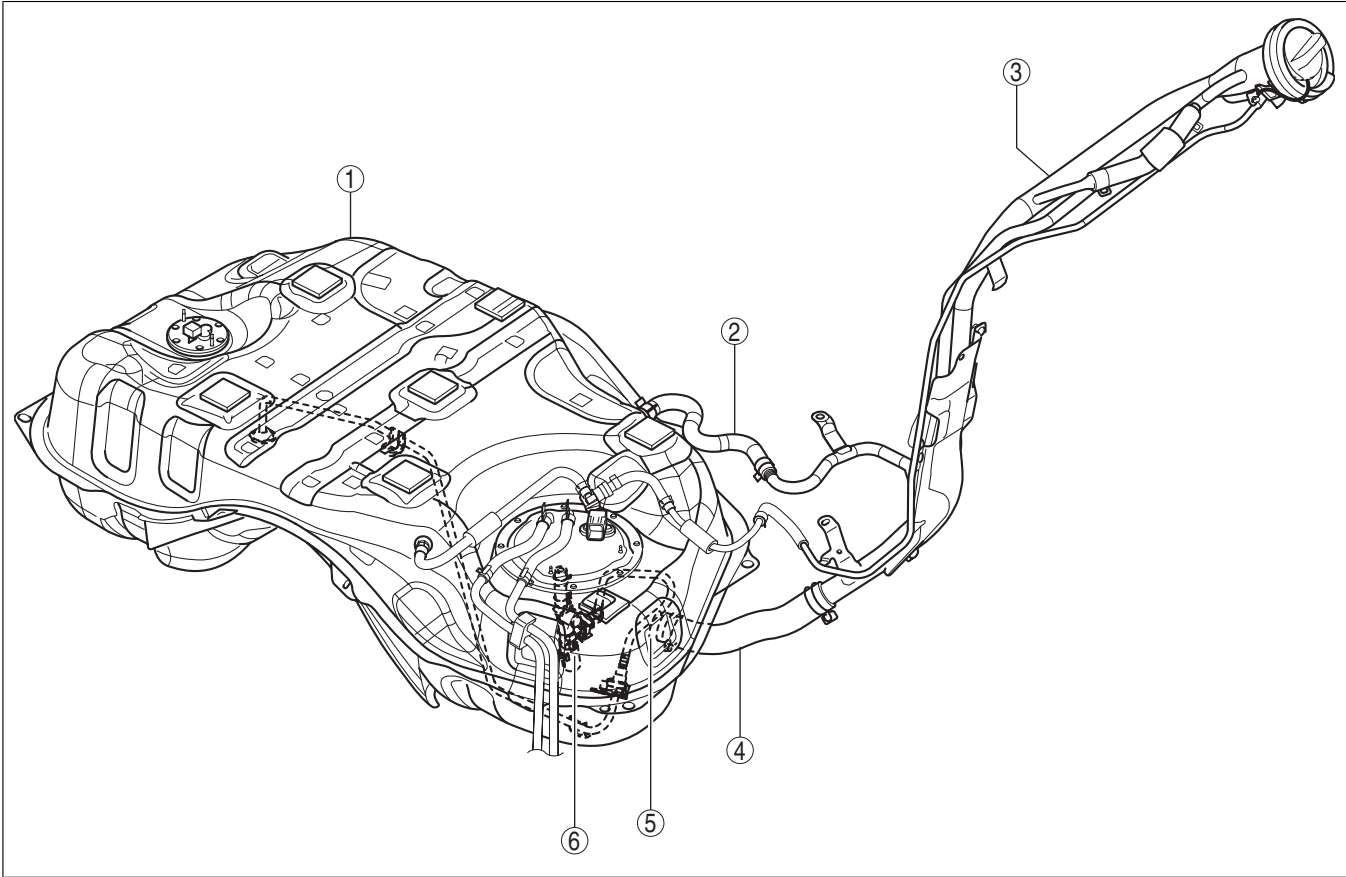

ac5jjw00005499

1	Fuel tank (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See FUEL TANK INSPECTION [SKYACTIV-D 2.2].)
2	Breather hose (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3	Fuel-filler pipe (See FUEL-FILLER PIPE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

4	Joint hose (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
5	Non-return valve (See NON-RETURN VALVE INSPECTION [SKYACTIV-D 2.2].)
6	Jet pump (See JET PUMP INSPECTION [SKYACTIV-D 2.2].)