


ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 2.2]

id0110s5804300

Caution


- If the rubber on only one side of the engine cover front is lifted up, it could damage the adapter at the location shown in the figure. When removing the engine cover, lift up the rubbers at the same time.

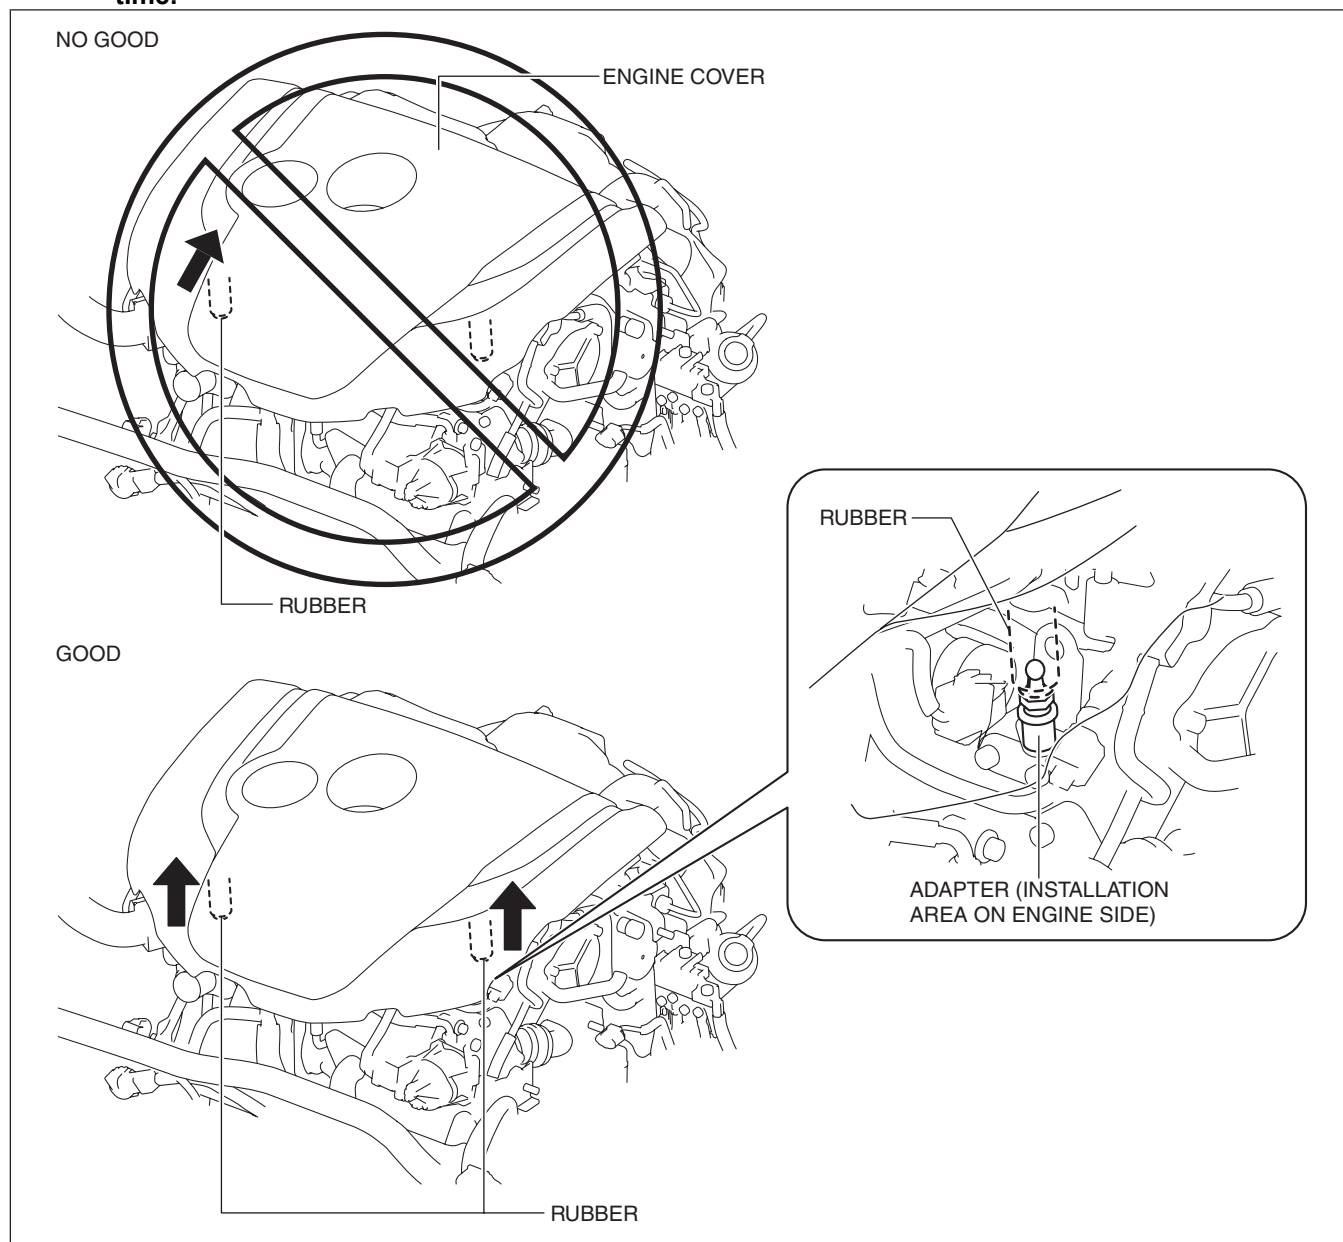

ac5wzw00005276


Removal

1. Pull up the front part of the engine cover at the same time and remove the rubber from the adapter on the engine side.

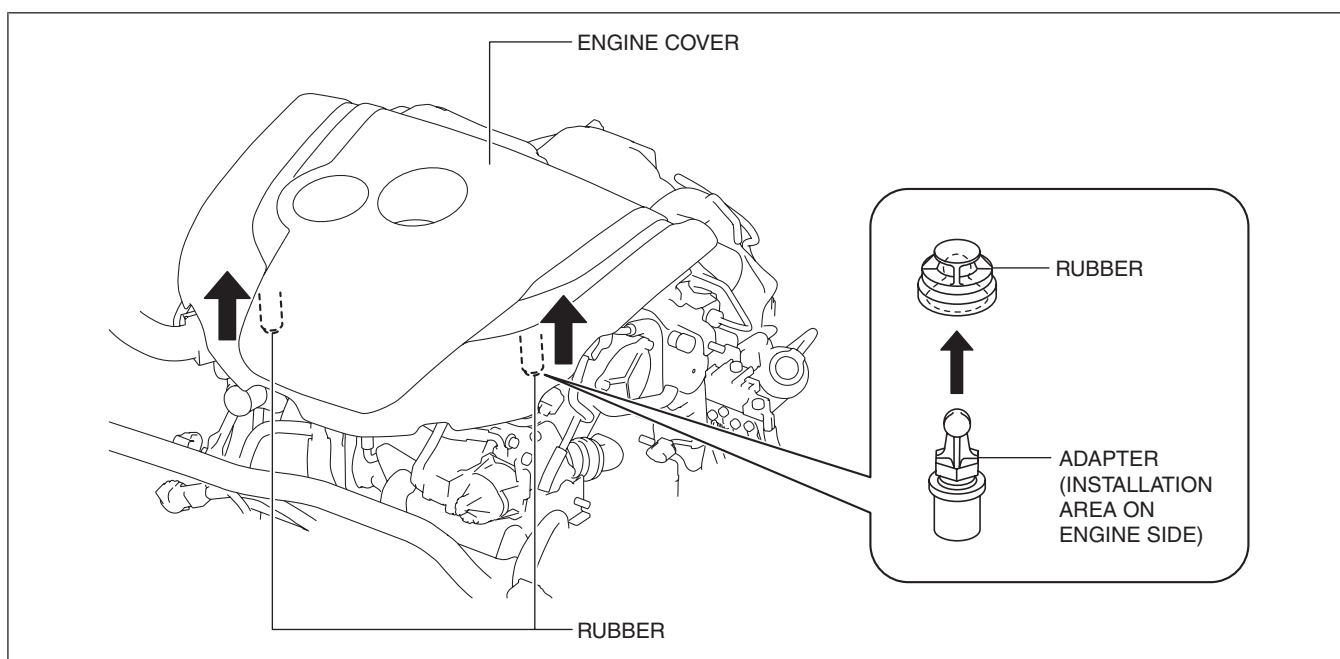

ac5wzw00005061


2. Pull up the engine cover in the order shown in the figure and remove the adapter from the rubber on the engine side.

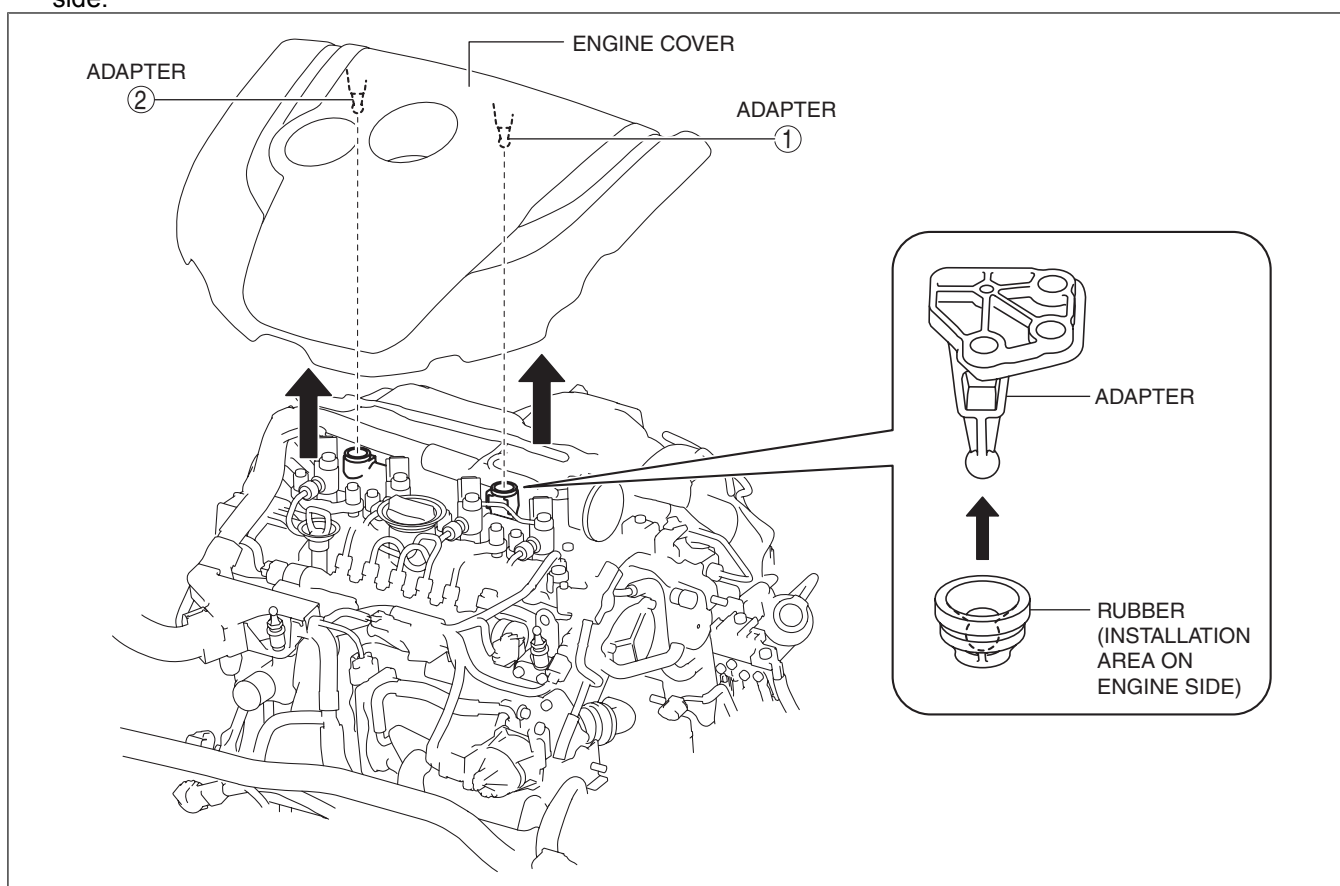

ac5wzw00005062


Installation

1. Press the engine cover in the order shown in the figure to insert the adapter to the rubber on the engine side.

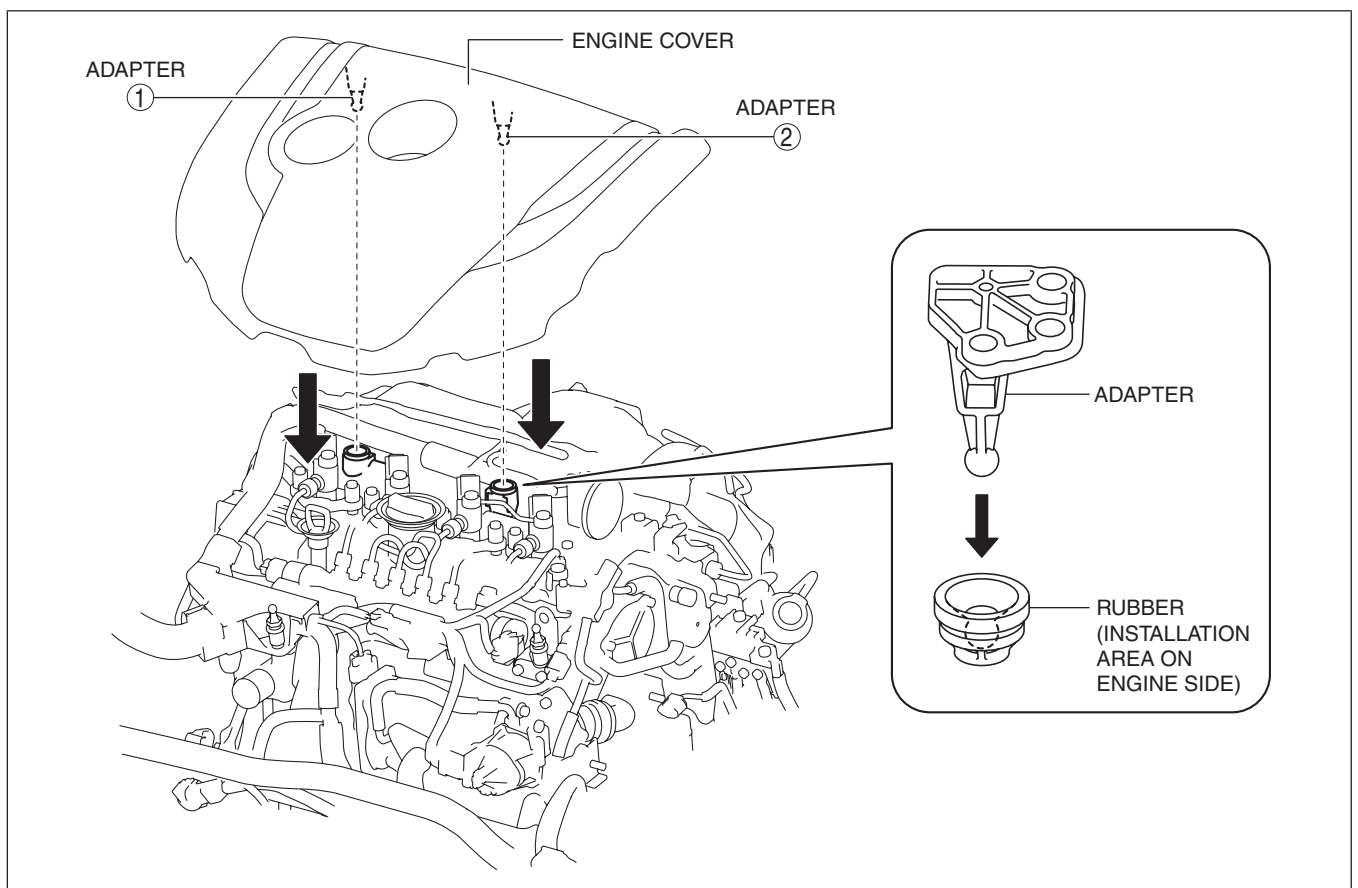

ac5wzw00005063

2. Press the front part of the engine cover at the same time to insert the rubber to the adapter on the engine side.

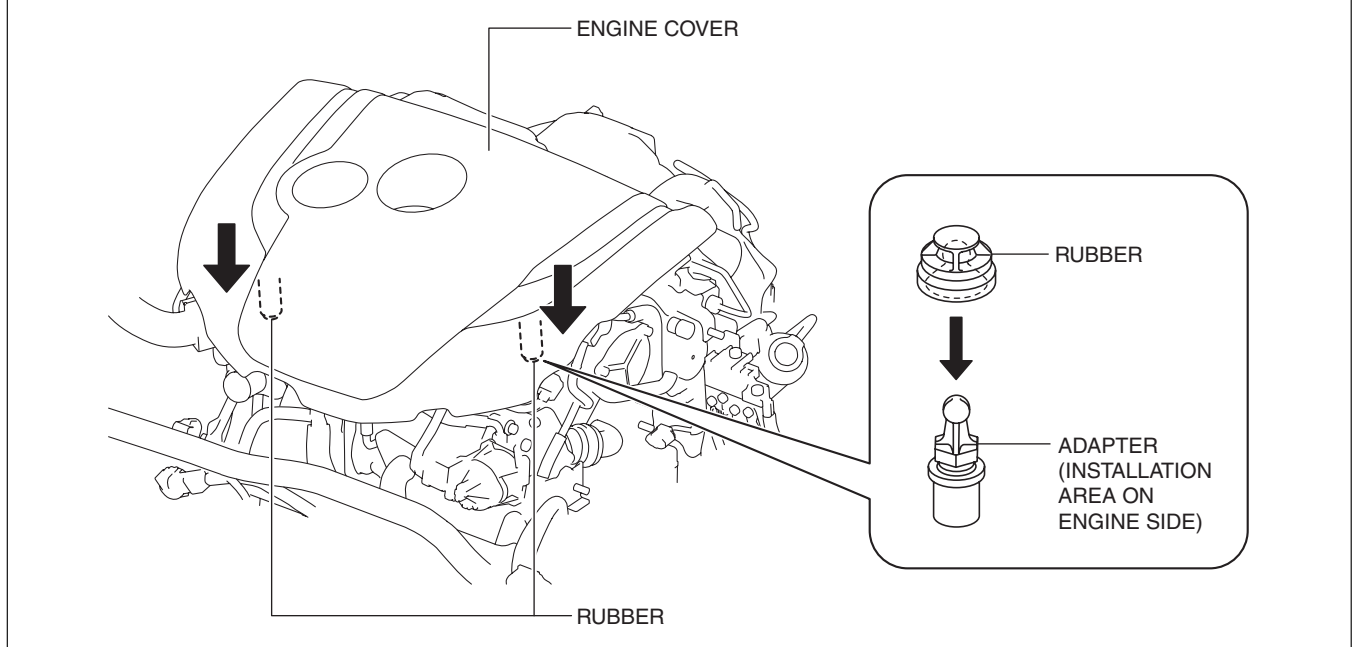

ac5wzw00005064