

CLUTCH STROKE SENSOR [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0140g2779000

Purpose/Function

- Detects how much the clutch pedal is depressed.

Construction

- Installed on the clutch pedal.
- A Hall element has been adopted as the detecting element for detecting the how much the clutch pedal is depressed.

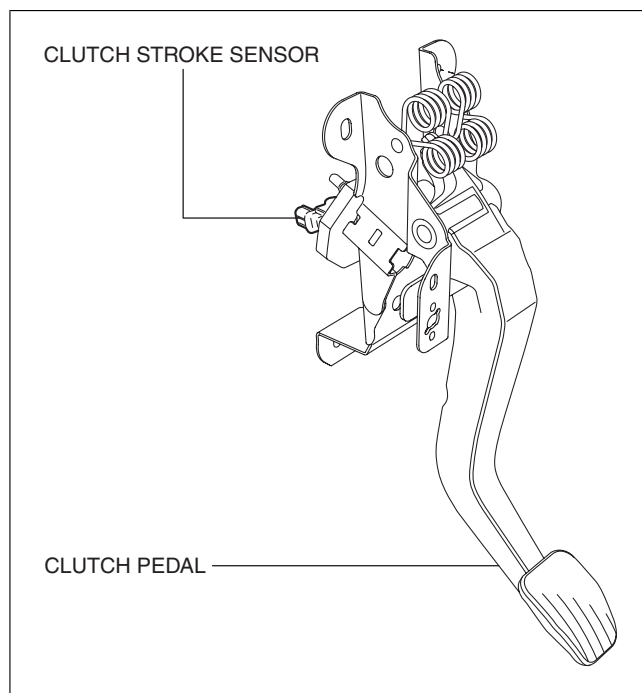


ac5wzn00002611

Operation

- The PCM energizes the coil installed in the sensor to create a magnetic field. Depressing the clutch pedal moves the permanent magnet next to the coil. The PCM detects the amount in which the clutch pedal is depressed by measuring the change in magnetic flux occurring when the permanent magnetic moves.

Clutch stroke sensor characteristic

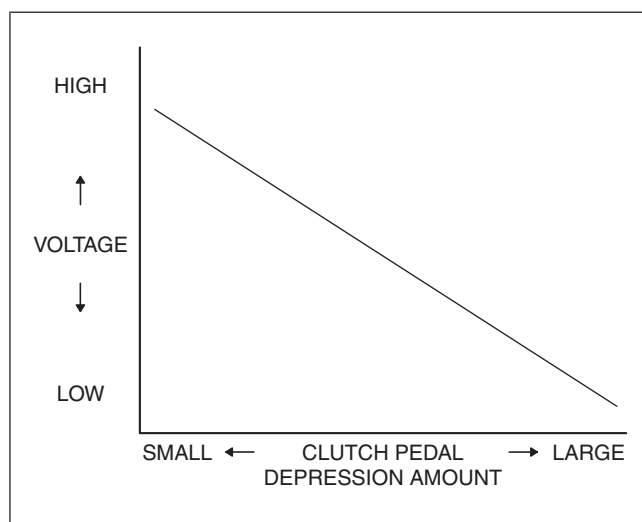

ac5wzn00000056

Fail-safe

DTC No.	Fail-safe function
P176E:00	• Flashes the i-stop warning light (amber) and inhibits engine-stop by operating the i-stop function.