

TORQUE CONVERTER CLUTCH (TCC) CONTROL SOLENOID [FW6A-EL, FW6AX-EL]


id0517h2361500

Purpose/Function

- The torque converter clutch (TCC) control solenoid adjusts the hydraulic pressure in the TCC control circuit based on the current demand from the TCM according to the vehicle conditions.

Construction

- The TCC control solenoid is installed to the solenoid control body.
- The TCC control solenoid is a normal closed-type linear solenoid.

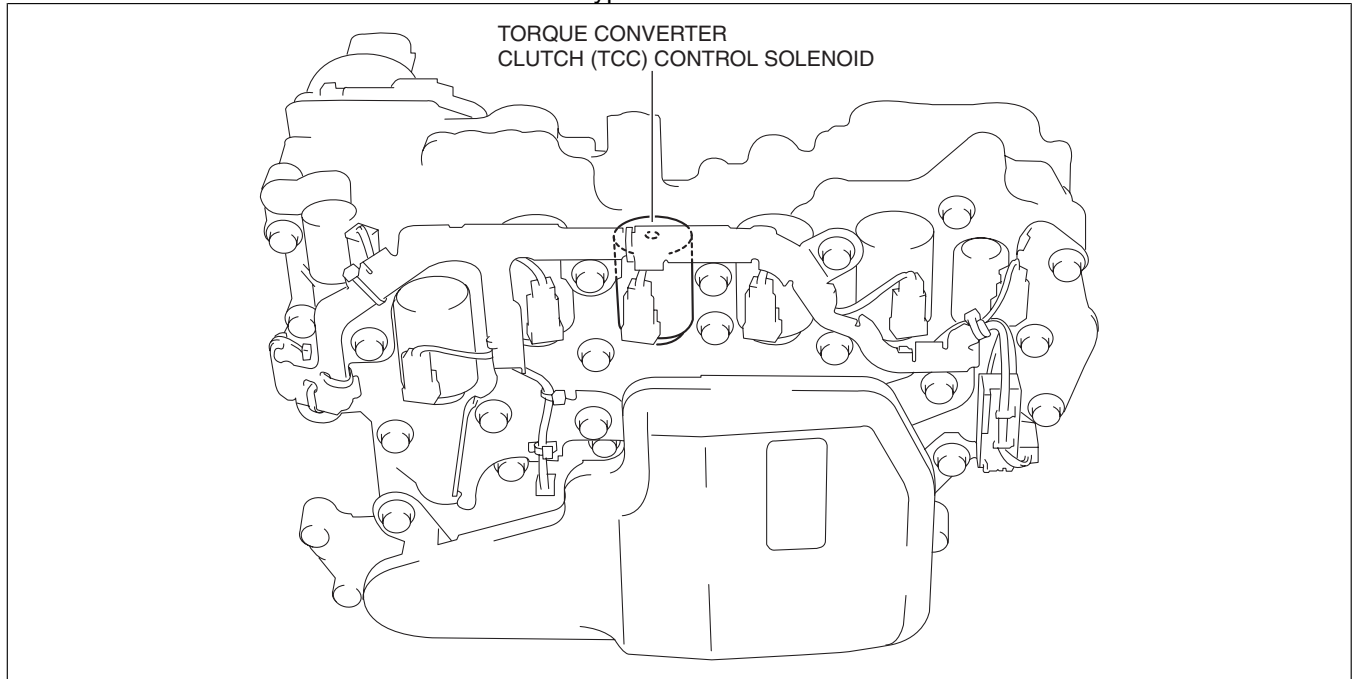

am3uun00002427

Operation

- Adjusts the TCC control clutch pressure by increasing/decreasing the energization current to the TCC control solenoid according to the signal from the TCM.