

## FRONT COMBINATION LIGHT REMOVAL/INSTALLATION

id091800800700


### Warning

- **Incorrect servicing of the discharge headlights could result in electrical shock. Before servicing the discharge headlights, always refer to the service warnings. (See DISCHARGE HEADLIGHT SERVICE WARNINGS.)**

### Note


- Fogging or condensation on the inside of the front combination lights may occur due to a natural phenomenon occurring as a result of a temperature difference between the interior and exterior of the combination lights. However, it has no effect on the light performance because the temperature inside the front combination lights rises after illuminating the headlights or a period of time has elapsed.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
3. Disconnect the connector.

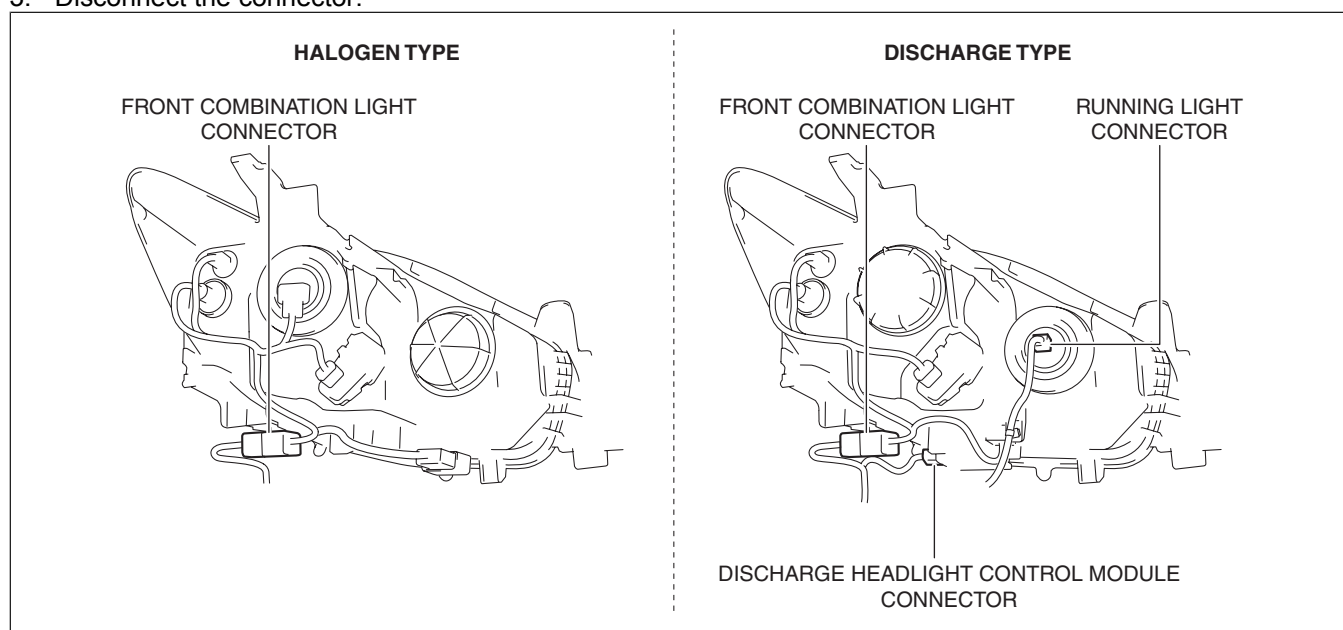

ac5wzw00000815

4. While pressing the clip tab in the direction of the arrows (1) shown in the figure, press the clip in the direction of the arrow (2) shown in the figure to detach the clip tab and front combination light (LH of discharge type).
5. Remove the clip (LH of discharge type).

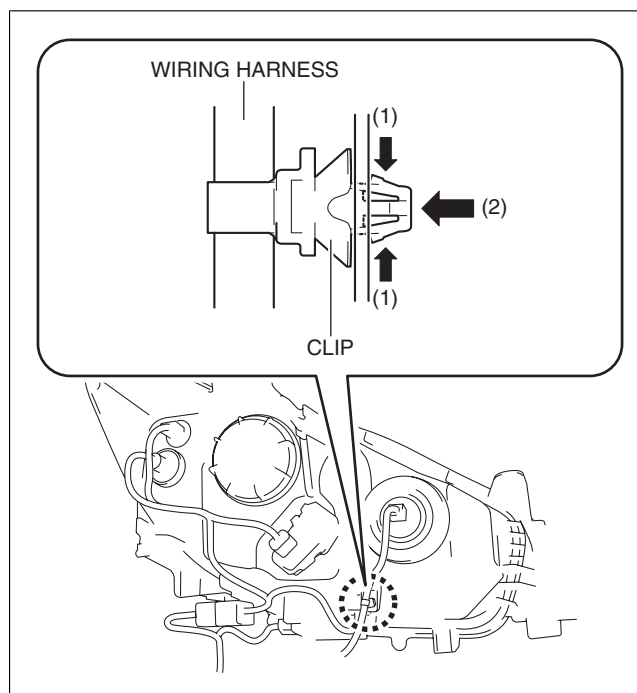


ac5wzw00000407

6. To prevent scratches or damage, affix protective tape to the position shown in the figure.


#### Caution

- When the front combination light is removed from the body, perform the procedure after affixing protective tape to the body. Otherwise, the body could interfere with the front combination light and cause scratching or damage to the body.

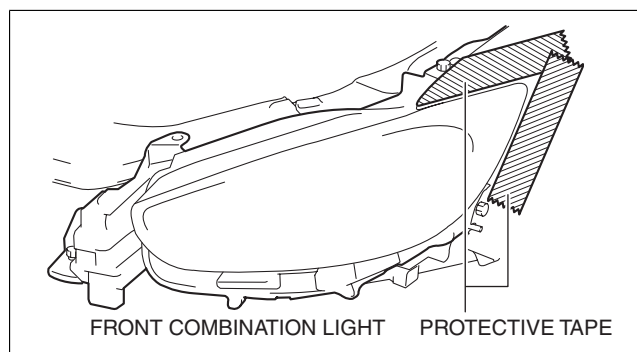


ac5wzw00000408

7. Remove the bolts.

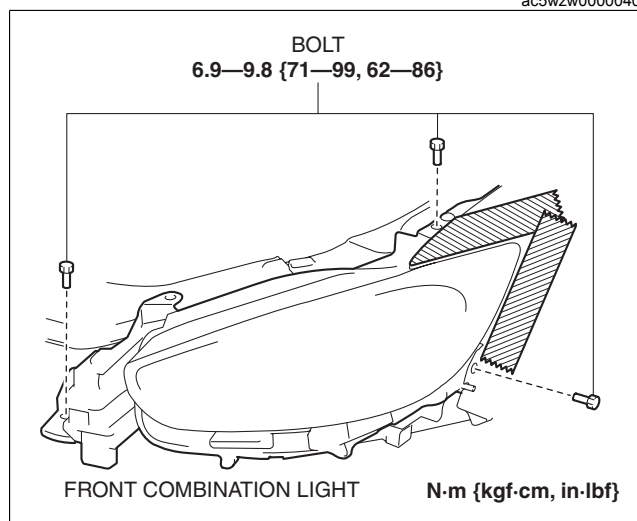


ac5wzw00000409

8. Remove the fastener.

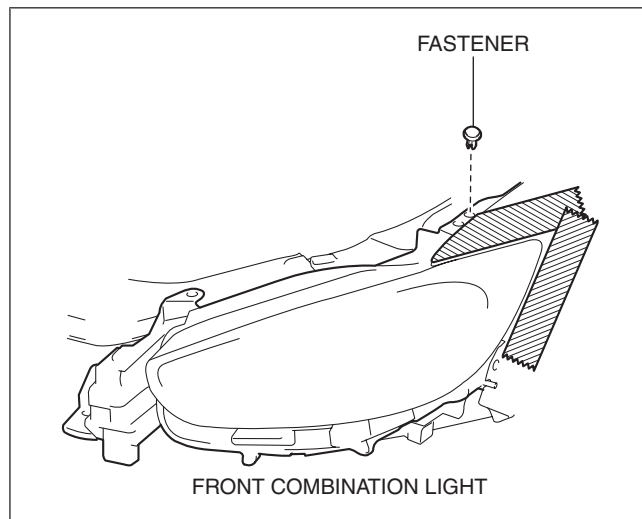

ac5wzw00000410

9. Pull the front combination light in the direction of the arrow shown in the figure and pull out the front combination light pin from the body.

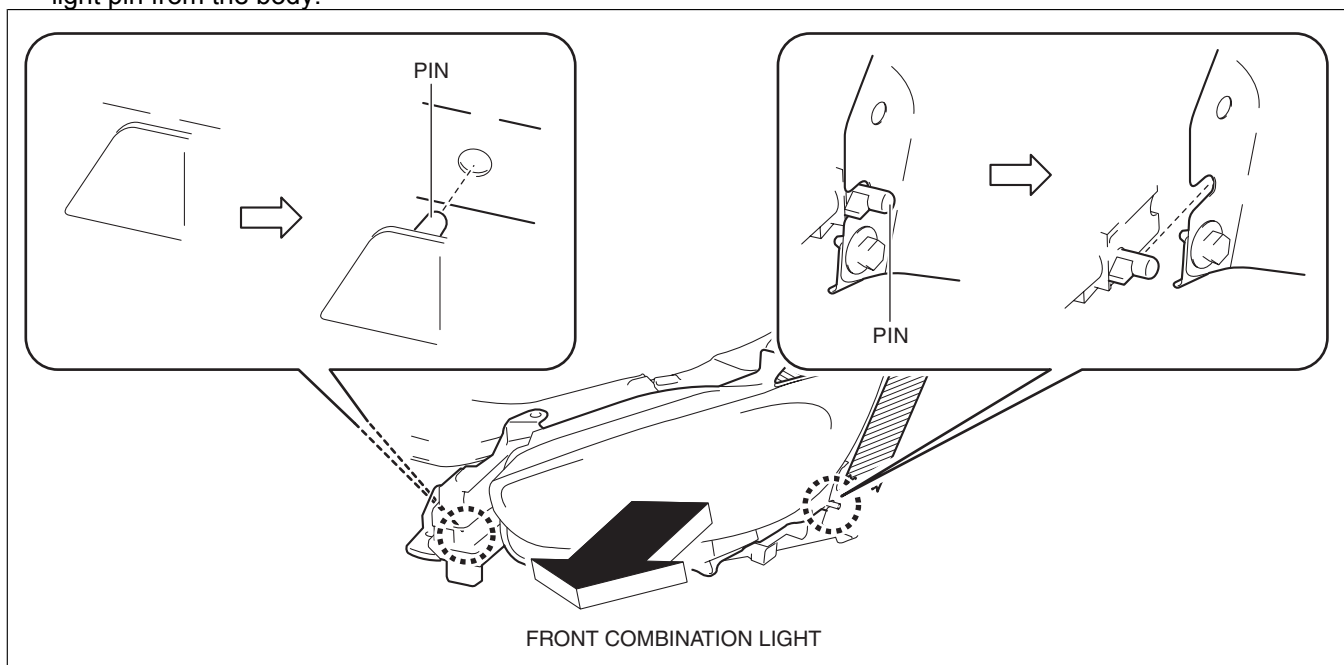

ac5wzw00003347

10. Remove the front combination light.  
11. Install in the reverse order of removal.  
12. Adjust the headlight aiming. (See HEADLIGHT AIMING.)