


REAR DOOR HINGE REMOVAL/INSTALLATION

id091100520800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Rear door (See REAR DOOR REMOVAL/INSTALLATION.)
 - (2) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (3) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (4) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
3. Remove in the order shown in the figure.

1	Bolt A
2	Nut B
3	Rear door hinge

4. Install in the reverse order of removal.

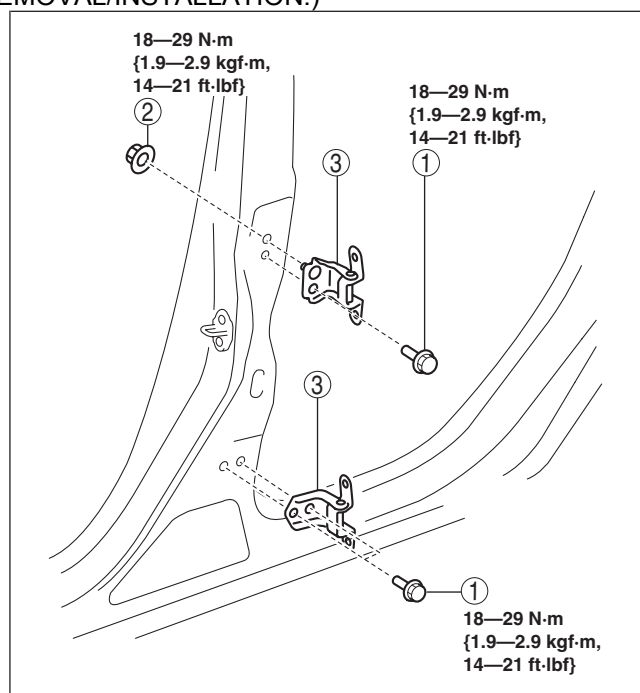

ac5uuw00000859