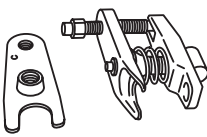
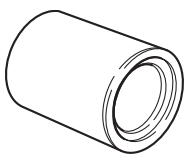
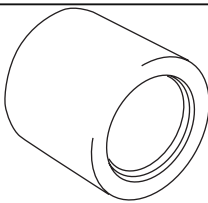
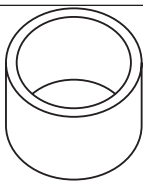


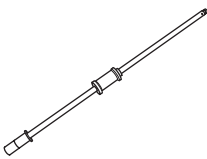
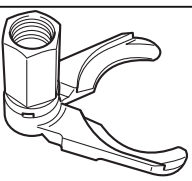
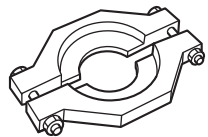
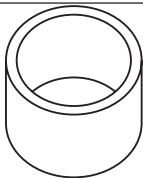

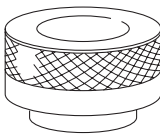
DRIVELINE/AXLE SST

id036000800200


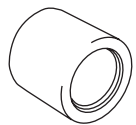
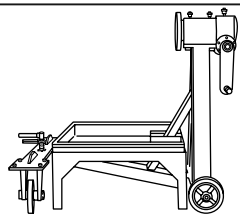
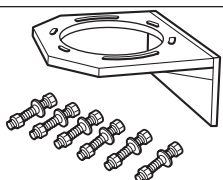
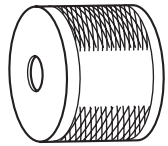

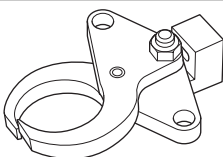
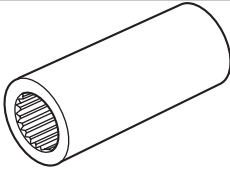
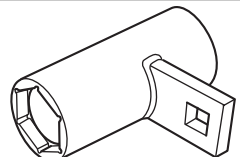
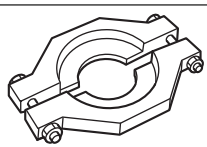
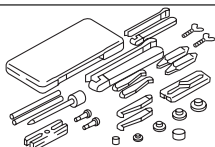
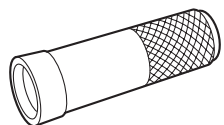

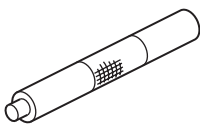
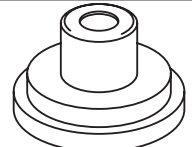
Front and Rear Axle

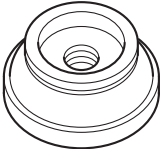

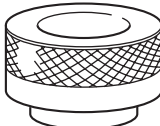
49 T028 3A0 Ball joint puller set 	49 T028 301 Dust boot installer 	49 U034 204 Dust boot installer 
49 W032 310 Support block 	—	—

Drive Shaft

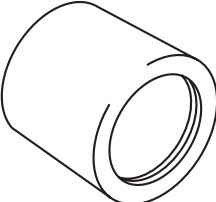
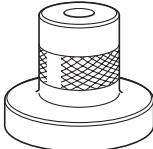
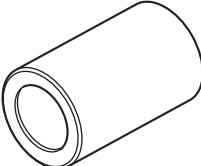
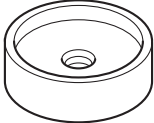
49 B025 017 Sliding hammer 	49 B025 010 Attachment A 	49 H027 002 Bearing remover 
49 W032 310 Support block 	49 T025 001 Boot clamp crimpers 	49 UB71 525 Bearing installer 

Differential

49 D028 203 Support block 	49 W034 201 Dust boot installer 	49 0107 680A Engine stand 
49 L027 0A2 Diff hanger set 	49 T032 317 Weight 	49 T032 316 Shaft 
49 L027 004 Gear case remover 	49 L027 006 Serrate socket 	49 L027 007 Hex socket 
49 H027 002 Bearing remover 	49 0839 425C Bearing puller set 	49 F401 331 Bearing installer body 
49 G030 338 Attachment E 	49 M005 797 Oil seal installer 	49 L025 002 Bearing installer 

49 F027 007 Attachment \varnothing 72 	49 B032 335A Oil seal installer 	49 V001 525 Bearing installer 
--	--	--

Transfer

49 T034 201A Dust boot installer 	49 V001 795 Oil seal installer 	49 F034 201 Dust boot installer 
49 F019 001 Oil seal installer 	—	—