


TRANSFER LOCATION INDEX [C66MX-R, D66MX-R]

id0316g5800100

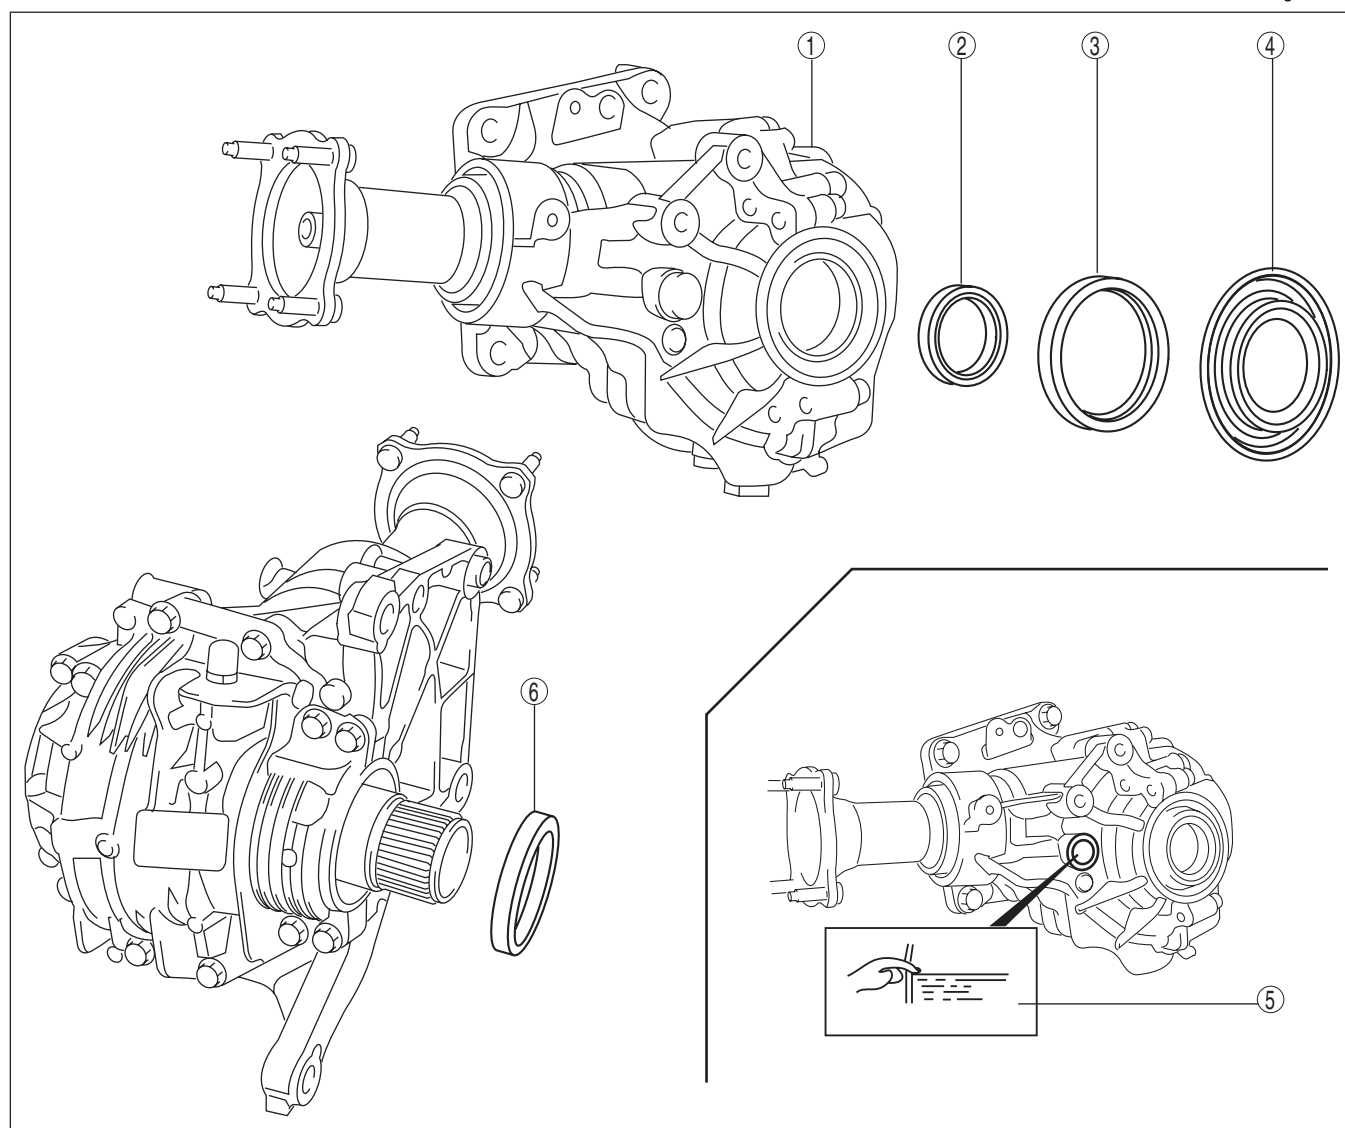

ac5uuw00000088

1	Transfer (See TRANSFER REMOVAL/INSTALLATION [C66MX-R].) (See TRANSFER REMOVAL/INSTALLATION [D66MX-R].)
2	Transfer oil seal (RH) No.3 (See TRANSFER OIL SEAL REPLACEMENT [C66MX-R, D66MX-R].)
3	Transfer oil seal (RH) No.2 (See TRANSFER OIL SEAL REPLACEMENT [C66MX-R, D66MX-R].)
4	Transfer oil seal (RH) No.1 (See TRANSFER OIL SEAL REPLACEMENT [C66MX-R, D66MX-R].)

5	Transfer oil (See TRANSFER OIL INSPECTION [C66MX-R, D66MX-R].) (See TRANSFER OIL REPLACEMENT [C66MX-R, D66MX-R].)
6	Transfer oil seal (LH) (See TRANSFER OIL SEAL REPLACEMENT [C66MX-R, D66MX-R].)