


## FRONT DOOR HINGE REMOVAL/INSTALLATION

id091100520500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Front bumper (See FRONT BUMPER REMOVAL/INSTALLATION.)
  - (2) Front combination light (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
  - (3) Front bumper slider (See BUMPER SLIDER REMOVAL/INSTALLATION.)
  - (4) Front over fender (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
  - (5) Front fender panel (See FRONT FENDER PANEL REMOVAL/INSTALLATION.)
  - (6) Front door (See FRONT DOOR REMOVAL/INSTALLATION.)
3. Remove in the order shown in the figure.

1	Bolt
2	Front door hinge

4. Install in the reverse order of removal.

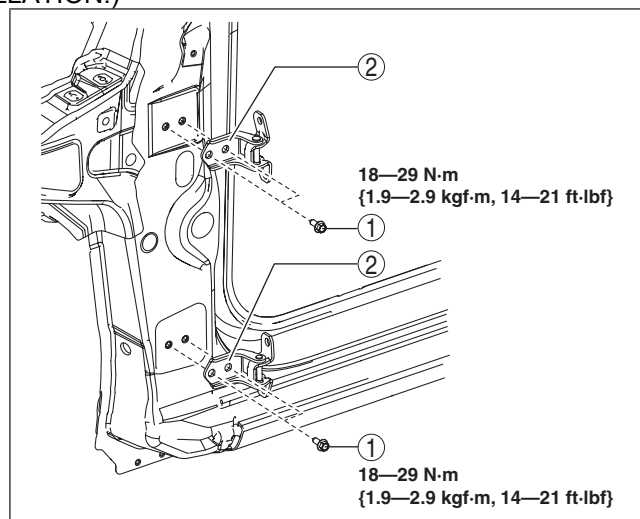

ac5uuw00000850