

FRESH-AIR DUCT [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0113z9675400

Purpose, Function

- Conducts fresh air from outside the engine compartment.
- Increases air density by taking fresh air, which is cooler than the engine compartment, to enhance the charging efficiency, ensuring the combustion stability.

Construction

- The fresh-air duct is installed to the air cleaner.

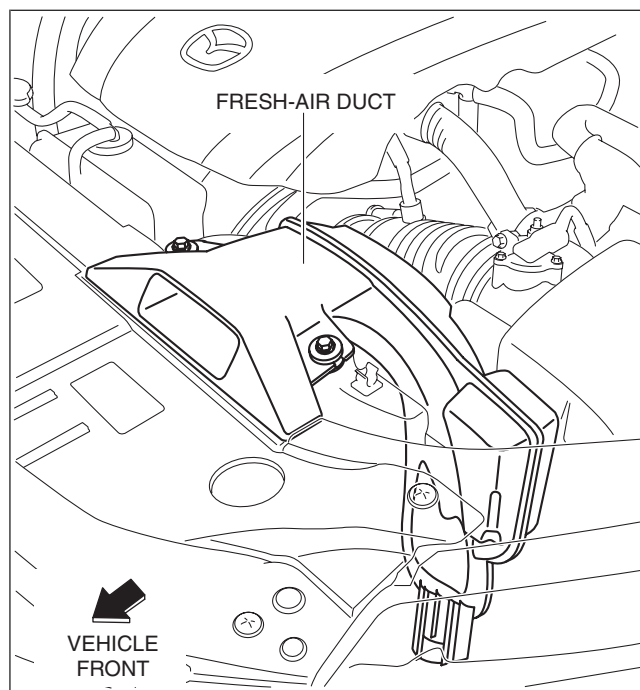

ac5uun00000034