

## OIL COOLER [SKYACTIV-D 2.2]


id0111s6101100

### Purpose, Function

- The oil cooler routes engine oil and engine coolant through the interior and disperses the engine oil heat using the engine coolant. As a result, the oil temperature is maintained properly to reduce the engine oil deterioration.


### Construction

- The oil cooler is installed on the left side surface of the cylinder block.

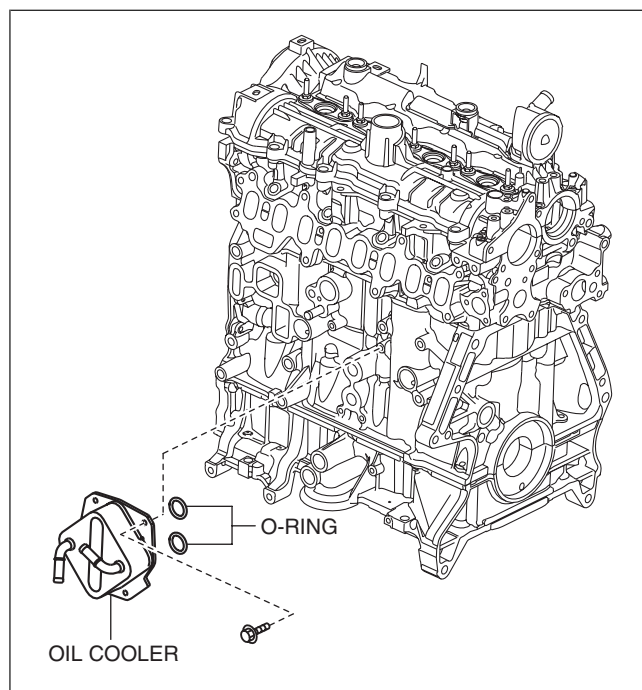

ac5wzn00001816

- A water-cooled, 8-layer-type oil cooler has been adopted.

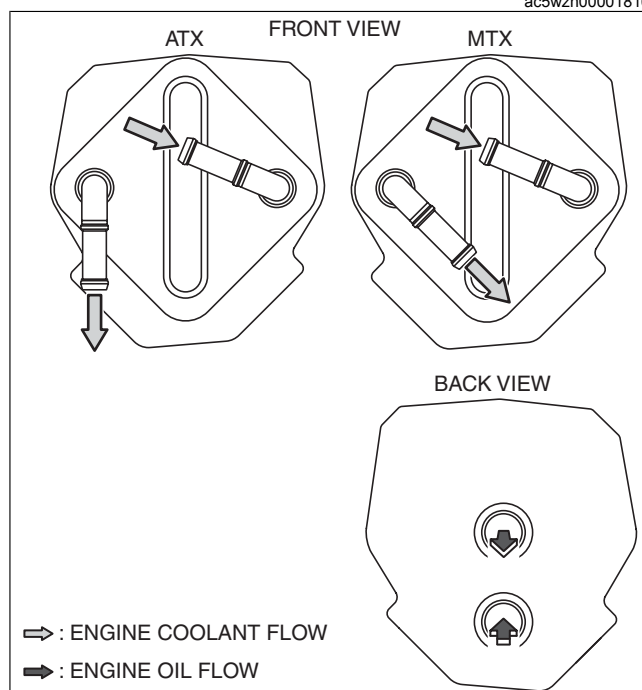

ac5wzn00002047