

## FUEL PRESSURE RELIEF VALVE INSPECTION [SKYACTIV-D 2.2]

id0114z7706400


### Resistance inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Disconnect the fuel pressure relief valve connector.
4. Inspect the resistance between fuel pressure relief valve terminals A and B.

### Fuel pressure relief valve resistance (specification)

**0.96—1.16 ohms [20 °C {68 °F}]**

- If not within the specification, replace the common rail. (See COMMON RAIL REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

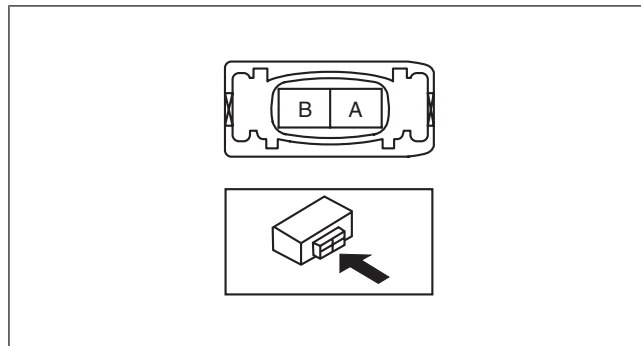

ac5jjw00003532